



### Taking out the spare tire

- 1 Lift up the hook of the luggage floor cover on the trunk floor.

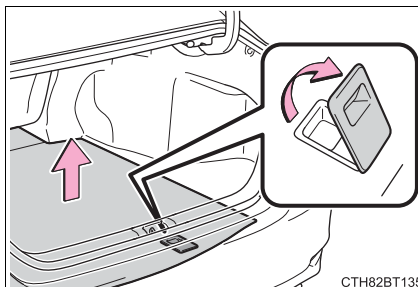


- 2 Secure the luggage floor cover using the hook provided.

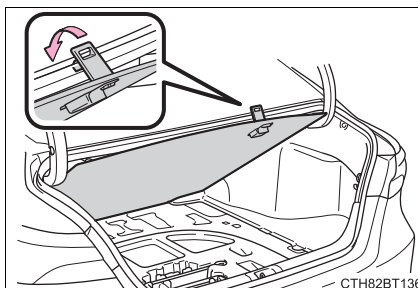

- 3 Remove the tool tray.

► 2WD models

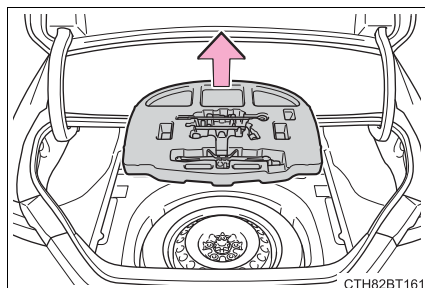

► AWD models

