


Heated steering wheel

Turns the heated steering wheel on/off

The indicator light comes on when the heated steering wheel is operating.

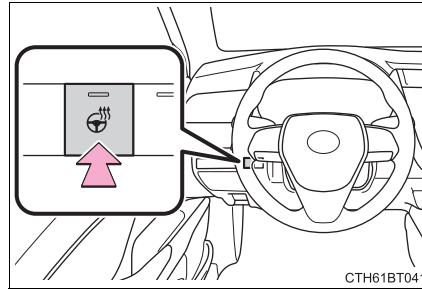

■ Operation condition

Vehicles without a smart key system:


The heated steering wheel can be used when the engine switch is in the “ON” position.

Vehicles with a smart key system:


The heated steering wheel can be used when the engine switch is in IGNITION ON mode.

Seat heaters

► Without seat ventilators

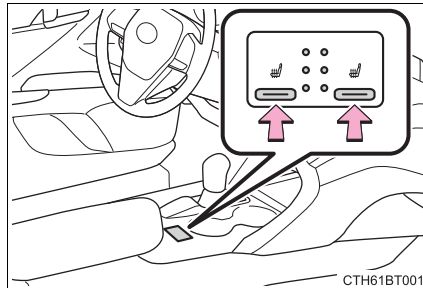

► With seat ventilators

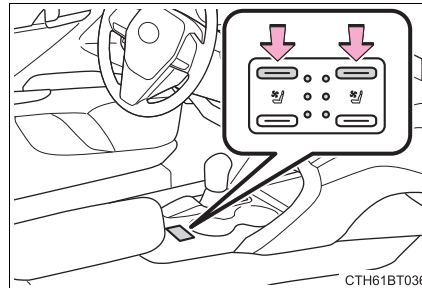

Each time the switch is pressed, the operation condition changes as follows.

Hi (3 segments lit) → Mid (2 segments lit) → Lo (1 segment lit) → Off

The level indicator (amber) lights up during operation.

■ Operation condition

Vehicles without a smart key system:

The seat heaters can be used when the engine switch is in the “ON” position.

Vehicles with a smart key system:

The seat heaters can be used when the engine switch is in IGNITION ON mode.