





## CAUTION

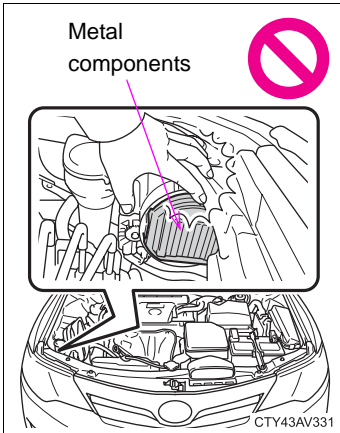

### Vehicles with discharge headlights:

While the low beam headlights are turned on, and for a short time after they have been turned off, metal components at the rear of the headlight assembly will be extremely hot. To prevent burns, do not touch these metal components until you are certain they have cooled down.

### Discharge headlights (if equipped)

-  Contact your Toyota dealer before replacing the discharge headlights (including light bulbs).
-  Do not touch the discharge headlight's high voltage socket when the headlights are turned on.  
 An extremely high voltage of 30000 V will be discharged and could result in serious injury or death by electric shock.
-  Do not attempt to take apart or repair the low beam discharge headlight bulbs, connectors, power supply circuits, or related components.  
 Doing so could result in electric shock and serious injury or death.

### To prevent damage or fire

Make sure bulbs are fully seated and locked.