


Air outlets


■ Location of air outlets

The air outlets and air volume change according to the selected airflow mode.

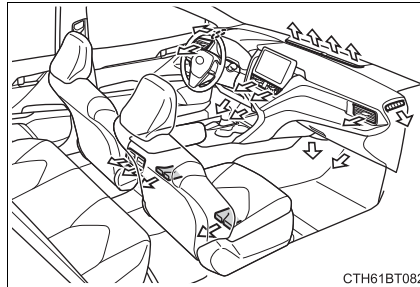


■ Adjusting the position of and opening and closing the air outlets

► Front

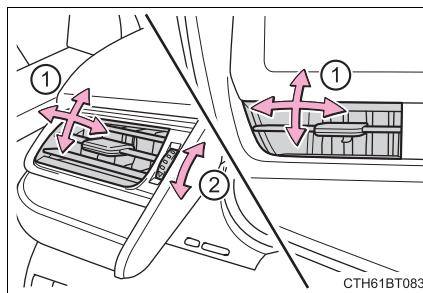

► Rear

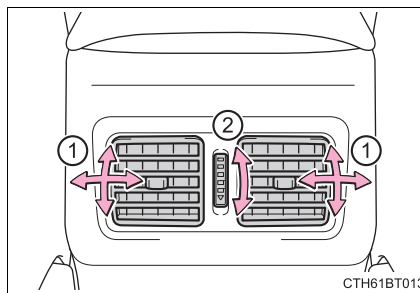

- ① Direct air flow to the left or right, up or down.
- ② Turn the knob to open or close the vent.