



**STEP 4** Remove the fuse.

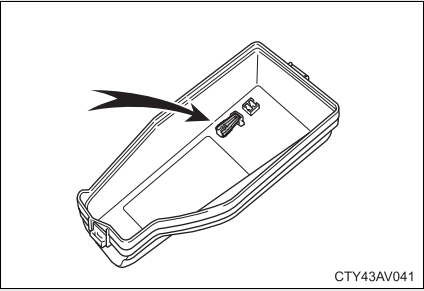

Only type A fuse can be removed using the pullout tool.

**STEP 5** Check if the fuse has blown.

**Type A**

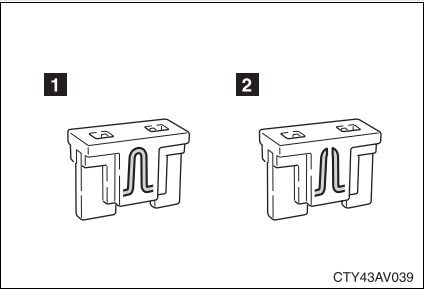


**1** Normal fuse

**2** Blown fuse

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

**Type B**

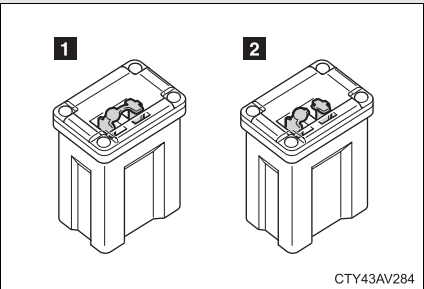

**1** Normal fuse

**2** Blown fuse

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.