



◆ Wireless remote control

- ▶ Vehicles without a smart key system

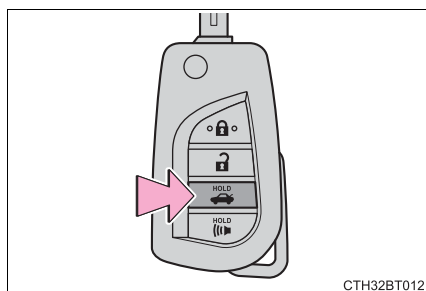

- ▶ Vehicles with a smart key system

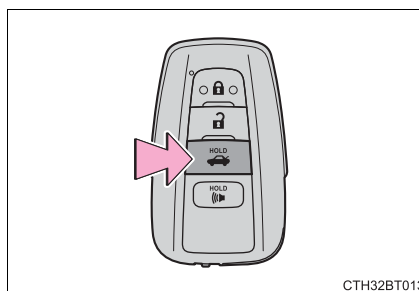


Press and hold the switch.

A buzzer sounds.

◆ Key

- ▶ Vehicles without a smart key system

Turn the key clockwise to release the trunk lid.

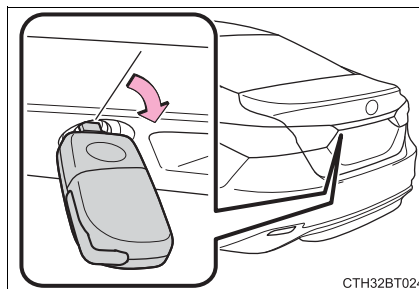

- ▶ Vehicles with a smart key system

The trunk can be also opened using the mechanical key. (→P. 560)