


Automatic transmission

Shifting the shift lever

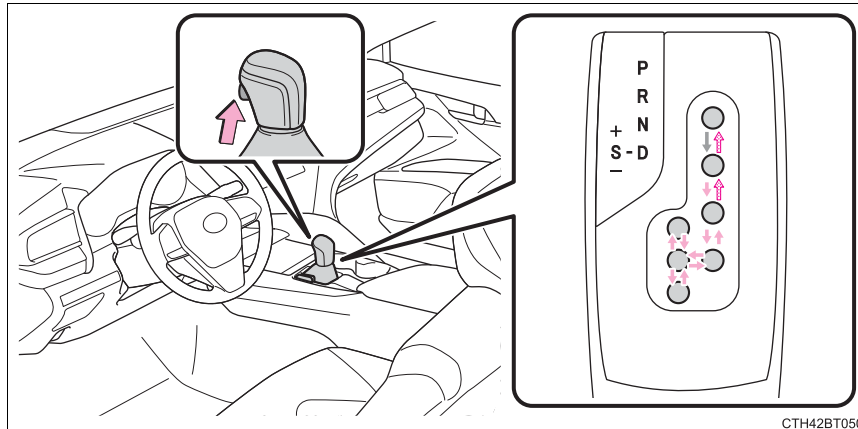

4

Driving



Vehicles without a smart key system:

While the engine switch is in the "ON" position and the brake pedal depressed*, shift the shift lever while pushing the shift release button on the shift knob.

Vehicles with a smart key system:

While the engine switch is in IGNITION ON mode and the brake pedal depressed*, shift the shift lever while pushing the shift release button on the shift knob.



Shift the shift lever while pushing the shift release button on the shift knob.



Shift the shift lever normally.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped and the brake pedal is depressed.

*: For the vehicle to be able to be shifted from P, the brake pedal must be depressed before the shift release button is pushed. If the shift release button is pushed first, the shift lock will not be released.