



## Taking out the spare tire

STEP 1

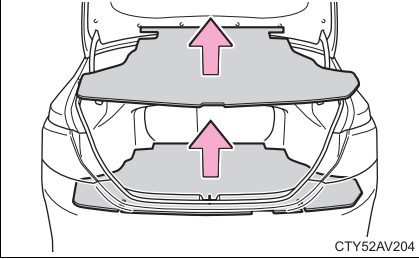


Remove the luggage floor cover and spare tire cover.

STEP 2

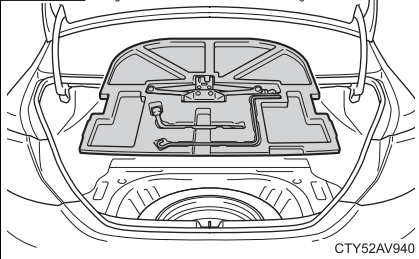

Remove the tool tray.

STEP 3

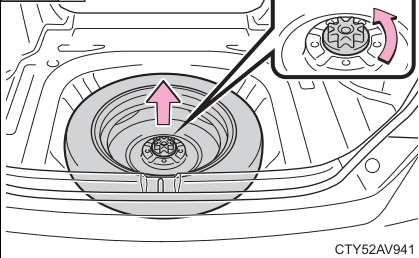

Loosen the center fastener that secures the spare tire.

When taking out or stowing the spare tire, make sure to firmly hold opposite ends of the tire.