

1-2. Opening, closing and locking the doors and trunk

Doors

The vehicle can be locked and unlocked using the entry function, wireless remote control, key or door lock switch.

■ Entry function (vehicles with a smart key system)

→P. 32


■ Wireless remote control (if equipped)

→P. 46

■ Key

Turning the key operates the doors as follows:

Vehicles without a smart key system

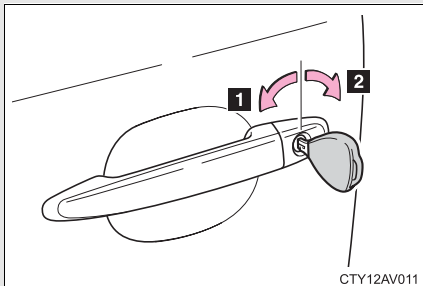

1 Locks all the doors


2 Unlocks all the doors

Driver's side only: Turning the key unlocks the driver's door. Turning the key again unlocks the other doors.

Vehicles with a smart key system

The doors can also be locked and unlocked with the mechanical key. (→P. 451)

■ Door lock switch

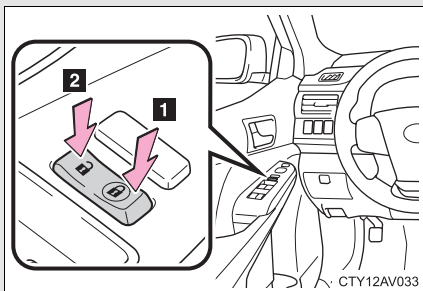

1 Locks all the doors

2 Unlocks all the doors