
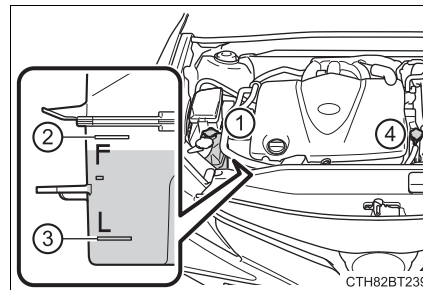


- 4 The coolant level is satisfactory if it is between the “F” and “L” lines on the reservoir.

- ① Reservoir
- ② “F” line
- ③ “L” line
- ④ Radiator cap

- 2.5 L 4-cylinder (A25A-FKS)    ► 3.5 L V6 (2GR-FKS) engine

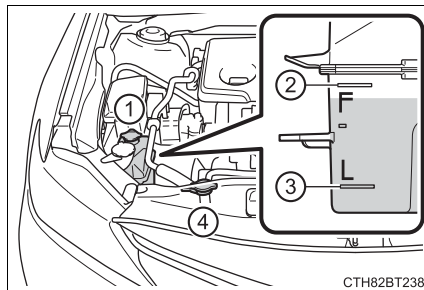

- 5 Add coolant if necessary.

Water can be used in an emergency if coolant is unavailable.

- 2.5 L 4-cylinder (A25A-FKS)    ► 3.5 L V6 (2GR-FKS) engine

