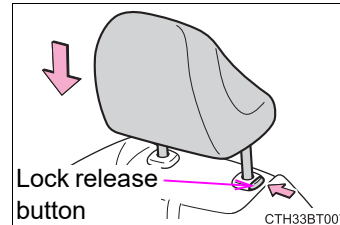


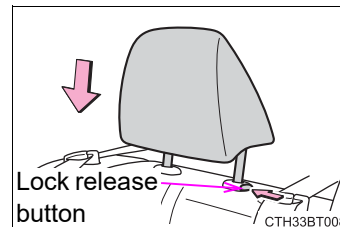
**■ Installing the head restraints****► Front seats**

Align the head restraint with the installation holes and push it down to the lock position.

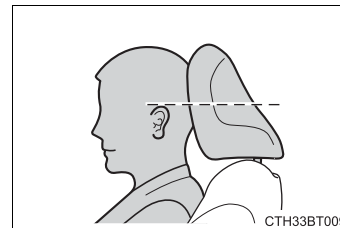
Press and hold the lock release button when lowering the head restraint.

**► Rear seats**

Align the head restraint with the installation holes and push it down to the lowest lock position while pressing the lock release button.

**■ Adjusting the height of the head restraints**

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

**⚠ WARNING****■ Head restraint precautions**

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.  
(However, if a head restraint interferes with installation of a child restraint system, the head restraint can be removed to accommodate the child restraint system: →P. 56)