


## Changing shift ranges in S mode


When the shift lever is in the S position, the shift lever or paddle shift switches can be operated as follows:

### Shift lever

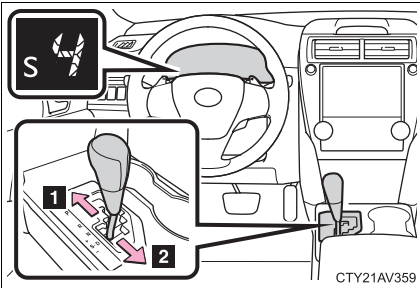

- 1 Upshifting
- 2 Downshifting

### Paddle shift switches

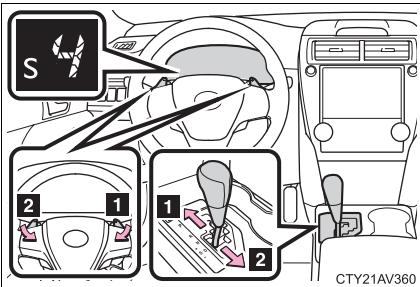

- 1 Upshifting
- 2 Downshifting

The initial shift range in S mode is set automatically to “5” or “4” according to vehicle speed. However, the initial shift range may be set to “3” if AI-SHIFT has operated while the shift lever was in the D position. (→P. 157)