



Adjusting the position of and opening and closing the air outlets

Front center outlets

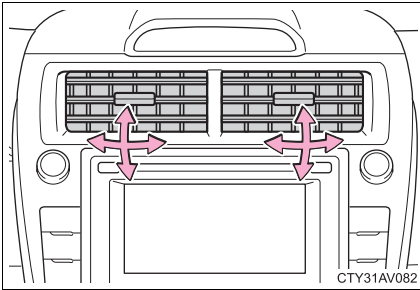


Direct air flow to the left or right, up or down.

Front side outlets

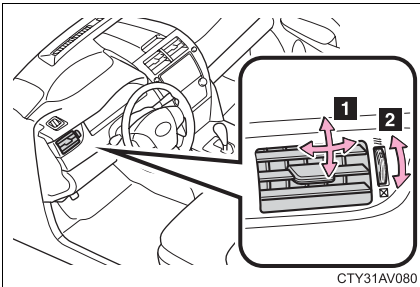

- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob to open or close the vent.

Rear outlets

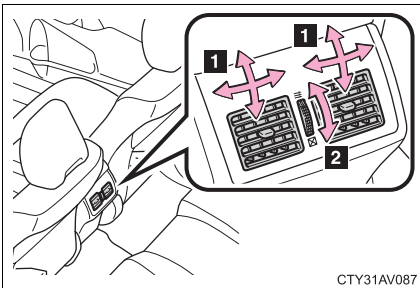

- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob to open or close the vent.