



Quick Start Guide UPDI-Programmer

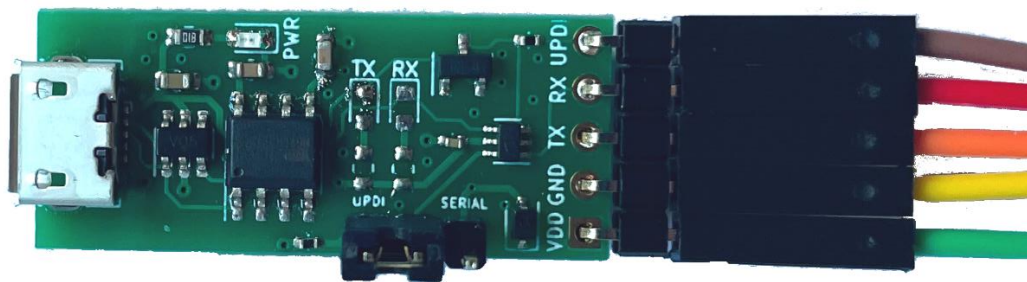
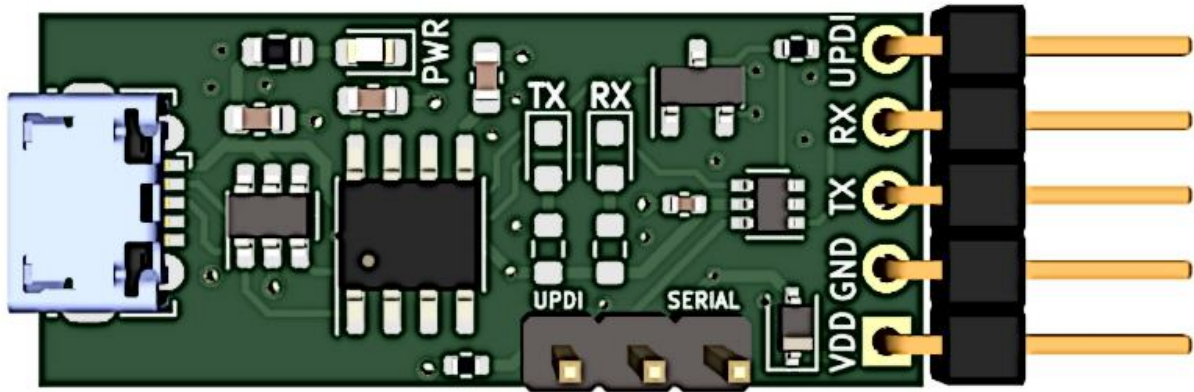


Table of Contents


Description.....	2
Header Configuration	2
UPDI-Programmer Pinout	2

Description

Overview

- UPDI Programmer and USB to UART-Converter
- Programming-Tool für UPDI programmable Microcontroller from Microchip (for example ATtiny, ATmega)
- Micro USB Typ B Connector
- 5V Logic (**Only compatible with 5V tolerant Microcontrollers**)
- Jumper for switching between UPDI-Programming and UART
- Solder Pin-Header
- Included 5 Pin Jumper Cable

Header Configuration

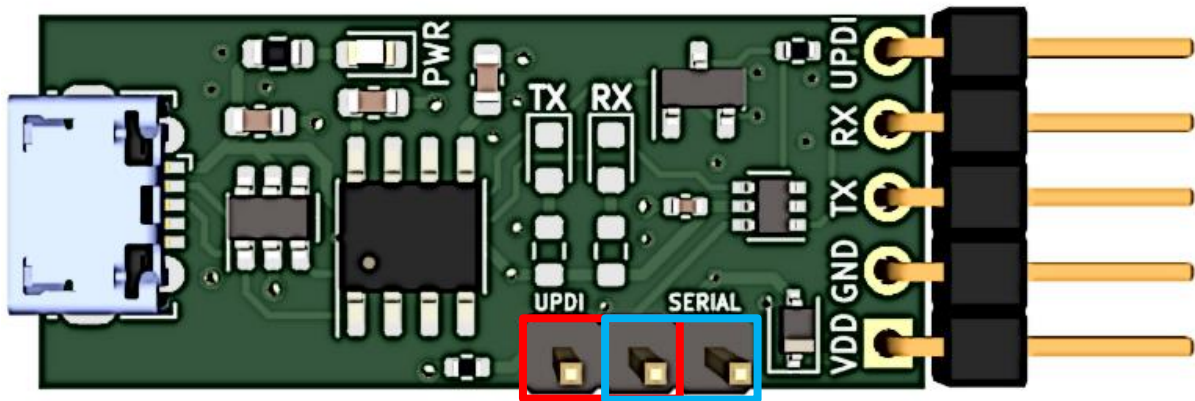

UPDI-Programming Mode - Serial Interface Mode

UPDI-Programmer Pinout

- POWER
- GND
- PROGRAMMING PIN
- PRIMARY FUNCTION

