

frequently asked questions

213 MHU PCB swap



Remove 213 Masthead unit from mast and move to a dry, clean area for the PCB replacement process.

It is recommended to remove the cups and vane to avoid damage, however this is not critical and can be avoided if care is taken.



Locate the gap between the upper and lower moldings and unscrew the upper molding (normal thread).

Tip: wrap an elastic band around the base of the upper housing (just below the rotating section) to aid grip.




Remove the upper housing, the PCB becomes visible.

Hold the PCB by the sides, trying to load the green board rather than any components.



Slide the PCB vertically out of the housing - take care as the PCB is still attached by the internal wiring.

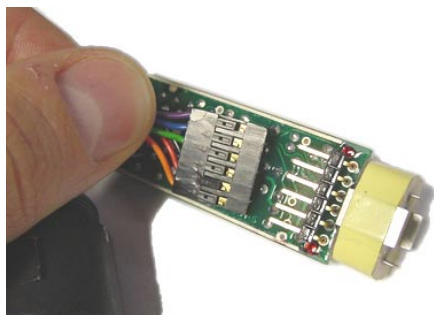

Remove the black connector from the PCB - this can be achieved by gently pulling all the coloured wires together (as shown).

To install the new PCB reverse the process above, ensuring that the connector is refitted with the orange lead to the left (as shown).

--ends--

B&G Customer Support
Premier Way
Abbey Park
ROMSEY
SO51 9DH
UK