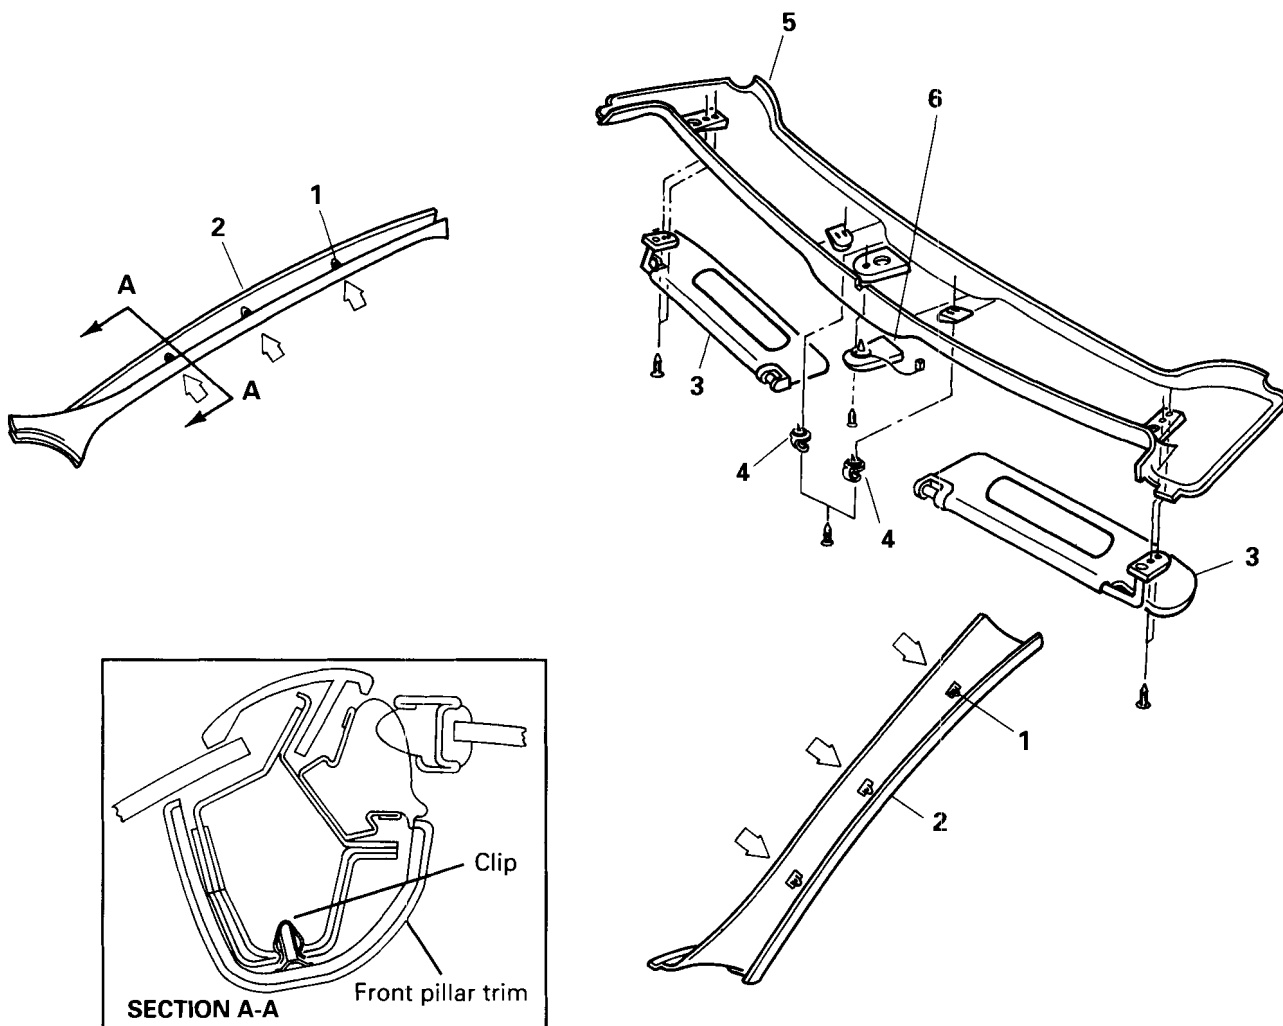


REMOVAL AND INSTALLATION

<Interior>


**Front pillar trim removal steps**

1. Clip
2. Front pillar trim

Header garnish removal steps

2. Front pillar trims
3. Sunvisor assemblies
4. Sunvisor holders
5. Header garnish
6. HomeLink™ Universal Transmitter

NOTE

(1)  : Location of metallic clip