

■ ■ **Choosing an AF-Area Mode**


In modes other than and , the following AF-area modes can be selected in live view:

Option	Description
<b>Face-priority AF</b>	The camera automatically detects and focuses on portrait subjects facing the camera. Use for portraits.
<b>Wide-area AF</b>	Use for hand-held shots of landscapes and other non-portrait subjects. Use the multi selector to select the focus point.
<b>Normal-area AF</b>	Use for pin-point focus on a selected spot in the frame. A tripod is recommended.
<b>Subject-tracking AF</b>	Track a selected subject as it moves through the frame.

- 1 **Place the cursor in the information display.**  
Press the button to place the cursor in the information display.



- 2 **Display AF-area modes.**  
Highlight the current AF-area mode in the information display and press .

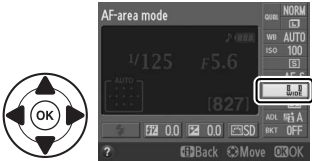

- 3 **Choose an AF-area mode.**  
Highlight an option and press . To return to live view, press .

