

Flash Mode

The flash modes available vary with shooting mode:

P, A		S, M	
	Fill flash		Fill flash
	Red-eye reduction		Red-eye reduction
	Slow sync + red-eye reduction		Rear-curtain sync
	Slow sync		
	Rear curtain + slow sync		


P, A		S, M	
	Auto		Auto + slow sync + red-eye reduction
	Auto + red-eye reduction		Auto + slow sync
	Off		Off

P, A		S, M	
	Auto		Auto + slow sync + red-eye reduction
	Auto + red-eye reduction		Auto + slow sync
	Off		Off

* SLOW appears in information display when setting is complete.

1 Place the cursor in the information display.

If shooting information is not displayed in the monitor, press the button. Press the button again to place the cursor in the information display.

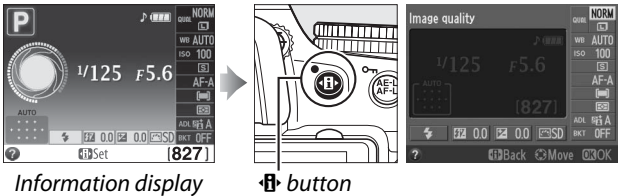

2 Display flash mode options.

Highlight the current flash mode in the information display and press .



3 Choose a flash mode.

Highlight a mode and press . To return to shooting mode, press the shutter-release button halfway.

