


1 Viewfinder eyepiece.....31	9 $\overline{\text{AE-L/AF-L}}$ (AE-L/AF-L) button 51	18 Power connector cover for optional power connector
2 Rubber eyecup31	ON (protect) button	optimal power connector
3 MENU (menu) button8	10 Command dial 23, 43, 55	19 Battery-chamber cover latch
Two-button reset button	11 \square (playback) button 26	20 Battery-chamber cover
4 Infrared receiver (rear).....30	12 Memory card slot cover 13	21 Q (thumbnail/playback zoom out) button..... 27
5 Monitor 5, 14	13 Multi selector8	? (help) button 8
Viewing settings6	14 OK (OK) button.....8	22 Battery latch 12, 15
Live view48	15 Q (playback zoom in) button..... 27	
Full-frame playback26	16 Memory card access lamp 13, 19, 44	
6 Tripod socket	17 trash (delete) button	
7 Diopter adjustment control15	Deleting pictures during playback..... 27	
8 info (information edit) button6		
Two-button reset button		

The Power Switch

Rotate the power switch as shown to turn the camera on.

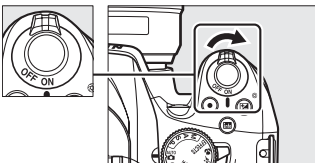

Rotate the power switch as shown to turn the camera off.

