



5 Open the monitor.

Open the monitor as shown. *Do not use force.*

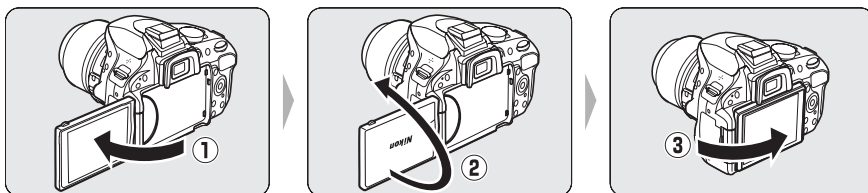

6 Choose a language and set the camera clock.


Turn the camera on. A language-selection dialog will be displayed; use the multi selector and **OK** button to select a language and set the camera clock.

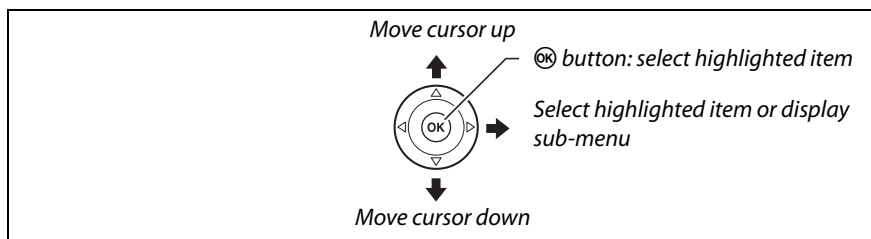


Select language



Select time zone

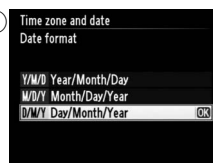

Select date format

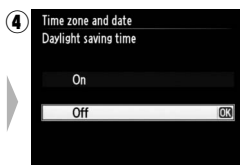

Select daylight saving time option



Set time and date

Note: The language and date/time can be changed at any time using the **Language** and **Time zone and date** options in the setup menu (11).

The Camera Clock

The camera clock is less accurate than most watches and household clocks. Check the clock regularly against more accurate time pieces and reset as necessary.