









■ Movie Settings

Choose movie quality and sound options.

- **Movie quality:** Choose from the following options. The frame rate depends on the option currently selected for **Video mode** in the setup menu (□ 11):

	Movie quality		Quality	Bit rate (high/normal quality)	Maximum length
	Frame size (pixels)	Frame rate			
 1080 60	1920 × 1080	30 fps ^{1, 2}	★ high/normal	18 Mbps/10 Mbps	20 min. ⁴
 1080 25		25 fps ^{2, 3}			
 1080 24		24 fps			
 720 60	1280 × 720	30 fps ¹		10 Mbps/6 Mbps	
 720 25		25 fps ³		8 Mbps/5 Mbps	
 720 24		24 fps			
 424 60	640 × 424	30 fps ¹		4 Mbps/2 Mbps	
 424 25		25 fps ³			

1 Available when NTSC is selected for **Video mode**.

2 Not output to televisions or other external displays during recording.


3 Available when PAL is selected for **Video mode**.

4 Movies recorded in miniature effect mode are up to 3 minutes long when played back.


- **Microphone:** Selecting **Microphone off** turns sound recording off; selecting any other option turns recording on and sets the built-in microphone or optional ME-1 stereo microphone (□ 67) to the selected sensitivity.

1 Select Movie settings.

Press the **MENU** button to display the menus.
Highlight **Movie settings** in the shooting menu and press ►.

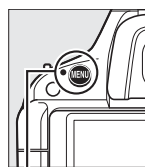

MENU button

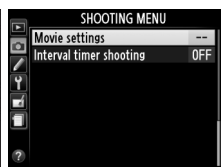

2 Choose movie options.

Highlight the desired item and press ►, then highlight an option and press **OK**.

