



## 6 Display options.

Press ► to display options for the selected menu item.

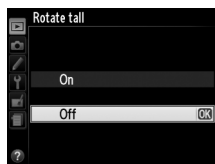

## 7 Highlight an option.

Press ▲ or ▼ to highlight an option.

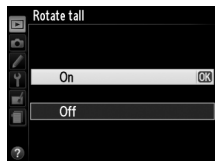

## 8 Select the highlighted item.

Press OK to select the highlighted item. To exit without making a selection, press the MENU button.



Note the following:

- Menu items that are displayed in gray are not currently available.
- While pressing ► generally has the same effect as pressing OK, there are some cases in which selection can only be made by pressing OK.
- To exit the menus and return to shooting mode, press the shutter-release button halfway (19).

### ■ ■ ► Playback Menu Options

Delete	Image review	Slide show
Playback folder	Rotate tall	DPOF print order
Playback display options		

### ■ ■ 📷 Shooting Menu Options

Reset shooting menu	Manage Picture Control	High ISO NR
Storage folder	Auto distortion control	ISO sensitivity settings
Image quality	Color space	Release mode
Image size	Active D-Lighting	Multiple exposure
White balance	HDR (high dynamic range)	Movie settings
Set Picture Control	Long exposure NR	Interval timer shooting