


Camera Menus

Most shooting, playback, and setup options can be accessed from the camera menus. To view the menus, press the **MENU** button.

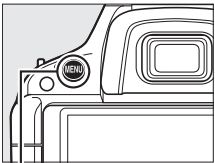


MENU button

Tabs

Choose from the following menus:

- : **Playback** (book 10)
- : **Shooting** (book 10)
- : **Custom Settings** (book 11)
- : **Setup** (book 11)
- : **Retouch** (book 11)
- : **Recent settings or My Menu** (book 11)

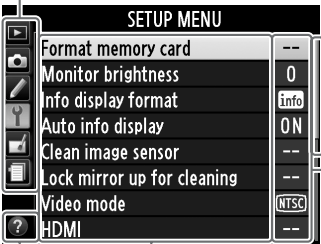

Slider shows position in current menu.


Current settings are shown by icons.

Menu options


Options in current menu.



If a icon is displayed at the bottom left corner of the monitor, help can be displayed by pressing the button. Press or to scroll through the display. Press again to return to the menus.

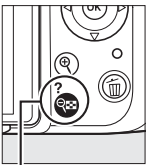

button

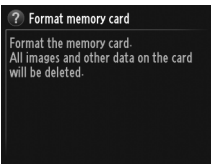

Using Camera Menus

The multi selector and button are used to navigate the camera menus.

