

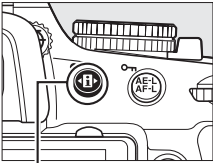


The Information Display

Camera settings can be viewed and adjusted in the information display. Press the **Fi** button once to view settings, and again to make changes to settings. Highlight items using the multi selector and press **OK** to view options for the highlighted item.

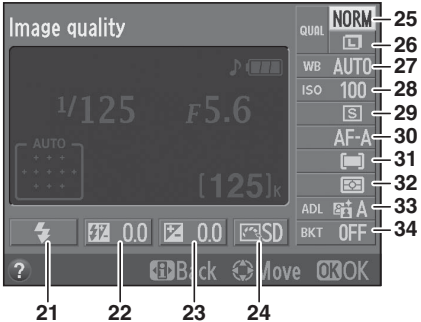

Fi button

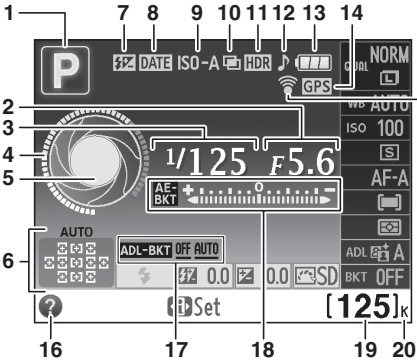

1 Shooting mode	11 HDR indicator	21 Flash mode 38
2 Aperture (f-number) 43	12 "Beep" indicator	22 Flash compensation
3 Shutter speed 43	13 Battery indicator 17	23 Exposure compensation
4 Shutter-speed display	14 GPS connection indicator	24 Picture Control
5 Aperture display	15 Eye-Fi connection indicator	25 Image quality 35
6 Auto-area AF indicator 34	16 Help icon.....72	26 Image size 36
3D-tracking indicator..... 34	17 ADL bracketing amount	27 White balance
Focus point	18 Exposure indicator	28 ISO sensitivity..... 40
7 Manual flash indicator	Exposure compensation	29 Release mode..... 28
Flash compensation indicator	indicator	30 Focus mode32, 45
for optional flash units	Bracketing progress indicator	31 AF-area mode34, 46
8 Print date indicator	19 Number of exposures	32 Metering
9 Auto ISO sensitivity indicator	remaining 17	33 Active D-Lighting
10 Multiple exposure indicator	White balance recording	34 Bracketing increment
	indicator	
	Capture mode indicator	
	20 "K" (appears when memory	
	remains for over 1,000	
	exposures)..... 17	