


RALID Parking Management Software User Manual


About

4.1.7.


6.7.

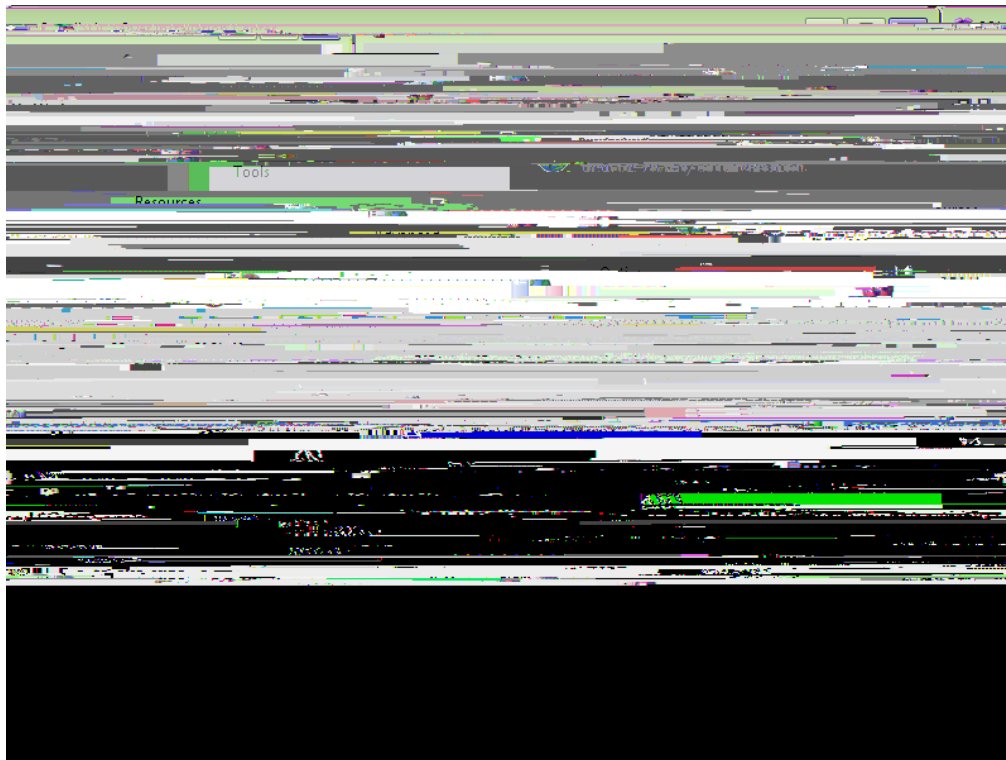


2. Select [Installation] on the left, the following interface. And select the first one on the right.





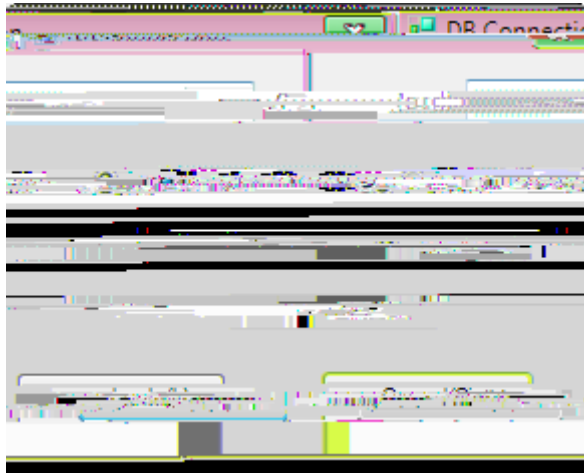



Choose **Login**. The following interface is displayed.




Click **Create new database**.



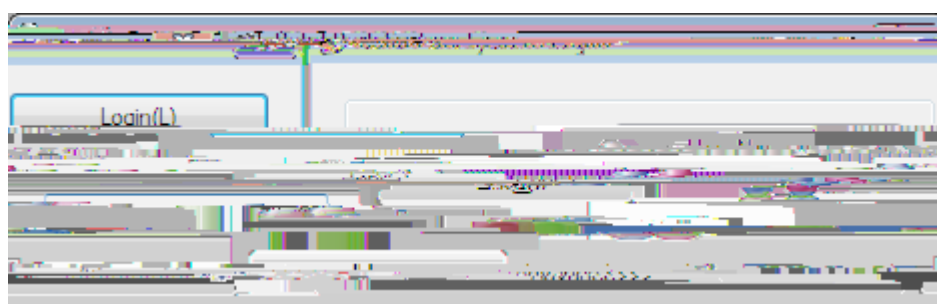







After inputting related information and charging amount, click **OK**.

4.1.3. Card Defer


On the card management interface, choose the monthly-paid card user and click **Card Defer**



Afer 7he card rfeasing is cfmpleted, click

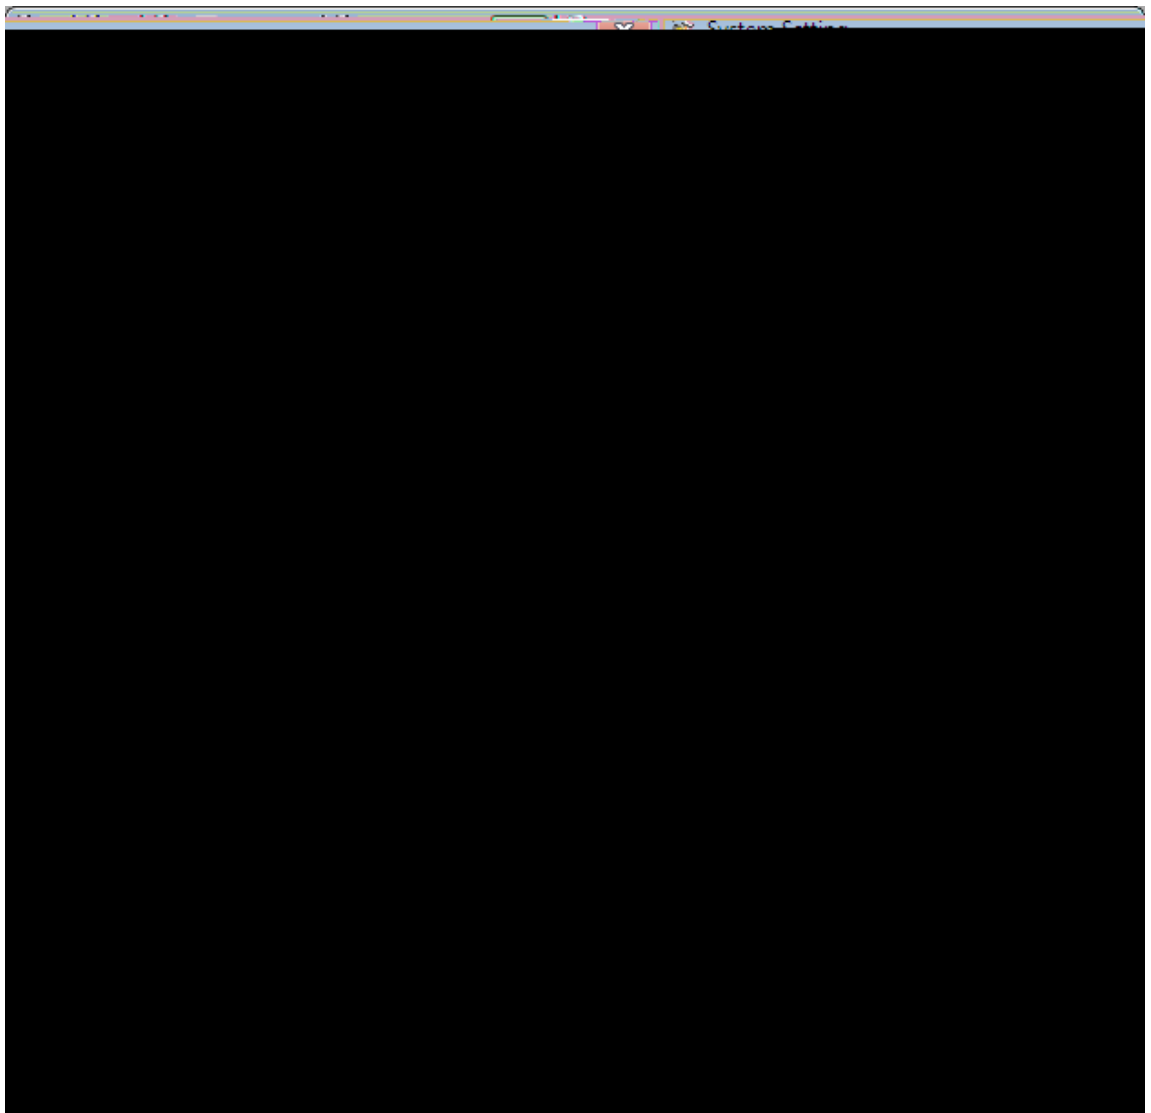


- 1) **CompanyName** input box: Any contents input here are displayed on the LED.
- 2) **Free Stay After Pay**





Device options:

- 3) **Permit MonthCard ReaptIn**: When this item is selected, a car using a monthly-paid card can repeat entering the park



The screenshot shows a software window titled 'Add'. It features a standard Windows-style title bar with a close button (X) and a green 'Add' button. The main area contains a 'Name:' label and an empty text input field. Below this is a table with three columns: 'Start', 'End', and 'Entrances'. The table is currently empty. At the bottom of the window are two buttons: 'OK (O)' and 'Close (C)'. The background of the window is dark gray.



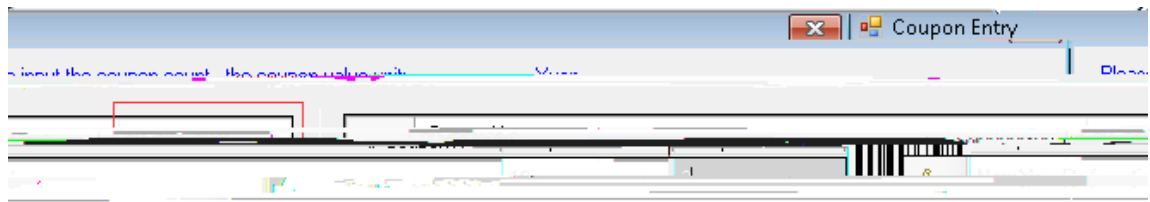



4.3.9



Right click Add

4.9.1 Export Options



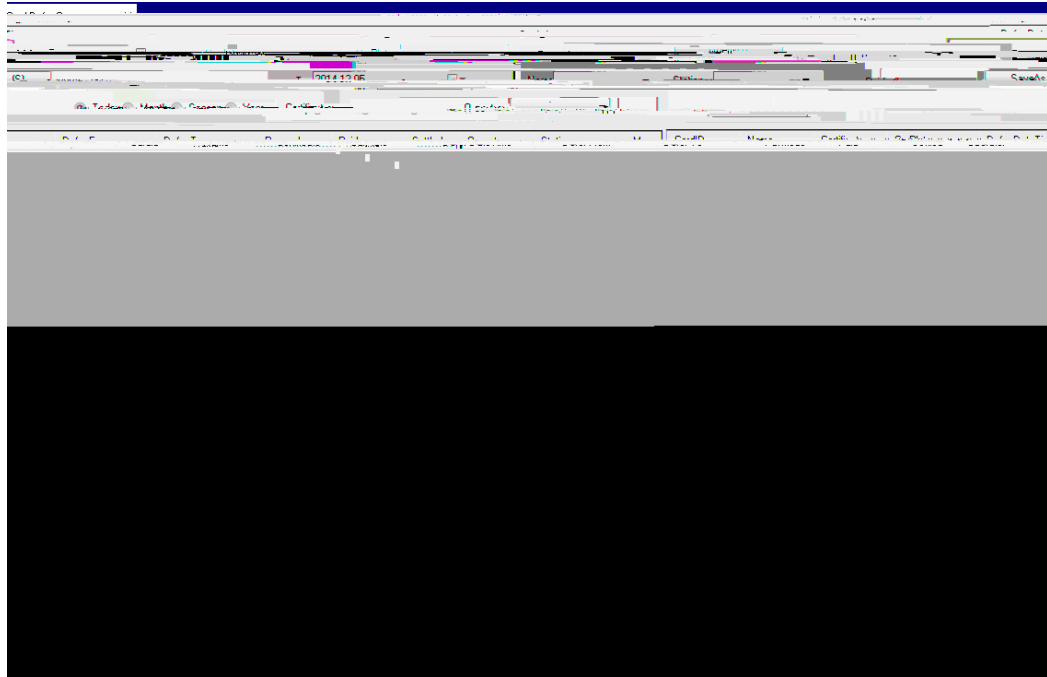









7.2 Card Out

