


6701 EVANSTAD DR N
MAPLE GROVE, MN 55369

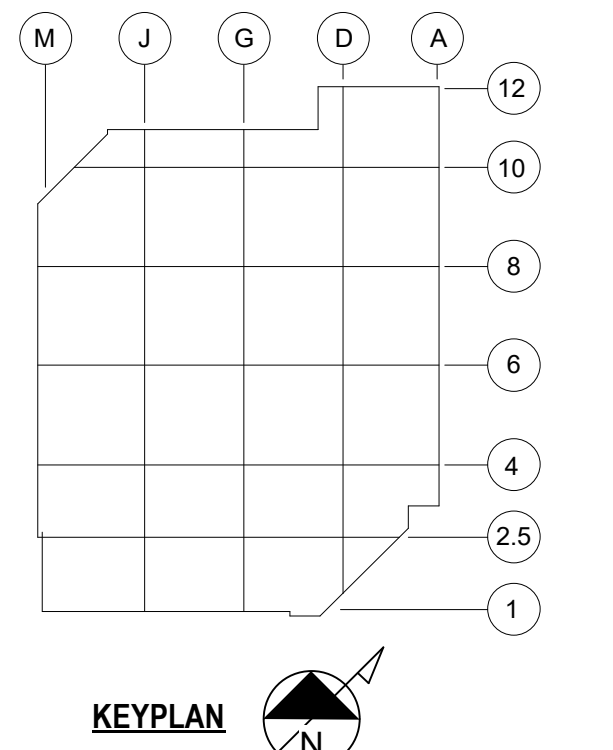

CONSULTING ENGINEER

HORWITZ 

7400 49th AVENUE NORTH
NEW HOPE, MN 55428
(763) 533-1900
www.horwitzinc.com






[illegible]






CONFIDENTIAL - THIS DRAWING IS THE PROPERTY OF UPSHER-SMITH. THE INFORMATION CONTAINED HEREIN MAY NOT BE USED OR COPIED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF THE OWNER.

DRAWING TITLE

DRAWING NUMBER

PID-5200.1

PRESSURE	TEMPERATURE	FLOW	OTHER	SYMBOLS			
PDI – DIFFERENTIAL INDICATOR	TE – ELEMENT	FE – ELEMENT	DC – DUST COLLECTOR	HV – HAND VALVE	MX – MIXER		– GLOBE VALVE
PTI – DIFF. INDICATING TRANSMITTER	TT – TRANSMITTER	FT – TRANSMITTER	AHU – AIR HANDLING UNIT	SV – SOLENOID VALVE	PU – PUMP		– CHECK VALVE
PI – INDICATOR	TI – INDICATOR	FI – INDICATOR	TRP – TRAP	PV – VALVE	M – MOTOR		
PSI – INDICATING TRANSMITTER	TSL – SWITCH LOW	SE – ELEMENT	DA – DAMPER ACTUATOR	WE – WEIGHT SENSOR	SD – AC INVERTER		– Y – STRAINER
PSL – SWITCH LOW	TSH – SWITCH HIGH	SE – ELEMENT	YS – Y STRAINER	WI – WEIGHT INDICATOR	SV – VALVE		
PCV – CONTROL VALVE	TCV – TEMP CONTROL VALVE	ST – TRANSMITTER	ZSO – POSITION SWITCH OPEN	WT – WEIGHT TRANSMITTER	VB – BRILLEX VALVE		– TRAP
PSV – RELIEF VALVE		SI – INDICATOR	ZSC – POSITION SWITCH CLOSED	FCS – FIRE SYSTEM	SRM – SAFETY RELAY		
PSE – SAFETY HEAD	HUMIDITY	LSL – SWITCH LOW	HS – HOSIERY SWITCH	GI – GAMMA JET	VA – VALVE ACTUATOR		
PRV – REGULATOR VALVE		LSL – SWITCH LOW	MCV – CHECK VALVE	ES – EXHAUST SILENCER			
PIY – 1/P TRANSDUCER	HCV – DEHUM. CONTROL VALVE	LSH – SWITCH HIGH	CL – HEAT EXCH. COIL	DBL – COATER LIGHT			

SYMBOLS	
	— GLOBE VALVE
	— CHECK VALVE
	— Y- STRAINER
	— TRAP
	— UNION