


Also in the artwork listing there is a symbol *g* designating that the jumper associated with it should be connected to a ground hole. The ground hole will be designated by a solid square on the board which the artwork drawer will draw in. You may not connect the jumper to the three ground holes in the center of the chip configuration or the ground hole at the number 4 hole location on the chip foot print. The ground jumper is connected to the ground hole by a foil path.

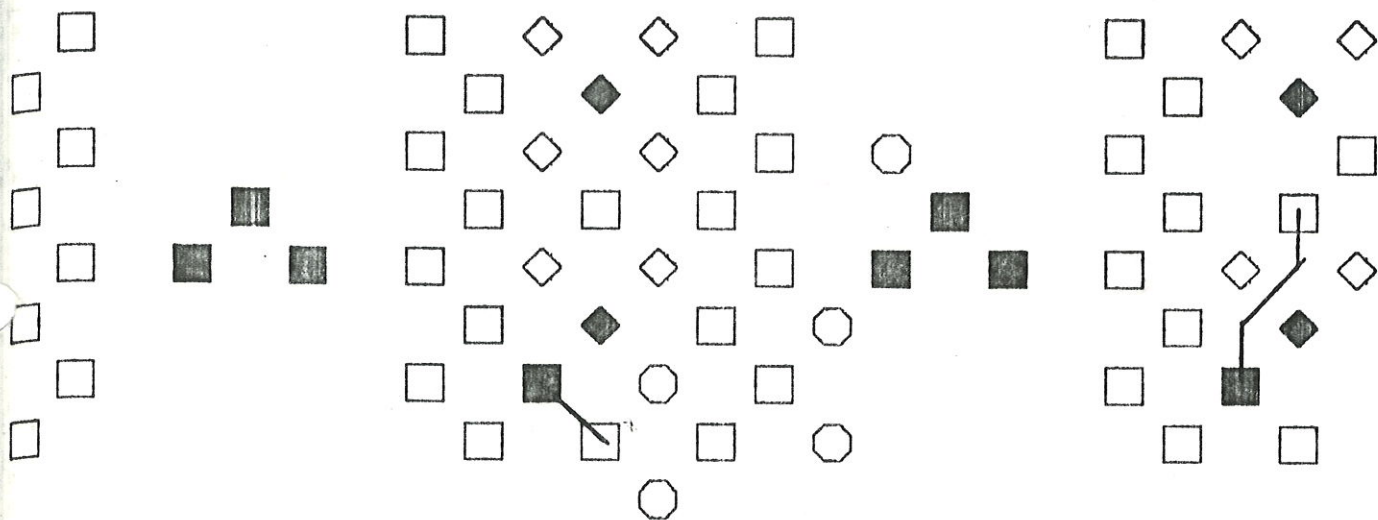

JUMPER TO GROUND

JUMPER TO GROUND