


155-157 INSTRUCTIONS CP 3 CP 4 CP 5/HOLD

FUNCTIONAL UNIT ENABLE IUA  
VECTOR LENGTH CONTROL JB

QGA

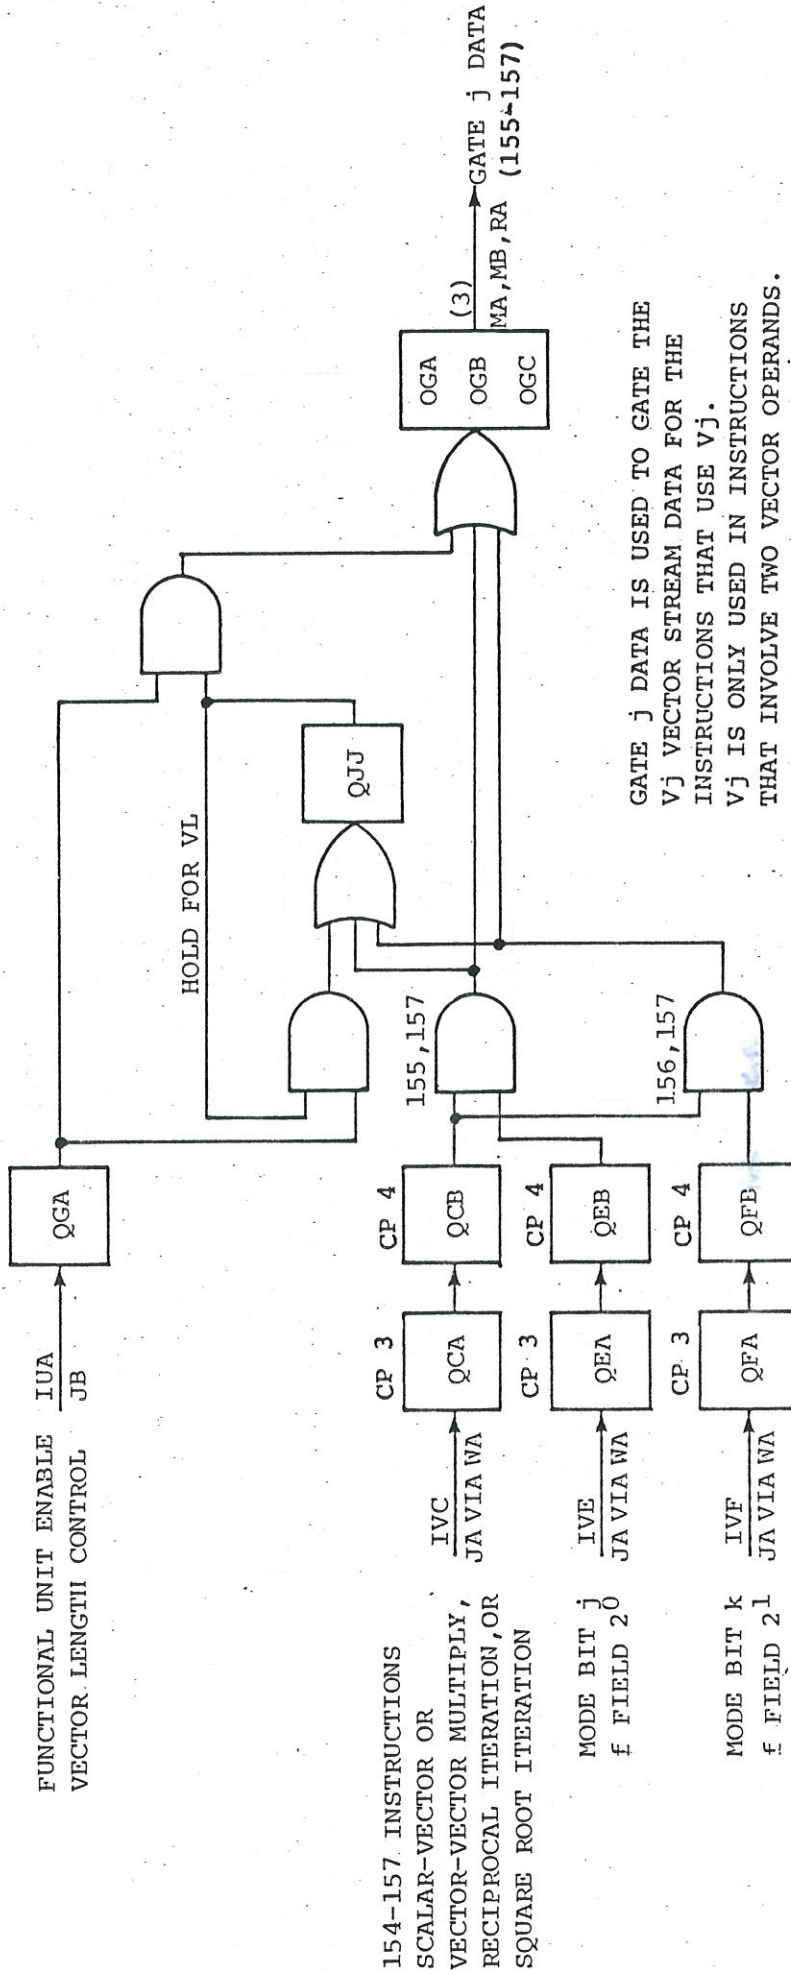

GATE j DATA IS USED TO GATE THE  
Vj VECTOR STREAM DATA FOR THE  
INSTRUCTIONS THAT USE Vj.  
Vj IS ONLY USED IN INSTRUCTIONS  
THAT INVOLVE TWO VECTOR OPERANDS.

A-2355A

ME MODULE GATE j DATA