



Procédure pour sécurisation Wifi sur votre ZyXel

1. Priez d' ouvrir une fenêtre d' internet et rentrez comme Adresse <http://192.168.1.1>
2. Le password pour rentrer est **1234** et cliquer sur **Login**.

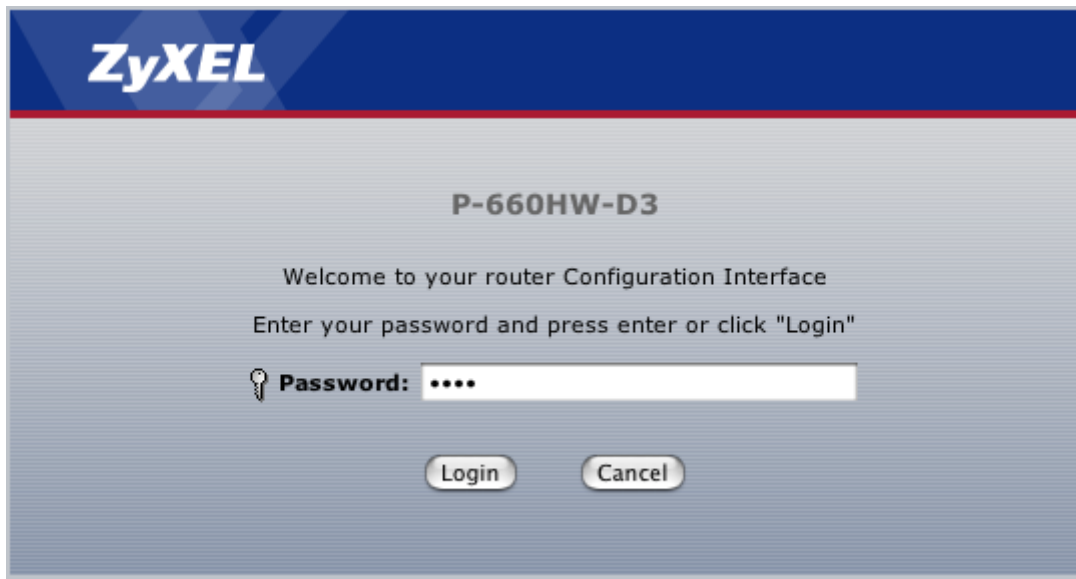


The image shows the login screen of a ZyXEL P-660HW-D3 router. At the top, the ZyXEL logo is displayed in white on a blue background. Below the logo, the model number "P-660HW-D3" is shown in bold. The text "Welcome to your router Configuration Interface" and "Enter your password and press enter or click 'Login'" is displayed. A password field with a key icon and the label "Password:" is shown with four dots. Below the password field are two buttons: "Login" and "Cancel".

3. Il vous propose pour changer le password vous pouvez le changer ou en cliquant sur Ignore le laisser comme il est.

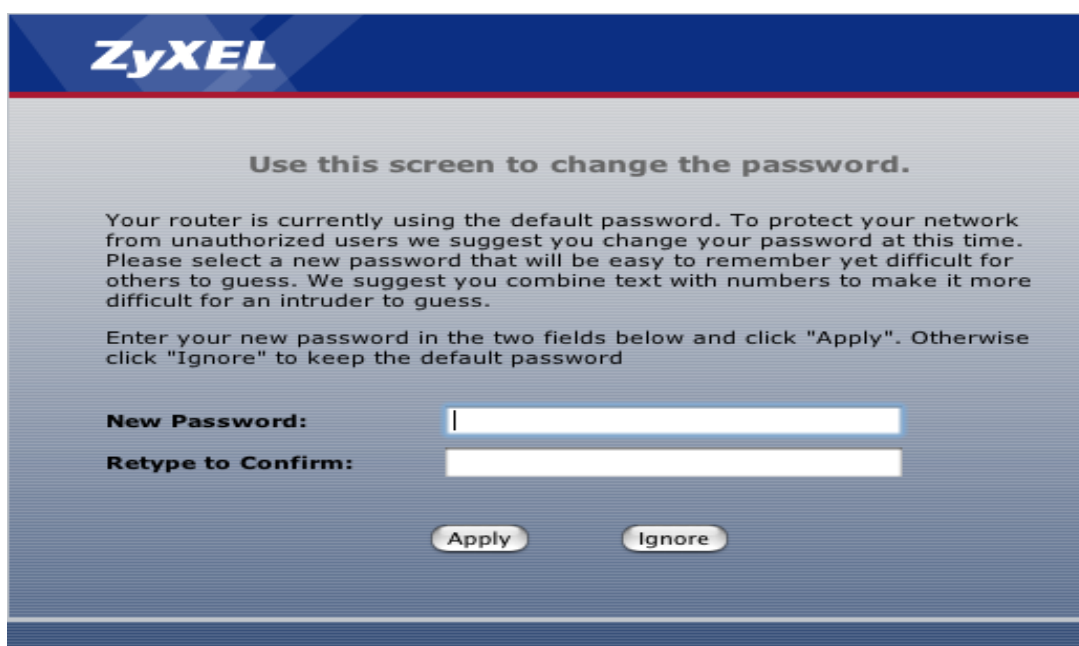

The image shows the password change screen of a ZyXEL router. At the top, the ZyXEL logo is displayed in white on a blue background. Below the logo, the text "Use this screen to change the password." is shown in bold. A paragraph of text explains that the router is currently using the default password and suggests changing it for security. It advises selecting a new password that is easy to remember yet difficult for others to guess, and suggests combining text with numbers. Below the text, there are two input fields: "New Password:" and "Retype to Confirm:". Below the input fields are two buttons: "Apply" and "Ignore".


4. Ici prenez **Go to Advanced setup** et cliquez sur Apply.

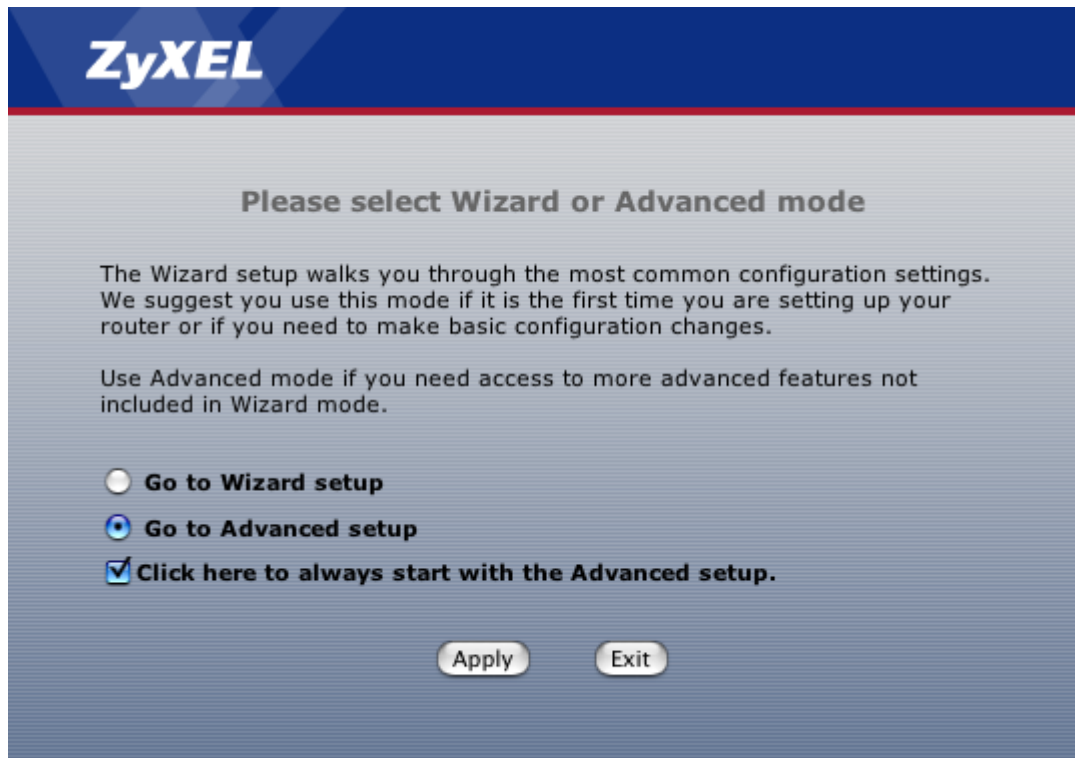


5. Prenez dans le Menu à gauche **Network** et puis **Wireless Lan**.



Dans la fenêtre principale cliquez sur la liste à droite de **Security Mode** et prenez WPA-PSK

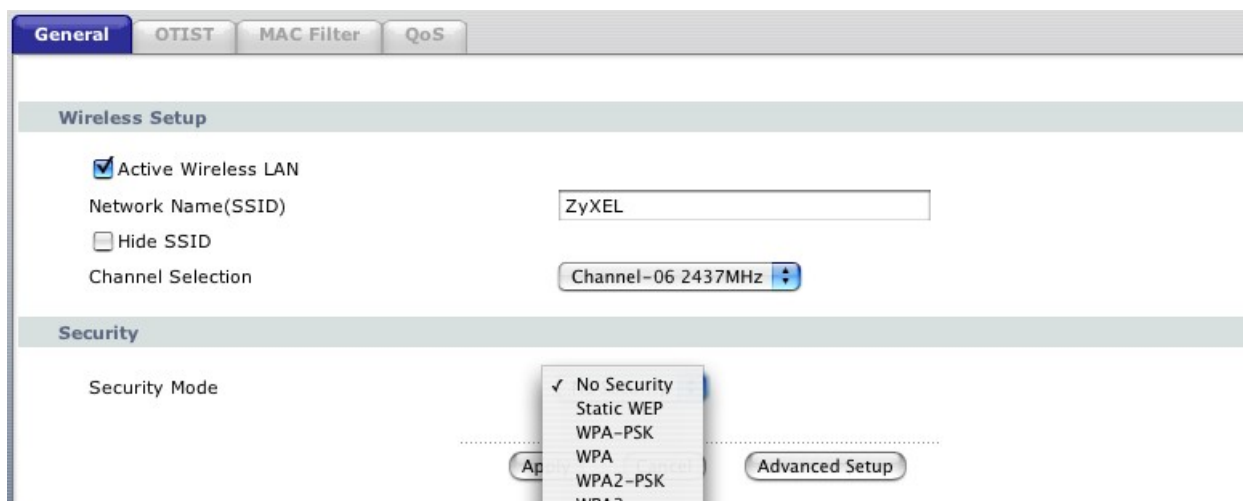

6. Puis dans **Pre-Shared Key** vous rentrez votre clé de sécurité souhaiter et cliquez sur **Apply**.

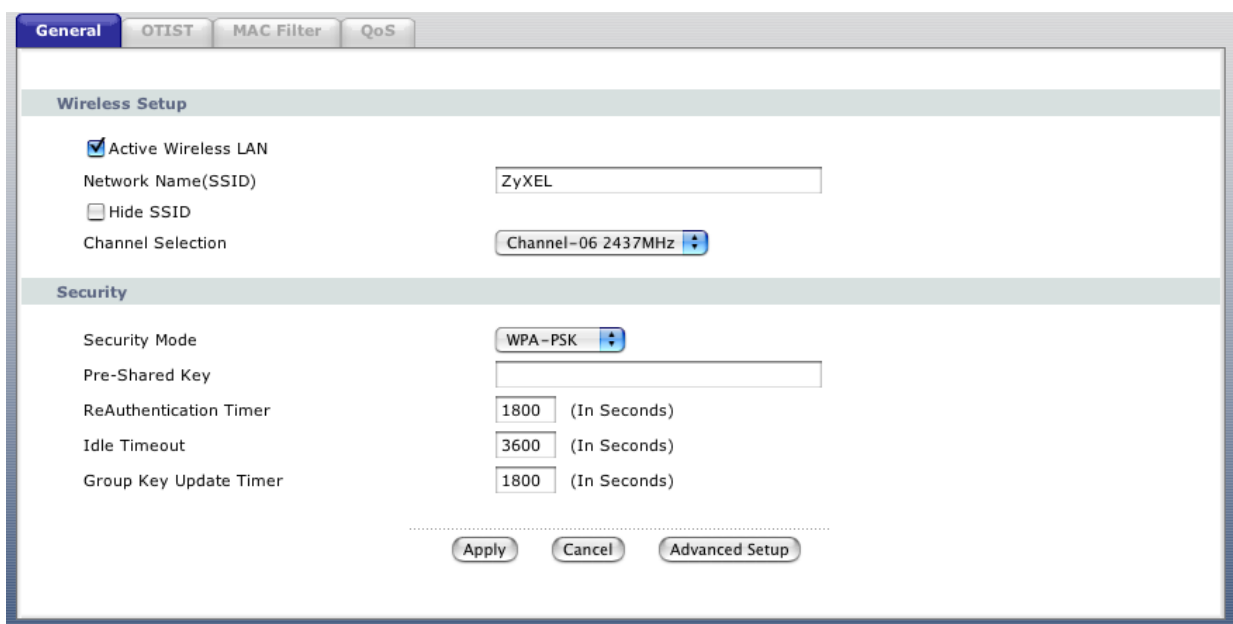

The screenshot shows the ZyXEL configuration interface with the 'General' tab selected. The 'Wireless Setup' section is visible, showing 'Active Wireless LAN' checked, 'Network Name(SSID)' set to 'ZyXEL', 'Hide SSID' unchecked, and 'Channel Selection' set to 'Channel-06 2437MHz'. The 'Security' section is also visible, showing 'Security Mode' set to 'WPA-PSK', 'Pre-Shared Key' (empty), 'ReAuthentication Timer' set to '1800 (In Seconds)', 'Idle Timeout' set to '3600 (In Seconds)', and 'Group Key Update Timer' set to '1800 (In Seconds)'. At the bottom, there are buttons for 'Apply', 'Cancel', and 'Advanced Setup'.

7. La dernière chose maintenant à faire est de cliquer sur la porte en haut à droite pour se déconnecter.

