



NORMAL OPERATION PUMP PRESUREIZING.

Nacelle Mode: Command run then change DP

Hub Manual Mode: Press "R" then pitch to run, stop, pulse or charge.

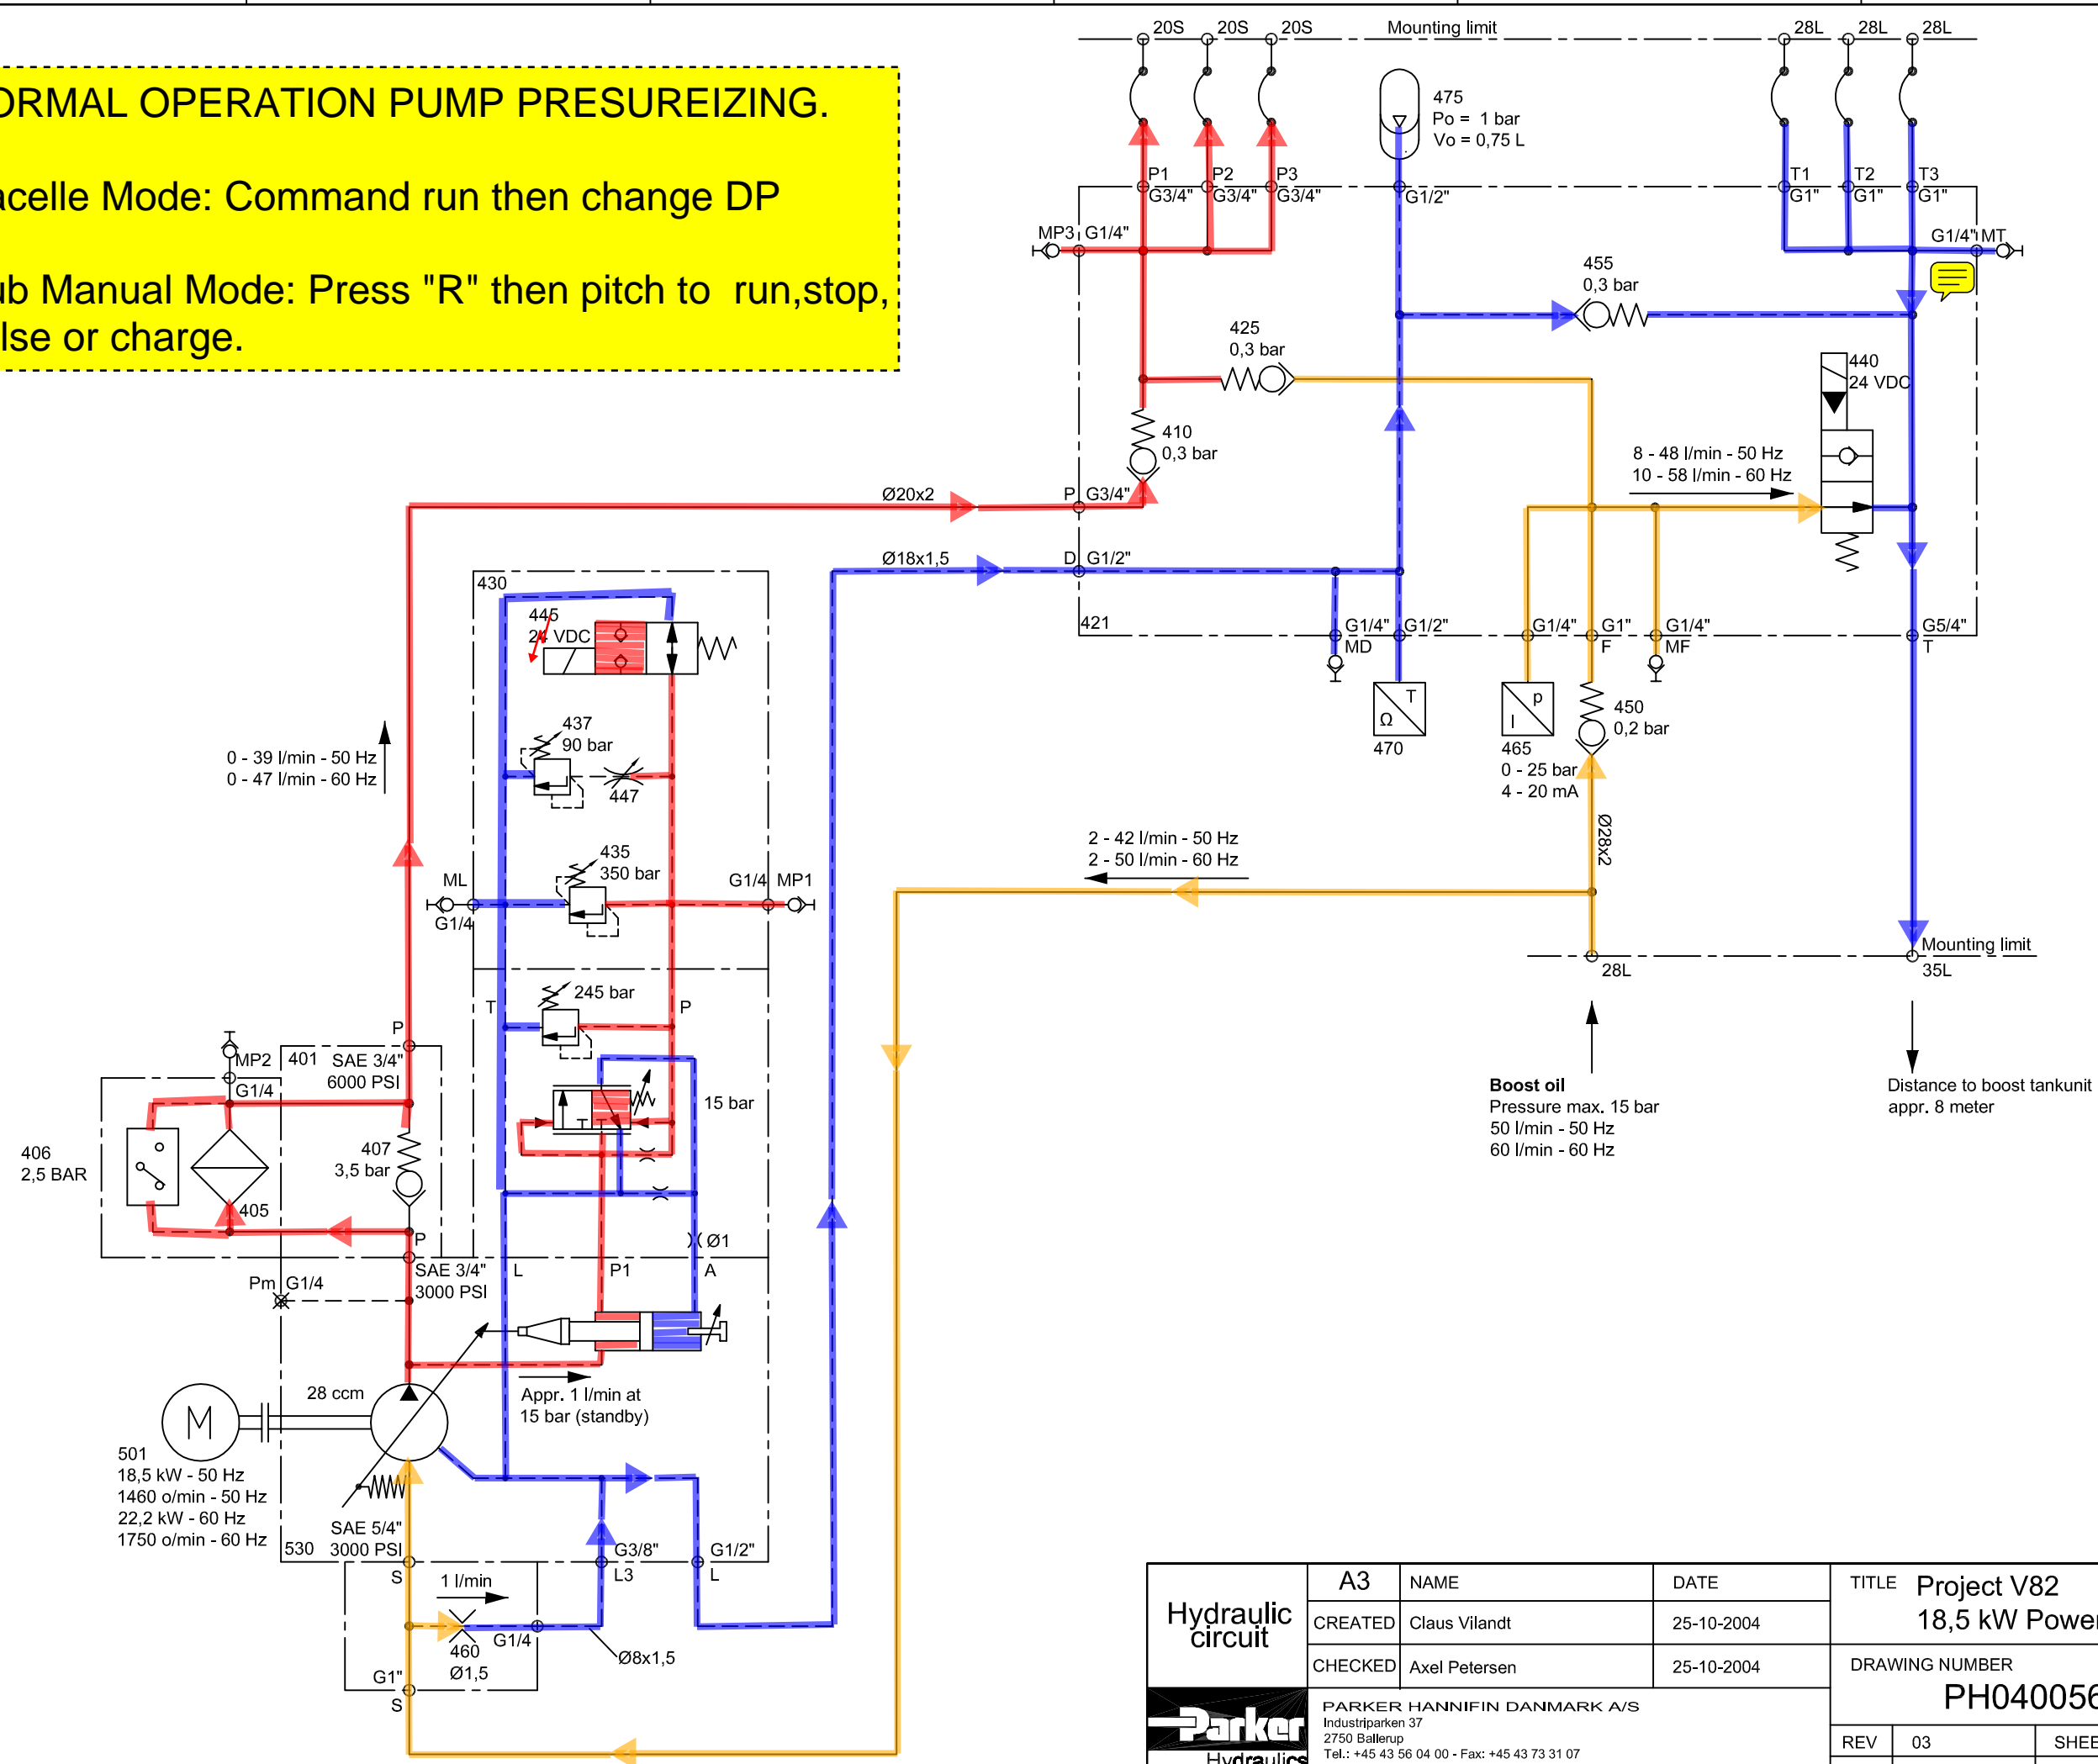

Hydraulic circuit	A3	NAME	DATE	TITLE Project V82 18,5 kW Powerunit		
	CREATED	Claus Vilandt	25-10-2004			
	CHECKED	Axel Petersen	25-10-2004	DRAWING NUMBER PH040056-03		
	PARKER HANNIFIN DANMARK A/S Industriparken 37 2750 Ballerup Tel.: +45 43 56 04 00 - Fax: +45 43 73 31 07 e-mail: mail@parker.dk					
				REV	03	SHEET 1 OF 1
				DATE	21-03-2005	AutoCad 2004