

Troubleshoot and repair Ambient temperature circuit

Does this solve the problem?

- 1] Yes
- 2] No
- 3] I don't know

- **Explanation**

A comprehensive troubleshooting document exists that addresses all possible issues with the Ambient temperature circuit.

Relevant documentation	
Description	DMS No.
Troubleshooting and Replacement of Ambient Temperature Sensor NM72/82-V82	0022-5227

TAC Navigation to disable “PT100 Fault”


Does this solve the problem?

- 1] Yes
- 2] No
- 3] I don't know


- **Explanation**

To disable the “Ambient Temp”

Go to “ServiceMenu”

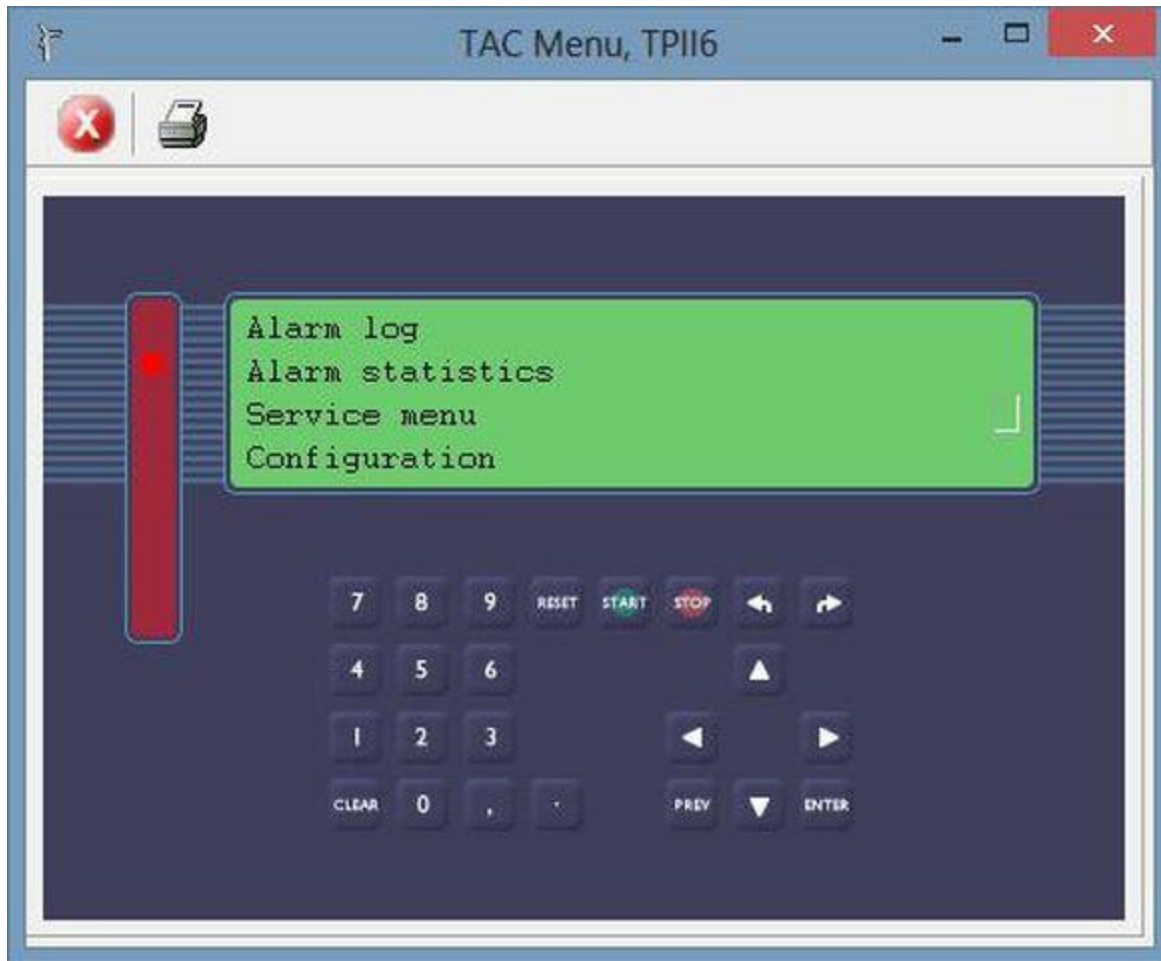

Scroll down to "Enable temperature channels"

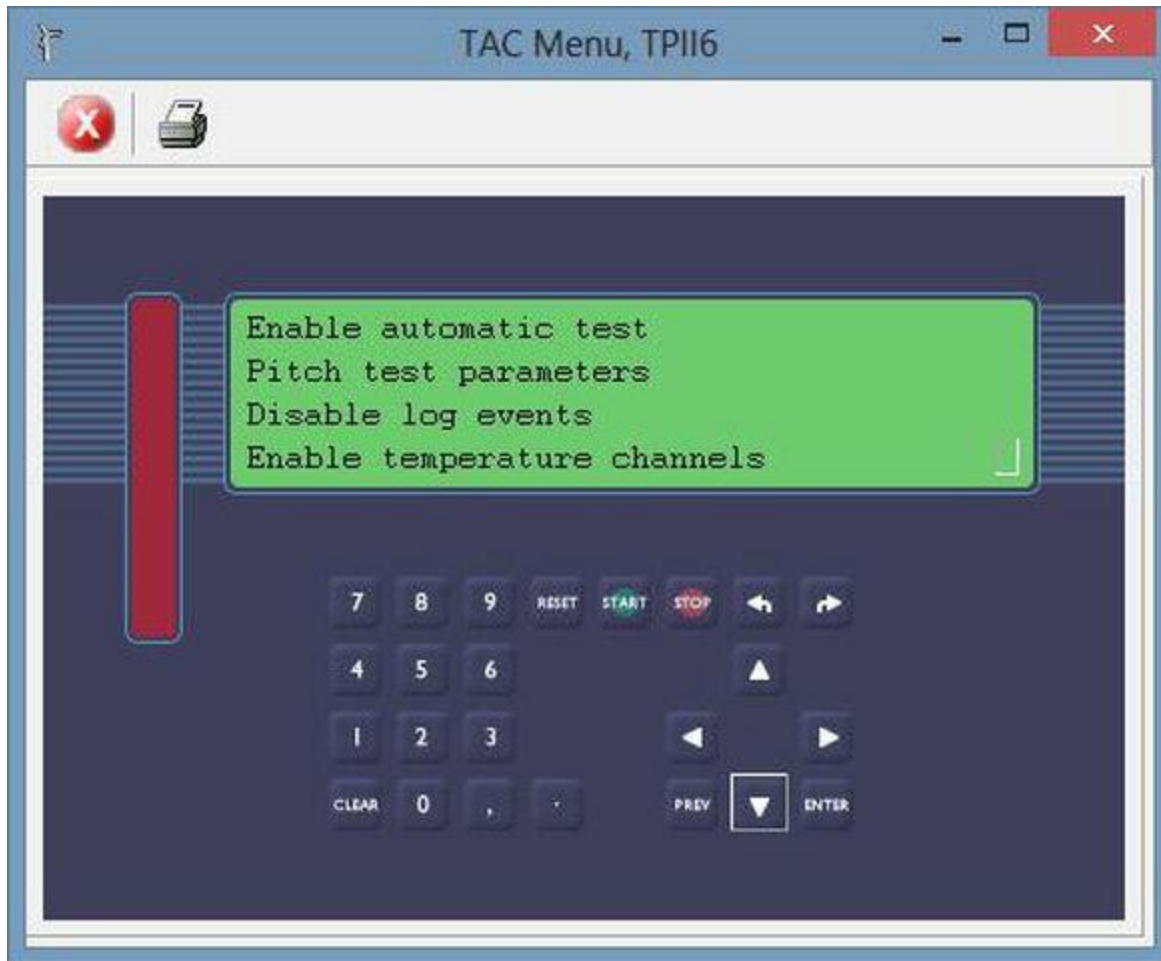

Choose "Enable Temp ambient"



Press **0** and enter on your keyboard

Now the temperature is disabled

Go back to the Main Menu and reset the turbine.