

NORMAL OPERATION, PUMP IDELING.


- Nacelle Mode :Command RUN- wait until main pump starts.
- Hub Manual Mode: Press "R" then short press on ex. pitch to RUN or STOP

NORMAL OPERATION, PUMP IDELING.

- Nacelle Mode :Command RUN- wait until main pump starts.
- Hub Manual Mode: Press "R" then short press on ex. pitch to RUN or STOP

NORMAL OPERATION, PUMP IDELING.

- Nacelle Mode :Command RUN- wait until main pump starts.
- Hub Manual Mode: Press "R" then short press on ex. pitch to RUN or STOP

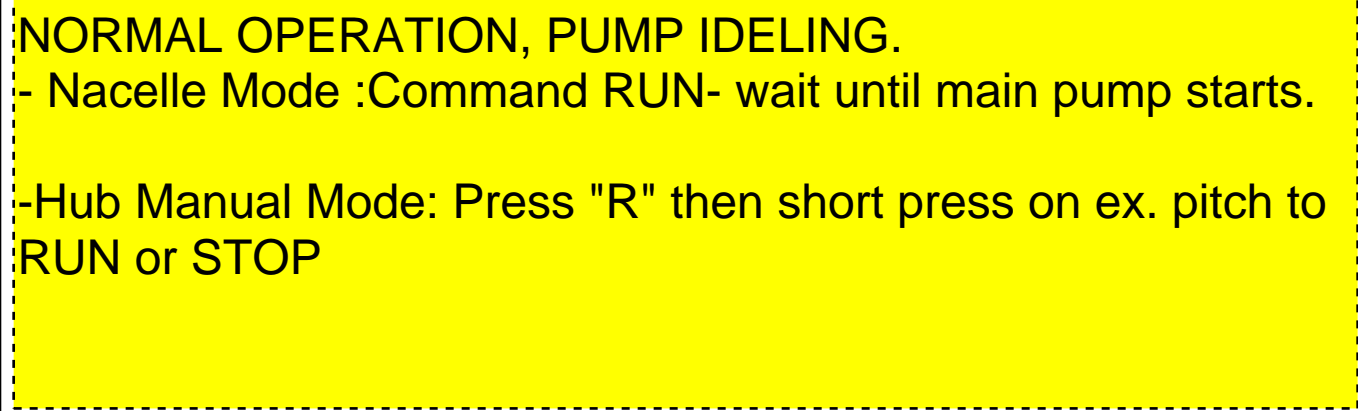

NORMAL OPERATION, PUMP IDELING.

- Nacelle Mode :Command RUN- wait until main pump starts.
- Hub Manual Mode: Press "R" then short press on ex. pitch to RUN or STOP