
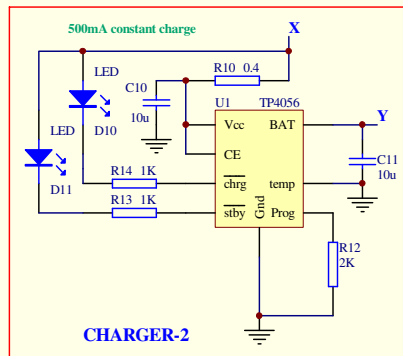
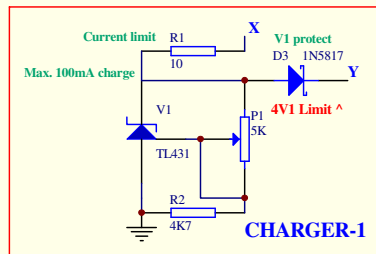


RAM CARD

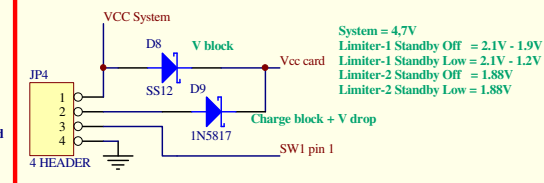

ADJUST CELL MONITOR CHARGER-2

Put P2 halfway
 Place jumper J1 to 1-2
 Connect JP3 to RAM
 Connect 5V supply to J1 pin 2
 Reset LED must be off
 1 Adjust voltage 3.5V
 Reset (LED must be off)
 Lower voltage to 3.10V
 Adjust P2 so LED go on at 3.10V
 Redo 1

Place jumper J1 to 2-3
 Connect JP1 to JP2
 Reset

ADJUST CHARGER-1

Put P2 halfway
 Place J1 on 2-3
 Remove JP1

Connect JP3 to RAM
 Connect system or 5V adapter (Power)

Wait 30 seconds
 Reset

1 Adjust P1 to 3.10V on J1-2
 Adjust P2, LED must go ON
 Adjust P1 to 3.5V press Reset, LED go OFF
 Adjust P1 LED must go ON at 3.10V
 Redo 1, redo 1

Adjust P1 to 4.1 Volt on J1-2
 Connect JP1 to JP2
 Reset

< OR > EXTERNAL VOLTAGE TO ADJUST CHARGER-1

Put P2 halfway
 Remove JP1
 Place jumper J1 to 2-3
 Place jumper J2 to 2-3
 Connect JP3 to RAM

Connect J3 to 5V supply
 Adjust P1 for 4.10V on J2 pin 2
 Remove 5V supply from J3

Connect 5V supply to J1 pin 2
 Reset
 1 Adjust voltage 3.5V
 Reset (LED must be off)
 Lower voltage to 3.10V
 Adjust P2 so LED go on at 3.10V
 Redo 1

Connect JP1 to JP2
 Reset

Title CPU09RAM - UPS		
Size B	Number	Revision
Date: 20-Dec-2024	Sheet of	Drawn By:
File: C:\ISOLI Backup RAM\Li Backup.ddb		