



Kellfri®

13-VT50, 13-VT75 WOOD CONVEYOR



13-VT50

PLEASE READ ALL INSTRUCTIONS BEFORE USING THE PRODUCT!!

TRANSLATED FROM THE ORIGINAL

INTRODUCTION

Thank you for choosing a product from Kellfri AB. By following the general safety information, instruction manual and common sense you will get many years of enjoyable use of the product. Kellfri's tools and machines are aimed for farmers with high demands on functionality.

PRODUCT INFORMATION

Kellfri's wood conveyor is available in two lengths and is designed to easily operate, has high capacity and long life. The electric motor is mounted at the top providing basis weight, this allows the frame to be mounted far down resulting in a large overhang. In this way the carrier reaches further into the woodshed or woodpile without the tipping hazard exists. The upper surface of the conveyor belt is ribbed, transporting the wood better. The large slot with a strong engine gives a maximum performance.

USE OF PRODUCT

Firewood conveyor is designed only for transportation of materials such as wood.

TECHNICAL DATA	13- VT50	13- VT75
Working Height	5000 mm	7500 mm
Slot height	350 mm	350 mm
Slot width	600 mm	600 mm
Wood track	400 mm	400 mm
Band width	100 mm	100 mm
Electric Motor	0,75 hk	0,75 hk
Weight	70 kg	90 kg
Phase inverter	Standard	Standard
Wheel	Standard	Standard


FOR YOUR SAFETY

Before using this product, please read the safety information and instruction manual and understand its contents for your own and others' safety. Always keep the safety information and instruction manual easily accessible to the user of the product.

Remember that it may be good for your own and others' safety to read the safety information every now and then. If the instructions manual is damaged or otherwise unreadable, please contact and order a new one from your supplier

The general safety instruction is also available from Kellfris website: www.kellfri.se

Do not use this equipment if you are feeling sick, tired or in influence of alcohol. Nor if you are under the influence of strong medications or drugs, suffering from strong depression or severe mental illness. Always follow the general traffic regulations and regulations and the rules of the Animal Welfare Act. Persons under 15 years old and people with mental illness may not use these tools.

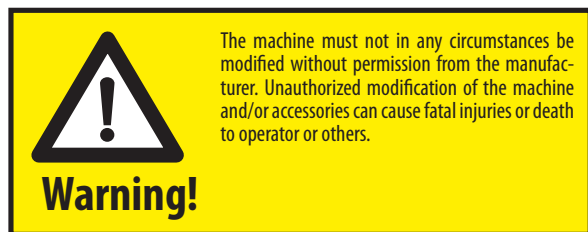

PRODUKTSÄKERHETSINFORMATION

- Read the manual carefully before using the machine.
- The machine may only be connected to a 230 V grounded outlet, secured with a fuse maximum of 10A. The outlet shall be installed by a qualified electrician.
- For your own and others safety, make sure that circuit breaker is installed.
- Keep working area free from other people. Moving parts increases the risk of accidents.
- Do not use or store the machine on a place exposed to rain or moisture.
- Make sure the working area is well lit.
- Do not use electrical equipment near inflammable gases or liquids.
- Children must never be present within the work area, never let children handle machines, tools or extension cords.
- Use the machine only within the capacity it is meant for. Do not increase the capacity of the machine!
- Check the cords and extension cords periodically, to ensure that no damage has occurred.
- Unplug the power cord when the machine is not in use and during maintenance/service.
- Make sure the power switch is turned off (OFF) before power is connected.
- Never overload the machine.
- Do not move the machine while it is running.
- Never leave the machine unattended when it is running.
- Keep bystanders and animals out of the workplace.

INCASE OF EMERGENCIES

In case of an emergency please dial 112.









Keep cell phone or emergency phone available specially when working alone. First aid kit and fire extinguishers must be kept easily accesable during all work, maintenance and service.

PERSONAL PROTECTION

Always wear suitable clothing and footwear. Do not wear loose clothing or jewelry when using the machine. Remember to put up long hair when operating rotating machines. Wear protective gloves, to prevent risking burns on contact with hot surfaces such as exhaust system, and to avoid oil and gasoline on the skin. Hearing protection should be used when the engine is running.

WARNING SIGNS AND LABELS

Ensure that warning labels are always visible and clean. Clean the warning labels as required. Do not rinse using pressure washer directly on the warning labels. Any damage/ broken stickers should be replace. Order new stickers from your supplier.

SYMBOL	SPECIFICATION
	Read the instructions manual before using the machine.
	Warning! High voltage!
	Beware of thrown objects! Be aware of the equipment's danger zone!
	Warning! Risk for injuries!
	Warning! Prohibition to sojourn on the machine!
	Warning! Risk for accident! Children must not be in any circumstances be near the machine.
	The machine is CE-labeled
 	WARNING! In case of electrical fault, contact certified electricians!

SURROUNDINGS

Make sure your working area is clear from people, children and objects before installing and using the machine. Risk of serious injuries can occur during operation.

Take an extra caution when children are in the area where the equipment/ product is being use or stored. Check the area for low hanging electrical wires. Be careful when working on slopes and near ditches.

Always work alone with single - purpose tools/products. Never have junk lying in your area. Keep working areas clean. Always respect the risk zone.



SAFETY MEASURES BEFORE OPERATING

Read the safety information and instruction manual carefully. Be sure you understand the safety measures, instruction manual and warning labels. Use common sense when operating the machine and use appropriate personal protective equipment.

Always check the performance and the machine combination that are used. It's highly important these matches in a satisfactory manner. This is to ensure the product or the function and most important yours and others safety.

Do visual inspection of equipment or product before use. Fix or replace damaged or worn parts immediately to reduce the risk of injury. Lubricate moving parts and check that all screw-nuts and bolts are tightened.

Learn and remember the correct working methods. Beginners should keep a low speed until the person has learn the proper use of the machine/product. The user/customer is responsible to handle the situation correctly. Do not use the machine if it is experienced to be dangerous for the user.



OPERATING THE MACHINE

Only people who understand the safety information and instructions in this manual may operate the equipment. Be alert and careful when working with the machine and only use the tool or product in the manner described in this manual. When working with equipment that has moving parts, there is always the risk of injury. Be careful when working with equipment equipped with hydraulic hoses ,oil under pressure can penetrate the skin. Seek medical attention immediately if this occurs. Always work alone with the tools that are defined as single purpose tools. Respect the equipment's danger zone.

1. Place the wood conveyor on a stable flat surface
2. Plug the power cord into a grounded 230V outlet
3. Adjust the carrier tilt by lowering or raising the legs
4. Turn the power switch to ON position
5. When finished, turn off the power switch to OFF position and unplug



TRANSPORT AND STORING

Make sure there are no people, children and foreign objects around the area before transporting the machine. Always take an extra caution during the transport. Ensure that the product is well secured and that transport brackets are mounted. Always place the load as low as possible. Respect the danger zone even during transport. When lifting the equipment, never go underneath suspended loads. Trailer used for transport should have working brakes.

Always store the machine in a dry place preferably underneath a cover when not in use. Ensure that the product is stable and not likely to tip over. Never let children play where the machine is being stored. Always keep in mind the risk of tipping!

MAINTENANCE AND SERVICE


Ensure that the unit is stable and cannot tip over during maintenance and service. Replace damaged or worn parts immediately to reduce the risk of abrasion. Always perform maintenance, service and inspection, as recommended. Use only original replacement parts or spare parts with equivalent performance to reduce the risk of damage. All repairs and connections with electricity must be performed by a qualified person.

Check all nuts and bolts are tightened after performing maintenance and service. Always test the machine before using it.



RECYCLING

Disposal of the product, disassemble and transport to the municipality's recycling station. Contact your local authority for further information.

INSTALLATION INSTRUCTIONS

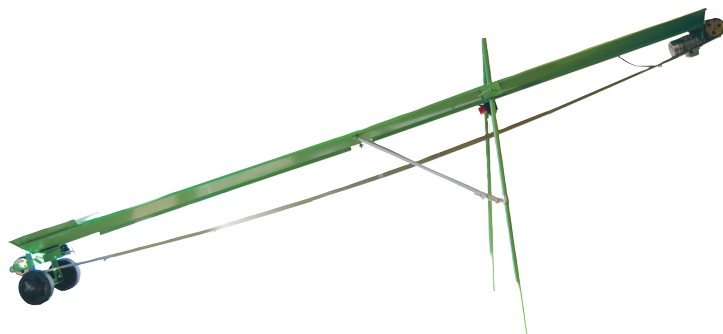

1. Mount and screw the gutters.
2. Mount the motor.
3. Fit the shaft and belt pulleys on the engine.
4. Install the belt tensioner at the bottom.
5. Mount the conveyor belts.
6. Install the outriggers.
7. Attach the wheels according to the sketch.
8. Install engine guard.
9. Tighten all bolts.

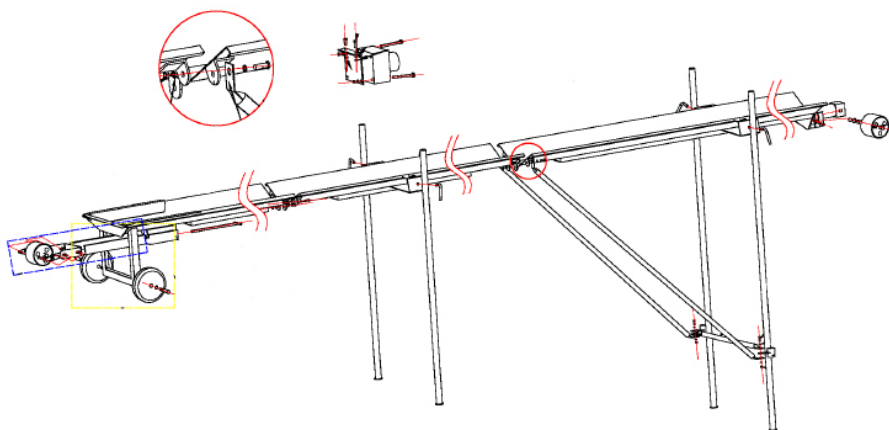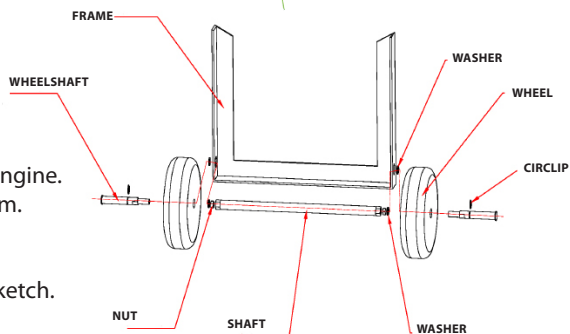

WARRANTY TERMS AND CONDITIONS

Validity of the warranty Kelifri's Warranty is valid 12 months from the date of purchase.

This warranty replaces - Compensation for spare parts after acknowledgment that the fault lies on the material or manufacturing defects.

This guarantee do not cover

- Labour costs
- Travel expenses
- Any modification that the buyer himself has/had made
- Any consequential damages that occurred out of damage to the machine.
- Damage due to normal deterioration of the machine, inadequate service, user inexperience or use of spare parts which are not original.
- Wear parts such as hoses, seals, oils, and mechanical belts.

EC-DECLARATION OF CONFORMITY

According to 2006/42/EC, Annex 2A

Kelfri AB

Munkatorpsgratan 6

532 37 Skara, Sweden

Declares that the machine

Name: Wood conveyor

Type: 13-VT5, 13-VT75

Complies with all applicable provisions of the Machinery Directive 2006/42/EC.

Other equipment must meet the hardware requirements of the Directive.



Tina Baudtler, VD

Kelfri AB is constantly working on further developing their products and therefore reserves the right to modify, among other things the design and appearance without notice.

CUSTOMER SERVICE

You are always welcome to give your feedbacks, reviews or ask us about our tools and products.

Kelfri AB

Phone : +46 (0)511 - 242 50

Fax: +46 (0)511 - 168 33

E-mail : info@kelfri.se

Kelfri®