



# **Kellfri®**

## **ALLROUND-BUCKET**

**26-ETE12**

**26-ETE15**

**26-ETE18**

**26-ETE20**

**26-ETE22**

**26-ETE24**


**26-ETT15**

**26-ETT18**

**26-ETT20**

**26-ETT22**

**26-ETT24**

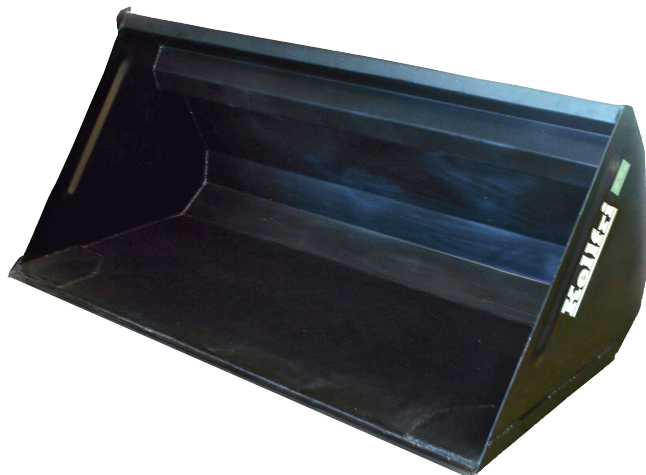

**CAREFULLY READ THE OPERATING INSTRUCTIONS BEFORE USING THE PRODUCT!**

**OPERATING INSTRUCTIONS TRANSLATED FROM THE ORIGINAL**

### INTRODUCTION

Thank you for choosing a product from Kellfri AB. By following the general safety information and the instruction manual and by using common sense, you will have a great and safety use of your Kellfri product for many years.

Kellfri designs and delivers effective, affordable machinery and components for forest, agriculture, construction and gardening in Sweden, other Nordic countries and Europe.

### PRODUCT INFORMATION


Kellfri's all-round bucket is a very strong and durable bucket for all purposes. The bucket is designed to withstand rough handling. Delivered with Trima or Euro attachment.

### INTENDED USE

Only intended for loading light materials such as wood chips, snow, etc.

### TECHNICAL DATA

		26-ETE15	26-ETE18	26-ETE20	26-ETE22	26-ETE24
	26-ETE12	26-ETT15	26-ETT18	26-ETT20	26-ETT22	26-ETT24
Width	1250 mm	1500 mm	1800 mm	2000 mm	2200 mm	2400 mm
Height	510 mm	700 mm	700 mm	750 mm	750 mm	750 mm
Depth	510 mm	830 mm	850 mm	820 mm	820 mm	820 mm
Volume	300 l	550 l	750 l	1000 l	1100 l	1200 l
Weight	85 kg	170 kg	196 kg	235 kg	250 kg	268 kg

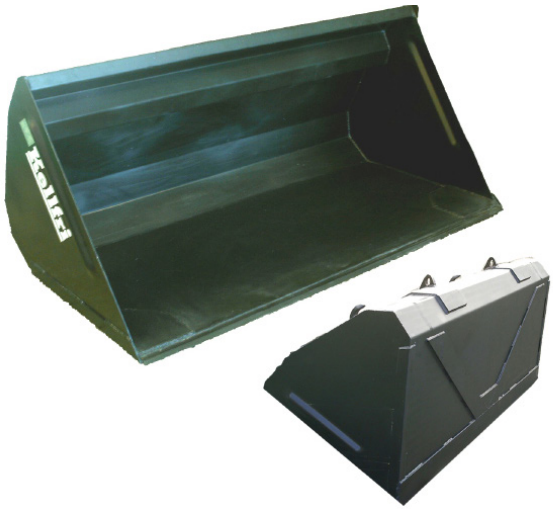

## FOR YOUR SAFETY

Before using the product, please read the safety information and instruction manual and understand its contents for your own and others' safety. Always keep the safety information and instruction manual easily accessible to the user of the product. Remember that it may be good for your own and others' safety to read the safety information every now and then. If the instructions manual is damaged or otherwise unusable, please contact and order a new one from:

Kellfri AB, Munkatorpsgratan 6, 532 37 SKARA. Tel: 0511-242 50

The general safety instruction is also available from Kellfris website: [www.kellfri.co.uk](http://www.kellfri.co.uk)

Do not use this equipment if you are feeling sick, tired or in influence of alcohol. Nor if you are under the influence of strong medications or drugs, suffering from strong depression or severe mental illness. Always follow the general traffic rules and regulations and the rules of the Animal Welfare Act. Persons under 15 years old and people with mental illness may not use these product.



## PRODUCT SAFETY INFORMATION

If overloading the basic machine, the load can drop uncontrollably. The equipment is always operated from the cab of the tractor. Never leave the tractor before the equipment is unloaded and the tractor braked. Respect the danger zone.

No one other than the operator may be present within the danger zone during work. Operator or any other person is never allowed to be underneath the load.




## INCASE OF EMERGENCIES

In case of an emergency please dial 112.

Keep cell phone or emergency phone available specially when working alone. First aid kit and fire extinguishers must be kept easily accesable during all work, maintenance and service.

# WARNING SIGNS AND LABELS

Ensure that warning labels are always visible and clean. Clean the warning labels as required. Do not rinse using pressure washer directly on the warning labels. Any damage/ broken stickers should be replace. Order new stickers from your supplier.

	Warning! Suspended load!
<b>Riskzon 5 m</b>	Warning! Danger zone!
	Warning! Risk of children accident!
	Warning! Forbidden to stay on the equipment!


# PERSONAL PROTECTION

Always wear suitable clothing and footwear. Do not wear loose clothing or jewelry when using the machine. Remember to put up long hair when operating rotating machines. Wear protective gloves, to prevent risking burns on contact with hot surfaces such as exhaust system, and to avoid oil and gasoline on the skin. Hearing protection should be used when the engine is running.



# SURROUNDINGS

Make sure your working area is clear from people, children and objects before installing and using the machine. Risk of serious injuries can occur during operation. Take an extra caution when children are in the area where the equipment/ product is being use or stored. Check the area for low hanging electrical wires. Be careful when working on slopes and near ditches. Always work alone with single - purpose tools/ products. Never have junk lying in your area. Keep working areas clean. Always respect the risk zone.

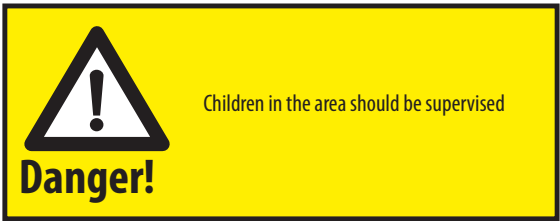

## **SAFETY MEASURES BEFORE OPERATING**

Read the safety information and instruction manual carefully. Be sure you understand the safety measures, instruction manual and warning labels. Use common sense when operating the machine and use appropriate personal protective equipment. Always check the performance and the machine combination that are used. It's highly important these matches in a satisfactory manner. This is to ensure the product or the function and most important yours and others safety.

Do visual inspection of equipment or product before use. Fix or replace damaged or worn parts immediately to reduce the risk of injury. Lubricate moving parts and check that all screw-nuts and bolts are tightened. Learn and remember the correct working methods. Beginners should always keep a low speed, use extreme caution before routine and product knowledge is achieved. The user/customer is responsible to handle the situation correctly. The product should not be taken into use unless it can be done in a safe way for the user.



## **USE**

Only those who understand the safety instructions and the operating instructions may use the equipment or product. Exercise caution and care when working with the equipment and only use it in the way described in the operating instructions. There is a risk of crushing when working with equipment that has moving parts. Exercise caution when working with equipment with hydraulic hoses as oil under pressure can penetrate the skin. Immediately seek medical attention if this should occur. Avoid operating the machine during temperatures lower than -20°C and higher than +30°C.


Due to a hydraulic system is never 100% tight, a hydraulic system control should be performed before the equipment is operated. Leakage can occur due to internal leakage in the tractor's valve, internal leakage in the equipment's hydraulic cylinder etc. Check the extent of the leak by running the equipment's cylinder in end position and keep up the pressure for 1 min. If the cylinder begins to "wander" in the other direction then there is a leakage in the gasket. Gasket or cylinder must be replaced. Always work alone with equipment that are designed as single purpose equipment. Never overload the equipment and respect its risk zone.

## **CONNECTING AND DISCONNECTING THE EQUIPMENT**

Read the tractor's manual before connecting. The equipment connects to the tractor's front loader, secured with locking pins.

### Quick change bracket:

- Run up work vehicle about 3 cm from the bucket.
- Lower the front loader into the bracket opening (1), drive the work vehicle into the opening and raise the arm until the bracket engages.
- Attach the locking pins in the hole (2)
- Check that bolts and locking pins are properly attached.

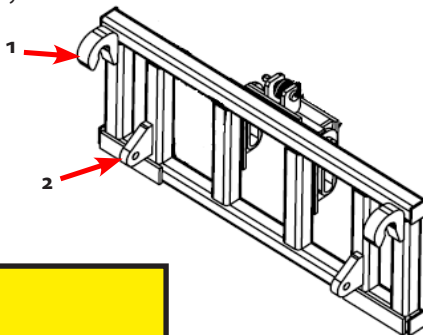

### AFTER USE

Parking is not allowed with equipment above ground but is done with the equipment resting on the ground. Rinse the tool with water if necessary.

### STORING

Always store the machine in a dry place preferably underneath a cover when not in use. Ensure that the product is stable and not likely to tip over. Never let children play where the machine is being stored. Always keep in mind the risk of tipping!

### MAINTENANCE AND SERVICE

Ensure that the unit is stable and cannot tip over during maintenance and service. Replace damaged or worn parts immediately to reduce the risk of abrasion. Always perform maintenance, service and inspection, as recommended. Use only original replacement parts or spare parts with equivalent performance to reduce the risk of damage. All repairs and connections with electricity must be performed by a qualified person.

Check all nuts and bolts are tightened after performing maintenance and service. Always test the machine before using it.

*Kellfri AB is constantly working on further developing their products and therefore reserves the right to modify, among other things the design and appearance without notice.*

### RECYCLING

Disposal of the product, disassemble and transport to the municipality's recycling station. Contact your local authority for further information

We are grateful for your help pointing out any inaccuracies in the Kellfri product delivered to you. Before making a complaint read Kellfris general warranty and sales conditions in our catalog as well as the enclosed User's manual that comes with the machine.

Please fill in the details below and attach photo and other information in order to process your request.

<b>Buyer:</b>	<b>Customer number:</b>	
<b>Adress:</b>	<b>Invoice number:</b>	
<b>E-mail:</b>	<b>Phone nr:</b>	

<b>When was the product delivered?</b>	<b>When was the product taken into operation?</b>	<b>Did the product functioned as it should upon the first operation?</b>
----------------------------------------	---------------------------------------------------	--------------------------------------------------------------------------

**Defect product / part:**

**Problem description:**

**Describe the sequence of events:**

**Other:**

**Submit Complaint form and photo to:**

**Kellfri AB**

**Division of Services : Contact Kellfri retailer**

**Or e-mail service.**

**info@kellfri.se**

<b>Signature:</b>	<b>Date:</b>
-------------------	--------------

**KELLFRI AB**

**Munkatorpsgatan 6**

**SE-532 37 SKARA**

**Phone: +46 (0)511-242 50**

**Fax: +46 (0)511-168 33**

**Web**

**www.kellfri.co.uk**

**E-mail**

**info@kellfri.se**

**Edition: 2014-01-01**

## WARRANTY TERMS AND CONDITIONS

Validity of the warranty - Kelfri's Warranty is valid 12 months from the date of purchase.

This warranty replaces - Compensation for spare parts after acknowledgment that the fault lies on the material or manufacturing defects.

This guarantee do not cover

### Labour costs

- Travel expenses
- Any modification that the buyer himself has/had made.
- Any consequential damages that occurred out of damage to the machine.
- Damage due to normal deterioration of the machine, inadequate: service, user inexperience or use of spare parts which are not original.
- Wear parts such as hoses, seals, oils, and mechanical belts

## EG-FÖRSÄKRAN OM MASKINENS ÖVERENSTÄMMELSE, ORIGINAL

### EC-DECLARATION OF CONFORMITY

According to 2006/42/EC, Annex 2A

Kelfri AB

Munkatorpsgatan 6

532 37 Skara, Sweden

Declares that the machine

Name: 26-ETE12, 26-ETE15, 26-ETE18, 26-ETE20, 26-ETE22, 26-ETE24, 26-ETT15, 26-ETT18, 26-ETT20, 26-ETT22, 26-ETT24

Type: All-round bucket

Complies with all applicable provisions of the Machinery Directive 2006/42/EC.

Other equipment must meet the hardware requirements of the Directive.



Tina Baudtler, VD

*Kelfri AB is constantly working on further developing their products and therefore reserves the right to modify, among other things the design and appearance without notice.*

Latest version 2015-07-03

## CUSTOMER SERVICE

You are always welcome to give your feedbacks, reviews or ask us about our tools and products.

Kelfri AB

Phone: 0511 - 242 50

Fax: 0511 - 168 33

E-mail: [info@kelfri.se](mailto:info@kelfri.se)

The Kelfri logo consists of the word "Kelfri" in a bold, blue, sans-serif font. A registered trademark symbol (®) is located at the top right of the letter "i". The logo is underlined with a thick blue line.