



Kellfri®

21-KGS40

21-KGS50

21-KGS70

INSERT BUCKET



CAREFULLY READ THE OPERATING INSTRUCTIONS BEFORE USING THE PRODUCT!

OPERATING INSTRUCTIONS TRANSLATED FROM ORIGINAL

INTRODUCTION

Thank you for choosing a product from Kellfri AB. Compliance with the instruction manual and sound common sense will guarantee many years of enjoyment using the product. Kellfri's equipment and products are aimed at self-employed farmers who have stringent performance demands.

PRODUCT DETAILS

The Kellfri insert bucket is an excellent tool for facilitating work with lighter materials. Insert bucket for the KG08, KG18 and KG21 grapples

AREA OF USE

Used for loading manure, sand and other light materials.

PRODUCT NO.	21-KGS40	21-KGS50	21-KGS70
Volume	36 l	110 l	167 l
Length	198 + 160 mm	390 + 390 mm	390 + 390 mm
Width	340 mm	500 mm	700 mm
Max. opening width	700 mm	900 mm	1,170 mm
Weight	19 kg	60 kg	75 kg
Adapted for	21-KG08	21-KG18	21-KG21

SAFETY INSTRUCTIONS

Before using the equipment, and for the safety of yourself and others, you must read the instruction manual and understand its contents. Always keep the instruction manual easily accessible for the user of the equipment. It is a good idea to read the safety instructions from time to time, both for your own safety and that of others. It is important that the user understands that common sense and general caution are not built into the product, but must be supplied by the user.

If the instruction manual gets damaged or in any other way cannot be used, new copies may be ordered from:

Kellfri AB, Munkatorpsgatan 6, SE-532 37 SKARA, Sweden. Tel.: +46 (0)511 242 50

The general safety instructions can also be downloaded from Kellfri's website: www.kellfri.se.

Do not use the equipment or product if you feel ill, tired or are under the influence of alcohol. Do not use the equipment or product if you are taking prescribed medication or drugs, suffering from severe depression or mental illness. Always comply with general rules of the road and applicable rules stipulated by the Animal Welfare Act. People under the age of 15 are not allowed to use the equipment.

Where the machine is used professionally, employers are responsible for ensuring that users of the machine have theoretical and practical knowledge of the machine and that work is performed in a safe manner. Stay informed by complying with work environment legislation, contact your local work environment authority or visit <https://www.av.se> for information in Swedish.



PRODUCT SAFETY INSTRUCTIONS

Overloading the main machine can cause the load to drop out of control. The equipment must always be operated from the tractor cab. Never leave the tractor until the bucket has been unloaded and the tractor brakes engaged. Respect the equipment's risk zone. Only the operator is allowed to be within the risk area while work is being carried out. Operators or others should not stand under suspended loads.


INSTRUCTIONS FOR EMERGENCY SITUATIONS

In case of emergency, call 112.

Always have a mobile phone or emergency phone available when working alone. A first aid kit and fire extinguisher must be kept in an easily accessible location when carrying out any work, maintenance and service. To perform an emergency stop, turn off the tractor.

SURROUNDINGS

Check that the work area is free from bystanders, children and objects before hitching or using the equipment. There is a risk of serious bodily harm. Be extra careful if there are children in the vicinity of the area where the equipment or product is used or stored. Check that there are no low-hanging electrical cables within the work area. Exercise caution when working on slopes and close to ditches. Always work alone with equipment or products that are made for working alone. Remove all rubbish from your work area. Keep work areas clean. Always respect the equipment risk zone.

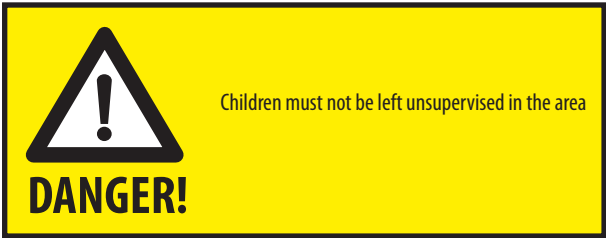

WARNING DECALS

Make sure warning decals are always visible and clean them when necessary. Do not use a high-pressure washer directly on the warning decal. If a decal becomes worn or in any other way unusable, order a new set of decals.

SYMBOL	EXPLANATION
	Warning! Risk of crushing! Do not permit anyone to stand under suspended loads
	Risk zone
	Accident risk for children
	Keep off the equipment

PERSONAL PROTECTION

Always use suitable protection equipment. Do not wear loose clothing or jewellery while working with the equipment. Long hair should be tied up when working with equipment that has moving parts.

STEPS TO TAKE BEFORE USE

Carefully read the instruction manual. Make sure that you understand the instruction manual and warning decals. Use common sense when using the product and suitable personal protective equipment. Always check the performance of the machine combination to be used. It is important that these are in harmony and work satisfactorily together. This is done to ensure the equipment works as expected, and to guarantee the safety of yourself and others. Carry out a visual inspection of the equipment or product before use. Repair or replace damaged or worn parts to reduce the risk of injury.

Grease moving parts and check that all nuts and bolts are tightened. Correct if necessary. Learn and remember the correct working method. Beginners must work slowly until they have learned how the machine or product works. Users/customers are responsible for ensuring users can handle the situation. If users feel that the machine is dangerous to use, it should not be used.



USE/OPERATION

Only those who understand the safety instructions and the instruction manual may use the equipment. Exercise caution and care when working with the equipment and only use it in the way described in the instruction manual. Avoid using the equipment at temperatures lower than -20°C and higher than +30°C.

There is a risk of crushing when working with equipment that has moving parts. Exercise caution when working with equipment with hydraulic hoses as oil under pressure can penetrate the skin. Immediately seek medical attention if this should occur.

As hydraulic systems are never 100% sealed, they must be inspected prior to loading the equipment. Leaks can arise from internal leaks in tractor valves, electrical valves on front-loaders, internal leaks in the equipment's hydraulic cylinders etc. Check for any leaks by fully extending the equipment's cylinders and maintaining pressure or up to one minute. If the cylinder starts to move in the opposite direction, a seal is leaking. Replace the seal or cylinder.

Always work alone with equipment that is made for working alone. Never overload the equipment and respect its risk zone.

CONNECTING/DISCONNECTING EQUIPMENT

Read the tractor's instruction manual before connecting the equipment. The equipment is mounted on the grapple and is adapted for use with Kellfri's grapple range.

NOTE. Measure the width of the bracket behind the insert bucket. There are different measurements on the left and right side.

21-KGS40: 40 adapted for 21-KG08

Right: 16.4 cm

Left: 21 cm

21-KGS50: 50 cm adapted for 21-KG18

Right: 22.5 cm

Left: 25.5 cm

21-KGS70: 70 cm adapted for 21-KG21

Right: 25 cm

Left: 31 cm



AFTER USE

Do not park with a suspended load but with the equipment resting on the ground. Wash down the equipment with water if necessary.

STORAGE

Always store the equipment or product on a dry surface, preferably under a roof when not in use. Ensure that the equipment or product is stable and cannot fall over. Never permit children to play at the storage site. Be aware of the tipping risk!

MAINTENANCE AND SERVICE

Visually inspect/check the equipment on a regular basis. The tractor's engine must be turned off and the equipment lowered to the ground before starting any servicing work. Make sure that the equipment is stable and cannot tip over when carrying out maintenance and service work. Replace damaged or worn parts to reduce the risk of injuries. Grease all moving parts and grease nipples and check hydraulic hoses regularly. The hydraulic system is not adapted for eco oil. Only use spare parts with equal performance to reduce the risk of injuries and breakdowns. All repair work and electrical connections must be carried out by a qualified technician. Check that all nuts and bolts are tightened after use, maintenance and/or service work. Always test the machine before starting work.



RECYCLING

When scrapping, the equipment should be dismantled and transported to a designated recycling station. Contact your municipality for further information.

We are grateful for your help in pointing out any defects in the product supplied to you by Kellfri. Before making a claim read Kellfri's general purchase terms and conditions in our catalogue or on our website www.kellfri.se, as well as in the instruction manual if supplied.

Please provide the details below and append photos as documentation so that we can process your case.

Purchaser:	Customer number:
Address:	Invoice number:
E-mail:	Telephone daytime:

When was the product supplied?	When was the product put into operation?	Was the product working on delivery?
---------------------------------------	---	---

Product/part for which a claim is being made:

Description of fault:

Describe the course of events:

Miscellaneous:

Send the claim form and a photograph to:

Kellfri AB
Service department
Munkatorpsgratan 6
SE-532 37 Skara, Sweden

Or e-mail Service.
info@kellfri.se

Signature:	Date:
-------------------	--------------

WARRANTY TERMS AND CONDITIONS

The warranty's validity	- Kellfri's warranty is valid for 12 months from the date of purchase
The warranty covers	- Reimbursement for parts replaced after verified material or manufacturing defect.
The warranty does not cover	<ul style="list-style-type: none">- Labour costs- Travel costs- Machines on which the purchaser has made/commissioned modifications.- Any additional costs arising as a result of damage to the machine.- Damage due to normal wear and tear of the machine, substandard servicing, the user's inexperience or use of spare parts that are not original.- Wear parts such as hoses, seals, oil and belts.

EC DECLARATION OF CONFORMITY FOR MACHINERY, ORIGINAL

According to 2006/42/EG, Appendix 2A
Kellfri AB
Munkatorpsgratan 6
SE-532 37 Skara, Sweden

Hereby declares that the machine
Name: 21-KGS40, 21-KGS50, 21-KGS70
Type: Insert bucket

Conforms with all applicable requirements in the Machinery Directive 2006/42/EC.
Other equipment must comply with the Machinery Directive's requirements.



Tina Baudtler, CEO

Kellfri AB has a policy of continuous product development and therefore reserves the right to make modifications, e.g. to the design and appearance of the product, without prior notice.

CUSTOMER SERVICE

You are always welcome to give feedback or ask us about our equipment and products.

Kellfri AB
Phone: +46 (0) 511 242 50
Fax: +46 (0) 511 168 33
E-mail: info@kellfri.se

Kellfri®

Latest version: 22 October 2015