

Smartphone Settings for Robotics

<p>1、Connect Wifi UnitreeRoboticsA1-XXX (XXX is serial number), click .</p>	
<p>2、Check whether IP address is in “123” segment, if yes, skip to step 5; if not, continue next step.</p>	

3、Choose Configure IP-->>Manual.

< 返回

UnitreeRoboticsA1-xxx

忽略此网络

自动加入

低数据模式

“低数据模式”可帮助 iPhone 上的 App 减少网络数据的使用。

IPv4 地址

配置 IP

自动 >

IP 地址

192.168.12.98

子网掩码

255.255.255.0

路由器

192.168.12.1

续租

4Change IP address to 192.168.123.50.
Change subnet mask to 255.255.255.0.

< 返回

配置 IPv4

存储

自动

手动

BootP


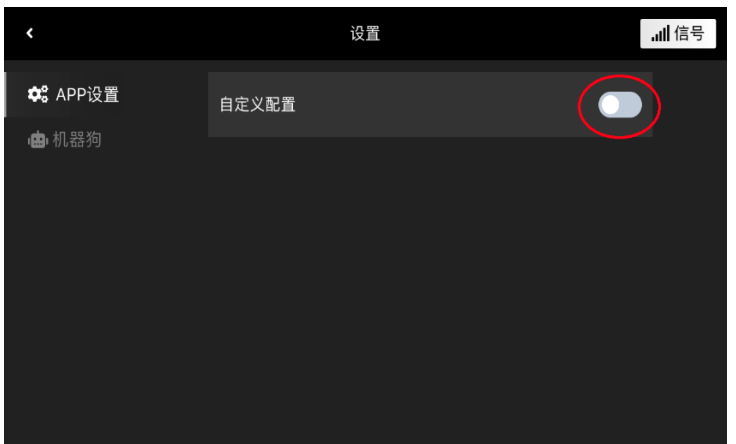

手动 IP

IP 地址

192.168.123.50←←0.0.0.0

子网掩码

255.255.255.0←←255.255.0.0

<p>5、Open UnitreeRobotics application, go to setting.</p>	
<p>6、Choose Enable Customization.</p>	
<p>7、Change IP address 192.168.12.1 to 192.168.123.12.</p>	
<p>8、Setting complete.</p>	