





10 Steps to Changing Oil

1


Open the hood.

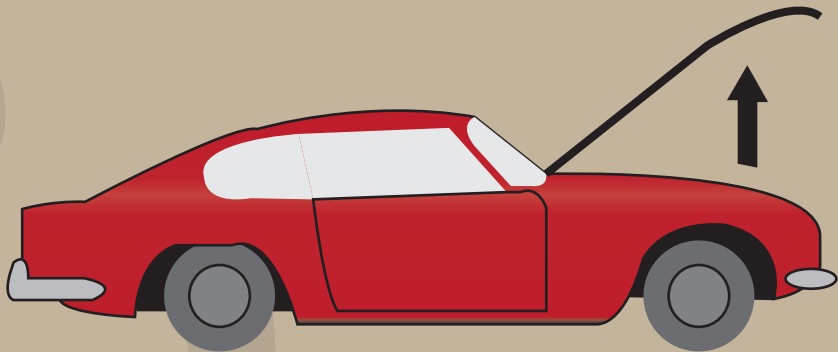


2 Locate and pullout
the dipstick.

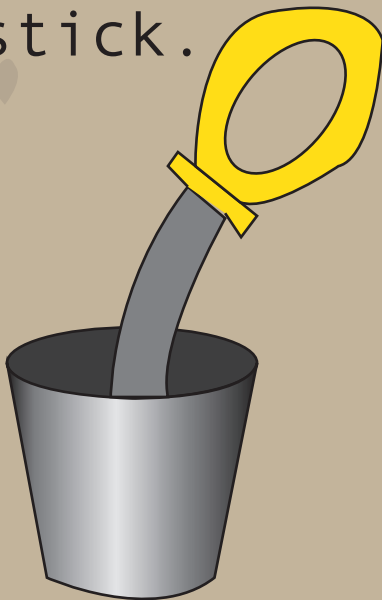


3 Check to see if your oil is dirty. If it is not dirty skip steps 4-10.

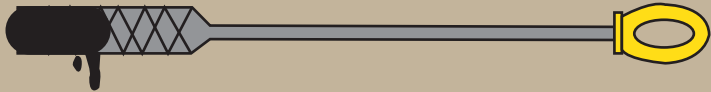

4 Place your oil pan under the car. Then locate and remove the Oil Plug.

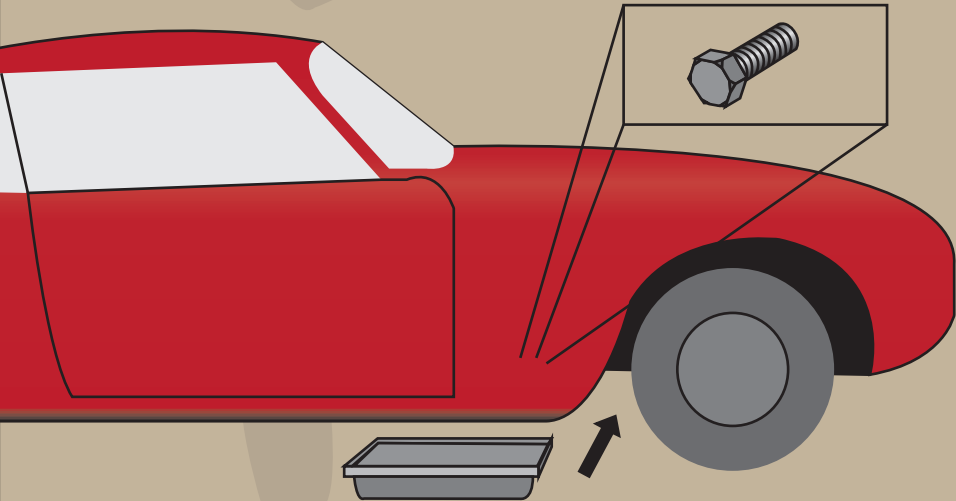


Let the oil drain into the pan.

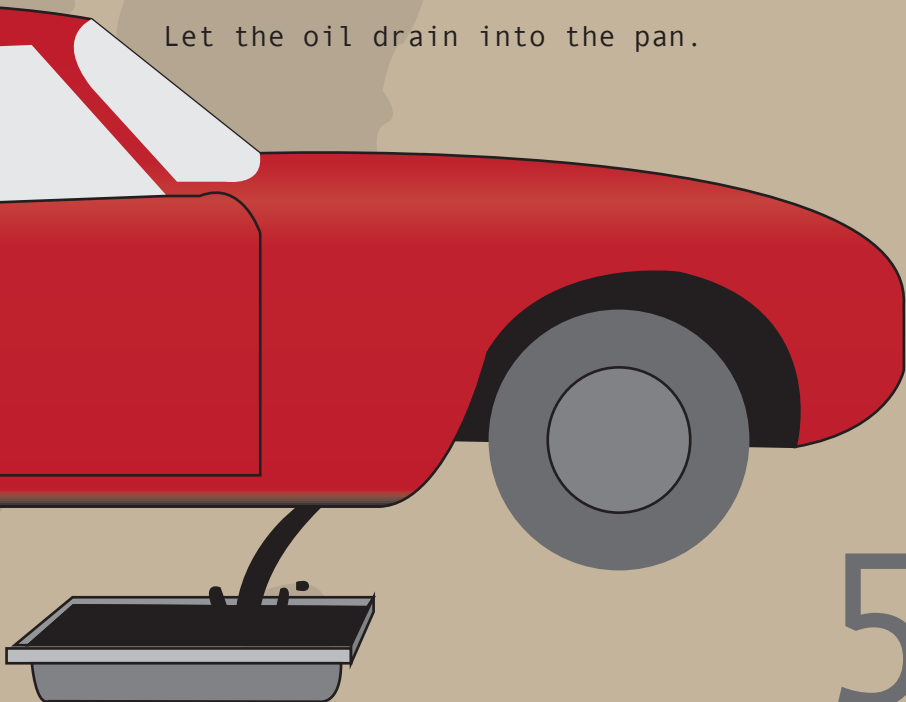

5


6

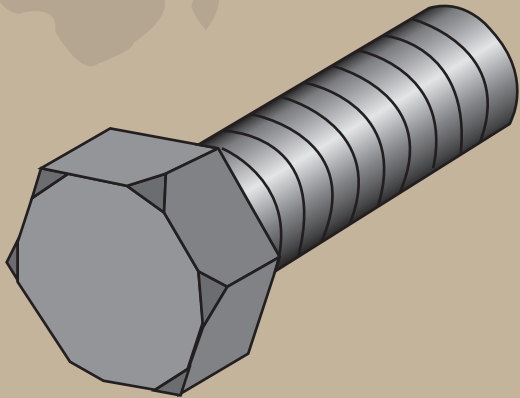


Put the Oil Plug back in place.

7

Find and remove the Oil Cap.

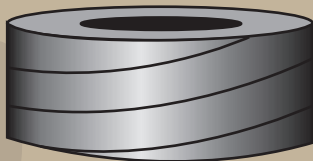



8

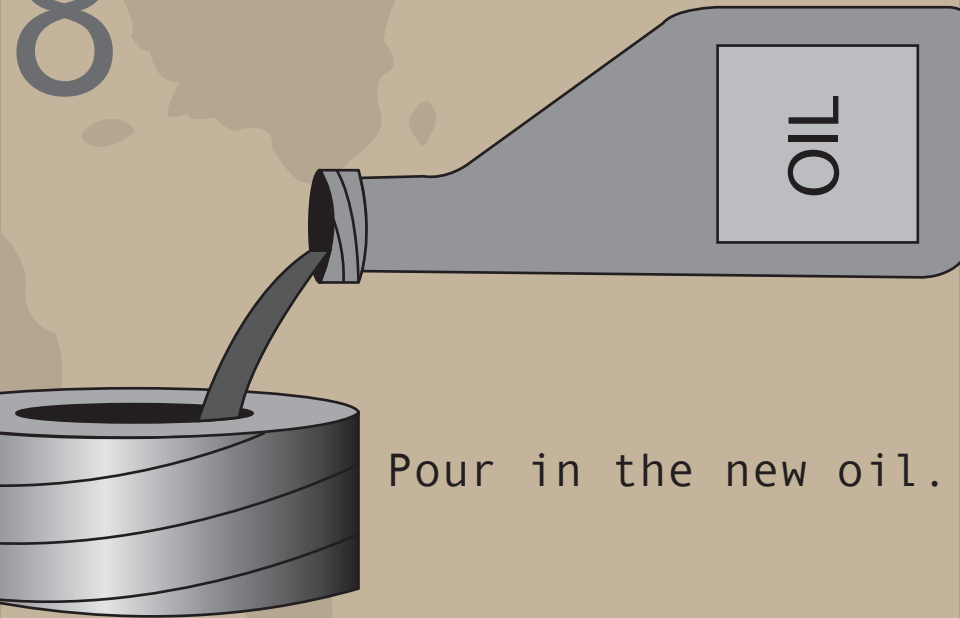

Pour in the new oil.

9

Put the Oil Cap back on.

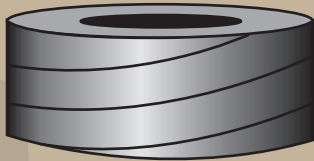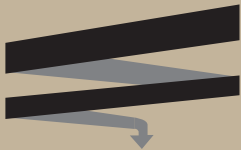

10

Close the hood.
Your done!

