

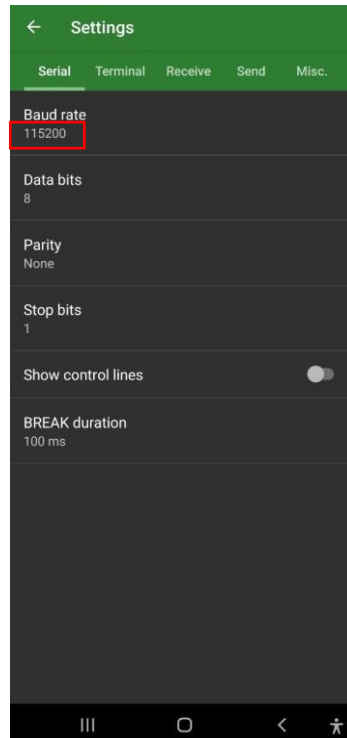


## Connect ATS25 to the smartphone to output decoded signals (FT8,RTTY...)

Important! The creator of this document assumes no liability for the correctness of the installation and schematics shown. You are responsible for your own actions and if the device is damaged.

Connect your smartphone to the ATS25 via an OTG adapter and USB cable and install the app (Android) [Serial USB Terminal](#).

Open the settings and enter a baud rate of 115200. Then press the connection icon in the app. After that everything should work.

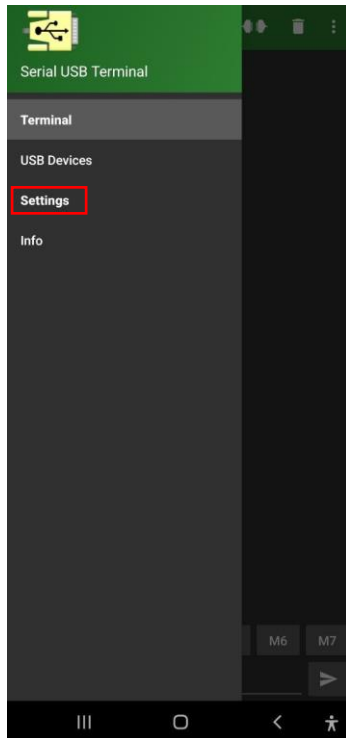

OTG Adapter

<https://amzn.to/3qEPyEI>

