

FLUX VALVE

ON




OFF

PITCH TRIM
INDICATOR

ROLL TRIM
INDICATOR


NAV / STR
NAV + STR

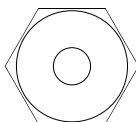

NAV


OFF

TAXI LT
ON

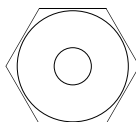

OFF

LGD LT
ON

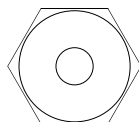


OFF

FLASH


IGNITION

MAG

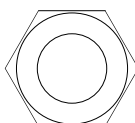


OFF

ELEC

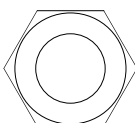

OFF

STARTER




OFF

ENABLE

FLAPS

UP

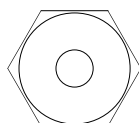

DOWN