

# RX Family

R01AN2025EJ0126

Rev.1.26

May 31, 2019

## USB Basic Host and Peripheral Driver using Firmware Integration Technology

### Introduction

This application note describes the USB basic firmware, which utilizes Firmware Integration Technology (FIT). This module performs hardware control of USB communication. It is referred to below as the USB-BASIC-F/W FIT module.

### Target Device

RX65N/RX651 Group  
RX64M Group  
RX71M Group  
RX66T Group  
RX72T Group

When using this application note with other Renesas MCUs, careful evaluation is recommended after making modifications to comply with the alternate MCU.

### Related Documents

1. Universal Serial Bus Revision 2.0 specification  
【<http://www.usb.org/developers/docs/>】
2. RX64M Group User's Manual: Hardware (Document number. R01UH0377)
3. RX71M Group User's Manual: Hardware (Document number. R01UH0493)
4. RX65N/RX651 User's Manual: Hardware (Document number. R01UH0590)
5. RX65N/RX651-2M User's Manual: Hardware (Document number. R01UH0659)
6. RX66T User's Manual: Hardware (Document number. R01UH0749)
7. RX72T User's Manual: Hardware (Document number. R01UH0803)

Renesas Electronics Website

【<http://www.renesas.com/>】

USB Devices Page

【<http://www.renesas.com/prod/usb/>】

## Contents

1. Overview .....	3
2. Peripheral .....	7
3. Host .....	14
4. API Functions .....	21
5. Callback Function (RTOS only) .....	62
6. Return Value of R_USB_GetEvent Function / Retrieval of USB Completion Events .....	63
7. Device Class Types .....	67
8. Configuration (r_usb_basic_config.h) .....	68
9. Structures .....	73
10. USB Class Requests .....	77
11. DTC/DMA Transfer .....	84
12. Additional Notes .....	86
13. Creating an Application Program .....	87
14. Program Sample .....	95

## 1. Overview

The USB-BASIC-F/W FIT module performs USB hardware control. The USB-BASIC-F/W FIT module operates in combination with one type of sample device class drivers provided by Renesas.

This module supports the following functions.

### <Overall>

- Supporting USB Host or USB Peripheral.
- Device connect/disconnect, suspend/resume, and USB bus reset processing.
- Control transfer on pipe 0.
- Data transfer on pipes 1 to 9. (Bulk or Interrupt transfer)
- This driver supports RTOS version (hereinafter called "RTOS") and Non-OS version (hereinafter called "Non-OS"). RTOS uses the realtime OS (FreeRTOS). Non-OS does not use the real time OS.

### <Host mode>

- In host mode, enumeration as Low-speed/Full-speed/Hi-speed device (However, operating speed is different by devices ability.)
- Transfer error determination and transfer retry.

### <Peripheral mode>

- In peripheral mode, enumeration as USB Host of USB1.1/2.0/3.0.

## 1.1 Note

1. This application note is not guaranteed to provide USB communication operations. The customer should verify operations when utilizing the USB device module in a system and confirm the ability to connect to a variety of different types of devices.
2. The terms "USB0 module" and "USB1 module" used in this document refer to different modules for each MCU. The following is a reference.

	MCU	USB Module Name
USB0 module (Start address: 0xA0000)	RX65N/RX651	USBb module
	RX64M	USBb module
	RX71M	USBb module
	RX66T	USBb module
	RX72T	USBb module
USB1 module (Start address: 0xA0200/0xD0400)	RX64M	USBa module
	RX71M	USBa module

Note:

The RX65N/RX651 MCU and RX66T/RX72T MCU do not support the USB1 module.

## 1.2 Limitations

This driver is subject to the following limitations.

1. In USB host mode, the module does not support suspend/resume of the connected hub or devices connected to the hub's down ports.
2. In USB host mode, the module does not support suspend during data transfer. Execute suspend only after confirming that data transfer is complete.
3. Multiple configurations are not supported.
4. Multiple interfaces are not supported.
5. The USB host and USB peripheral modes cannot operate at the same time.
6. When using the USB hub for DTC/DMA transfer, only the first USB device connected to the USB hub will be able to send data using DTC/DMA transfer. All subsequent data transfers will be implemented with the CPU transfer function.
7. This USB driver does not support the error processing when the out of specification values are specified to the arguments of each function in the driver.

8. In the case of Vendor class, the user can not use the USB Hub.
9. This driver does not support the CPU transfer using D0FIFO/D1FIFO register.
10. This driver does not support RTOS when using RX66T/RX72T.
11. This driver does not support RTOS when using GCC or IAR compiler.

### 1.3 Terms and Abbreviations

APL	:	Application program
CDP	:	Charging Downstream Port
DCP	:	Dedicated Charging Port
HBC	:	Host Battery Charging control
HCD	:	Host Control Driver for USB-BASIC-FW
HDCCD	:	Host Device Class Driver (device driver and USB class driver)
HUBCD	:	Hub Class Driver
H/W	:	Renesas USB device
IDE	:	Integrated Development Environment
MGR	:	Peripheral Device State Manager for HCD
Non-OS	:	USB Driver for OS-less
PBC	:	Peripheral Battery Charging control
PCD	:	Peripheral Control Driver of USB-BASIC-FW
PDCD	:	Peripheral Device Class Driver (Device driver and USB class driver)
RSK	:	Renesas Starter Kits
RTOS	:	USB Driver for the real-time OS
USB-BASIC-FW	:	USB Basic Host and Peripheral Driver
Scheduler	:	Used to schedule functions, like a simplified OS.
Task	:	Processing unit

### 1.4 USB-BASIC-FW FIT module

User needs to integrate this module to the project using `r_bsp`. User can control USB H/W by using this module API after integrating to the project.

## 1.5 Software Configuration

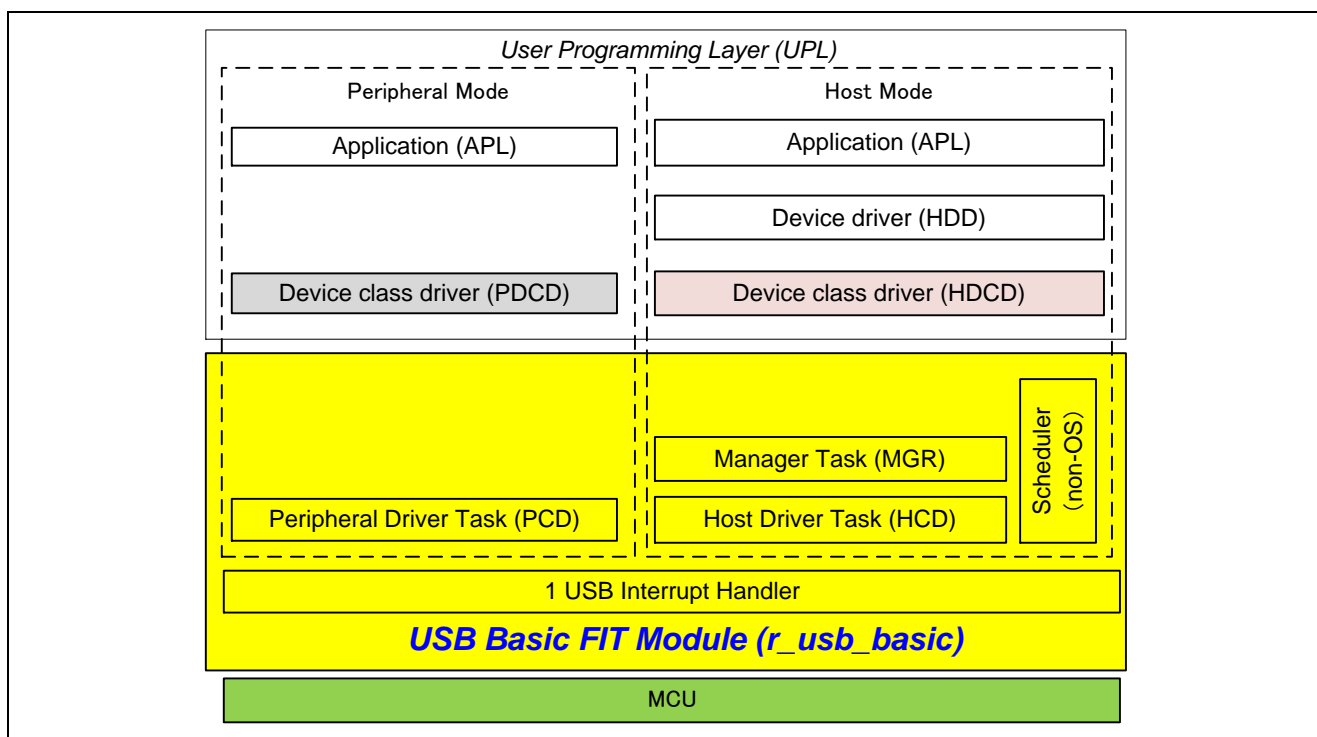


Figure 1-1 Task Configuration of USB-BASIC-FW (Non-OS)

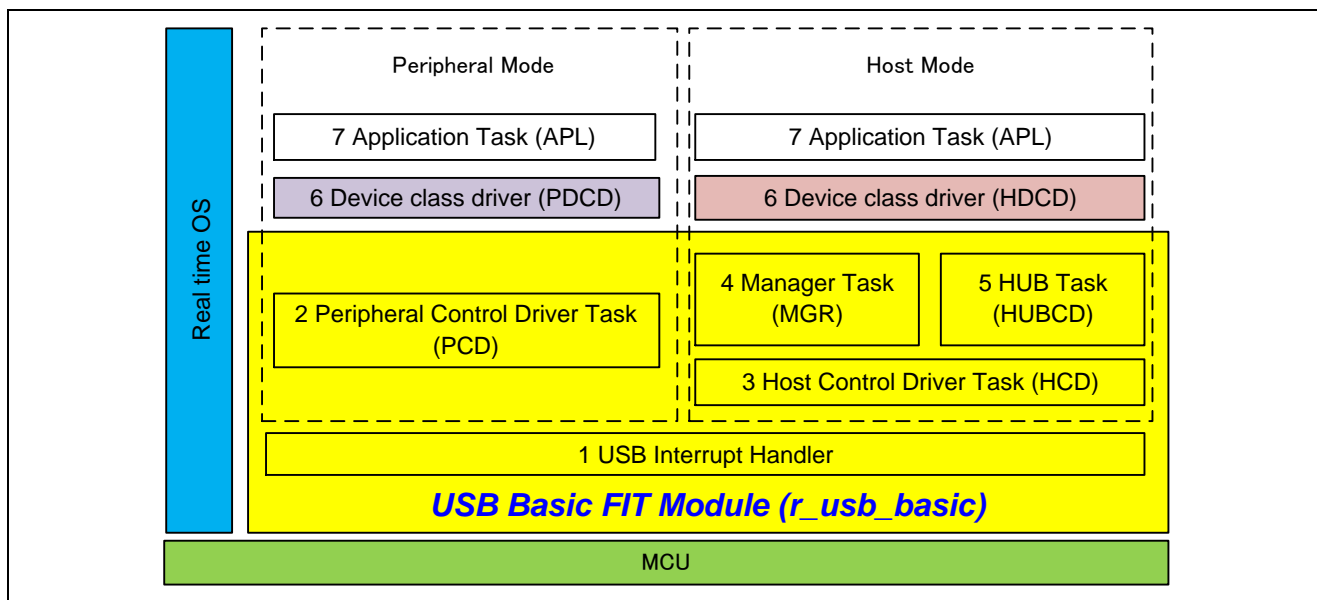


Figure 1-2 Task Configuration of USB-BASIC-FW (RTOS)

Table 1-1 Software function overview

No	Module Name	Function
1	H/W Access Layer	Hardware control
2	USB Interrupt Handler	USB interrupt handler (USB packet transmit/receive end and special signal detection)
3	Peripheral Control Driver (PCD)	Hardware control in peripheral mode Peripheral transaction management
4	Host control driver (HCD)	Hardware control in host mode Host transaction management
5	Host Manager (MGR)	Device state management Enumeration HCD/HUBCD control message determination
6	HUB Driver (HUBCD)	HUB down port device state management HUB down port enumeration
7	Device Class Driver	Provided by the customer as appropriate for the system.
8	Device Driver	Provided by the customer as appropriate for the system.
9	Application	Provided by the customer as appropriate for the system.

## 1.6 Scheduler Function and Tasks

This driver (Non-OS) manages requests generated by tasks and hardware according to their relative priority by using scheduler. When multiple requests are generated to multiple tasks with the same priority, they are executed using a FIFO configuration. Requests between tasks are implemented by transmitting and receiving messages.

## 1.7 Pin Setting

To use the USB FIT module, input/output signals of the peripheral function has to be allocated to pins with the multi-function pin controller (MPC). Do the pin setting used in thie module before calling *R\_USB\_Open* function.

## 2. Peripheral

### 2.1 Peripheral Control Driver (PCD)

#### 2.1.1 Basic functions

PCD is a program for controlling the hardware. PCD analyzes requests from PDCD (not part of the USB-BASIC-F/W FIT module) and controls the hardware accordingly. It also sends notification of control results using a user provided call-back function. PCD also analyzes requests from hardware and notifies PDCD accordingly.

PCD accomplishes the following:

1. Control transfers. (Control Read, Control Write, and control commands without data stage.)
2. Data transfers. (Bulk, interrupt) and result notification.
3. Data transfer suspensions. (All pipes.)
4. USB bus reset signal detection and reset handshake result notifications.
5. Suspend/resume detections.
6. Attach/detach detection using the VBUS interrupt.
7. Hardware control when entering and returning from the clock stopped (low-power sleep mode) state.

#### 2.1.2 Issuing requests to PCD

API functions are used when hardware control requests are issued to the PCD and when performing data transfers. Refer to chapter 4, **API Functions** for the API function.

#### 2.1.3 USB requests

This driver supports the following standard requests.

1. GET\_STATUS
2. GET\_DESCRIPTOR
3. GET\_CONFIGURATION
4. GET\_INTERFACE
5. CLEAR\_FEATURE
6. SET\_FEATURE
7. SET\_ADDRESS
8. SET\_CONFIGURATION
9. SET\_INTERFACE

This driver answers requests other than the above with a STALL response.

Note that, refer to chapter 10, **USB Class Requests** for the processing method when this driver receives the class request or vendor request.

## 2.2 API Information

This Driver API follows the Renesas API naming standards.

### 2.2.1 Hardware Requirements

This driver requires your MCU support the following features:

- USB

### 2.2.2 Software Requirements

This driver is dependent upon the following packages:

- r\_bsp
- r\_dtc\_rx (using DTC transfer)
- r\_dmaca\_rx (using DMA transfer)

### 2.2.3 Operating Confirmation Environment

Table 2-1 shows the operating confirmation environment of this driver.

Table 2-1 Operating Confirmation Environment

Item	Contents
C compiler	Renesas Electronics C/C++ compiler for RX Family V.3.01.00 (The option "-lang=C99" is added to the default setting of IDE)
	GCC for Renesas RX 4.08.04.201902 (The option "-std=gnu99" is added to the default setting of IDE)
	IAR C/C++ Compiler for Renesas RX version 4.10.01
Real-Time OS	FreeRTOS V.10.0.0
Endian	Little Endian, Big Endian
USB Driver Revision Number	Rev.1.26
Using Board	Renesas Starter Kits for RX64M Renesas Starter Kits for RX71M Renesas Starter Kits for RX65N, Renesas Starter Kits for RX65N-2MB Renesas Starter Kits for RX72T
Host Environment	The operation of this USB Driver module connected to the following OSes has been confirmed. <ol style="list-style-type: none"> <li>1. Windows® 7</li> <li>2. Windows® 8.1</li> <li>3. Windows® 10</li> </ol>

### 2.2.4 Usage of Interrupt Vector

Table 2-2 shows the interrupt vector which this driver uses.

Table 2-2 List of Usage Interrupt Vectors

Device	Contents
RX64M RX71M	USBIO(GROUPB) Interrupt (Vector number: 189, Group interrupt source number : 62) USB D0FIFO0 Interrupt (Vector number: 34) / USB D1FIFO0 Interrupt (Vector number: 35) USB R0 Interrupt (Vector number: 90)
	USBAR Interrupt (Vector number: 94) USB D0FIFO2 Interrupt (Vector number: 32) / USB D1FIFO2 Interrupt (Vector number: 33)



RX65N RX651	USBIO(GROUPB) Interrupt (Vector number: 185, Group interrupt source number : 62) USB D0FIFO0 Interrupt (Vector number: 34) / USB D1FIFO0 Interrupt (Vector number: 35) USB R0 Interrupt (Vector number: 90)
RX66T RX72T	USBIO Interrupt (Vector number: 174) / USB R0 Interrupt (Vector number: 90) USB D0FIFO0 Interrupt (Vector number: 34) / USB D1FIFO0 Interrupt (Vector number: 35)

### 2.2.5 Timer

This driver (FreeRTOS) uses a timer (CMT) in RX MCU. If a timer is to be used in the user system, use a timer other than a timer is used by this driver.

### 2.2.6 Header Files

All API calls and their supporting interface definitions are located in `r_usb_basic_if.h`.

### 2.2.7 Integer Types

This project uses ANSI C99 “Exact width integer types” in order to make the code clearer and more portable. These types are defined in `stdint.h`.

### 2.2.8 Compile Setting

For compile settings, refer to chapter 8, **Configuration**.

### 2.2.9 ROM / RAM Size

The follows show ROM/RAM size of this driver.

#### 1. CC-RX (Optimization Level: Default)

##### (1). Non-OS

	Checks arguments	Does not check arguments
ROM size	20.0K bytes (Note 3)	19.6K bytes (Note 4)
RAM size	5.2K bytes	5.2K bytes

##### (2). RTOS

	Checks arguments	Does not check arguments
ROM size	34.3K bytes (Note 3)	33.7K bytes (Note 4)
RAM size	24.2K bytes	24.2K bytes

#### 2. GCC (Optimization Level: -O2)

	Checks arguments	Does not check arguments
ROM size	25.0K bytes (Note 3)	24.6K bytes (Note 4)
RAM size	5.0K bytes	5.0K bytes

#### 3. IAR (Optimiza Level: Medium)

	Checks arguments	Does not check arguments
ROM size	18.5K bytes (Note 3)	18.2K bytes (Note 4)
RAM size	3.7K bytes	3.7K bytes

Note:

1. ROM/RAM size for BSP and the vendor class is included in the above size.
2. The above is the size when specifying RX V2 core option.

3. The ROM size of “Checks arguments” is the value when *USB\_CFG\_ENABLE* is specified to *USB\_CFG\_PARAM\_CHECKING* definition in *r\_usb\_basic\_config.h* file.
4. The ROM size of “Does not check arguments” is the value when *USB\_CFG\_DISABLE* is specified to *USB\_CFG\_PARAM\_CHECKING* definition in *r\_usb\_basic\_config.h* file.
5. The result of RTOS includes the ROM/RAM size of the real-time OS.

---

## 2.2.10 Argument

---

For the structure used in the argument of API function, refer to chapter 9, **Structures**.

---

## 2.2.11 Adding the FIT Module to Your Project

---

This module must be added to each project in which it is used. Renesas recommends the method using the Smart Configurator described in (1) or (3) below. However, the Smart Configurator only supports some RX devices. Please use the methods of (2) or (4) for RX devices that are not supported by the Smart Configurator.

- (1) Adding the FIT module to your project using the Smart Configurator in e<sup>2</sup> studio  
By using the Smart Configurator in e<sup>2</sup> studio, the FIT module is automatically added to your project. Refer to “Renesas e<sup>2</sup> studio Smart Configurator User Guide (R20AN0451)” for details.
- (2) Adding the FIT module to your project using the FIT Configurator in e<sup>2</sup> studio  
By using the FIT Configurator in e<sup>2</sup> studio, the FIT module is automatically added to your project. Refer to “Adding Firmware Integration Technology Modules to Projects (R01AN1723)” for details.
- (3) Adding the FIT module to your project using the Smart Configurator in CS+  
By using the Smart Configurator Standalone version in CS+, the FIT module is automatically added to your project. Refer to “Renesas e<sup>2</sup> studio Smart Configurator User Guide (R20AN0451)” for details.
- (4) Adding the FIT module to your project on CS+  
In CS+, please manually add the FIT module to your project. Refer to “Adding Firmware Integration Technology Modules to CS+ Projects (R01AN1826)” for details.

## 2.3 API (Application Programming Interface)

For the detail of the API function, refer to chapter 4, **API Functions**.

## 2.4 Class Request

For the processing method when this driver receives the class request, refer to chapter 10, **USB Class Requests**.

## 2.5 Descriptor

### 2.5.1 String Descriptor

This USB driver requires each string descriptor that is constructed to be registered in the string descriptor table. The following describes how to register a string descriptor.

1. First construct each string descriptor. Then, define the variable of each string descriptor in `uint8_t*` type.

#### Example descriptor construction)

```
uint8_t smp_str_descriptor0[] {
    0x04, /* Length */
    0x03, /* Descriptor type */
    0x09, 0x04 /* Language ID */
};
uint8_t smp_str_descriptor1[] =
{
    0x10, /* Length */
    0x03, /* Descriptor type */
    'R', 0x00,
    'E', 0x00,
    'N', 0x00,
    'E', 0x00,
    'S', 0x00,
    'A', 0x00,
    'S', 0x00
};
uint8_t smp_str_descriptor2[] =
{
    0x12, /* Length */
    0x03, /* Descriptor type */
    'C', 0x00,
    'D', 0x00,
    'C', 0x00,
    '_', 0x00,
    'D', 0x00,
    'E', 0x00,
    'M', 0x00,
    'O', 0x00
};
```

2. Set the top address of each string descriptor constructed above in the string descriptor table. Define the variables of the string descriptor table as `uint8_t*` type.

#### Note:

The position set for each string descriptor in the string descriptor table is determined by the index values set in the descriptor itself (`iManufacturer`, `iConfiguration`, etc.).

For example, in the table below, the manufacturer is described in `smp_str_descriptor1` and the value of `iManufacturer` in the device descriptor is “1”. Therefore, the top address “smp\_str\_descriptor1” is set at Index “1” in the string descriptor table.

```
/* String Descriptor table */
uint8_t *smp_str_table[] =
{
```

```
smp_str_descriptor0, /* Index: 0 */  
smp_str_descriptor1, /* Index: 1 */  
smp_str_descriptor2, /* Index: 2 */  
};
```

3. Set the top address of the string descriptor table in the *usb\_descriptor\_t* structure member (*pp\_string*). Refer to chapter **9.4, usb\_descriptor\_t structure** for more details concerning the *usb\_descriptor\_t* structure.
4. Set the number of the string descriptor which set in the string descriptor table to *usb\_descriptor\_t* structure member (*num\_string*). In the case of the above example, the value 3 is set to the member (*num\_string*).

### 2.5.2 Other Descriptors

1. Please construct the device descriptor, configuration descriptor, and qualifier descriptor based on instructions provided in the **Universal Serial Bus Revision 2.0 specification**(<http://www.usb.org/developers/docs/>) Each descriptor variable should be defined as `uint8_t*` type.
2. The top address of each descriptor should be registered in the corresponding *usb\_descriptor\_t* function member. For more details, refer to chapter **9.4, usb\_descriptor\_t structure**.

## 2.6 Peripheral Battery Charging (PBC)

This driver supports PBC.

PBC is the H/W control program for the target device that operates the Charging Port Detection (CPD) defined by the USB Battery Charging Specification (Revision 1.2).

You can get the result of CPD by calling *R\_USB\_GetInformation* function. For *R\_USB\_GetInformation* function, refer to chapter **4.13**.

Note:

RX65N/RX651 and RX66T/RX72T do not support PBC.

The processing flow of PBC is shown in Figure 2-1.

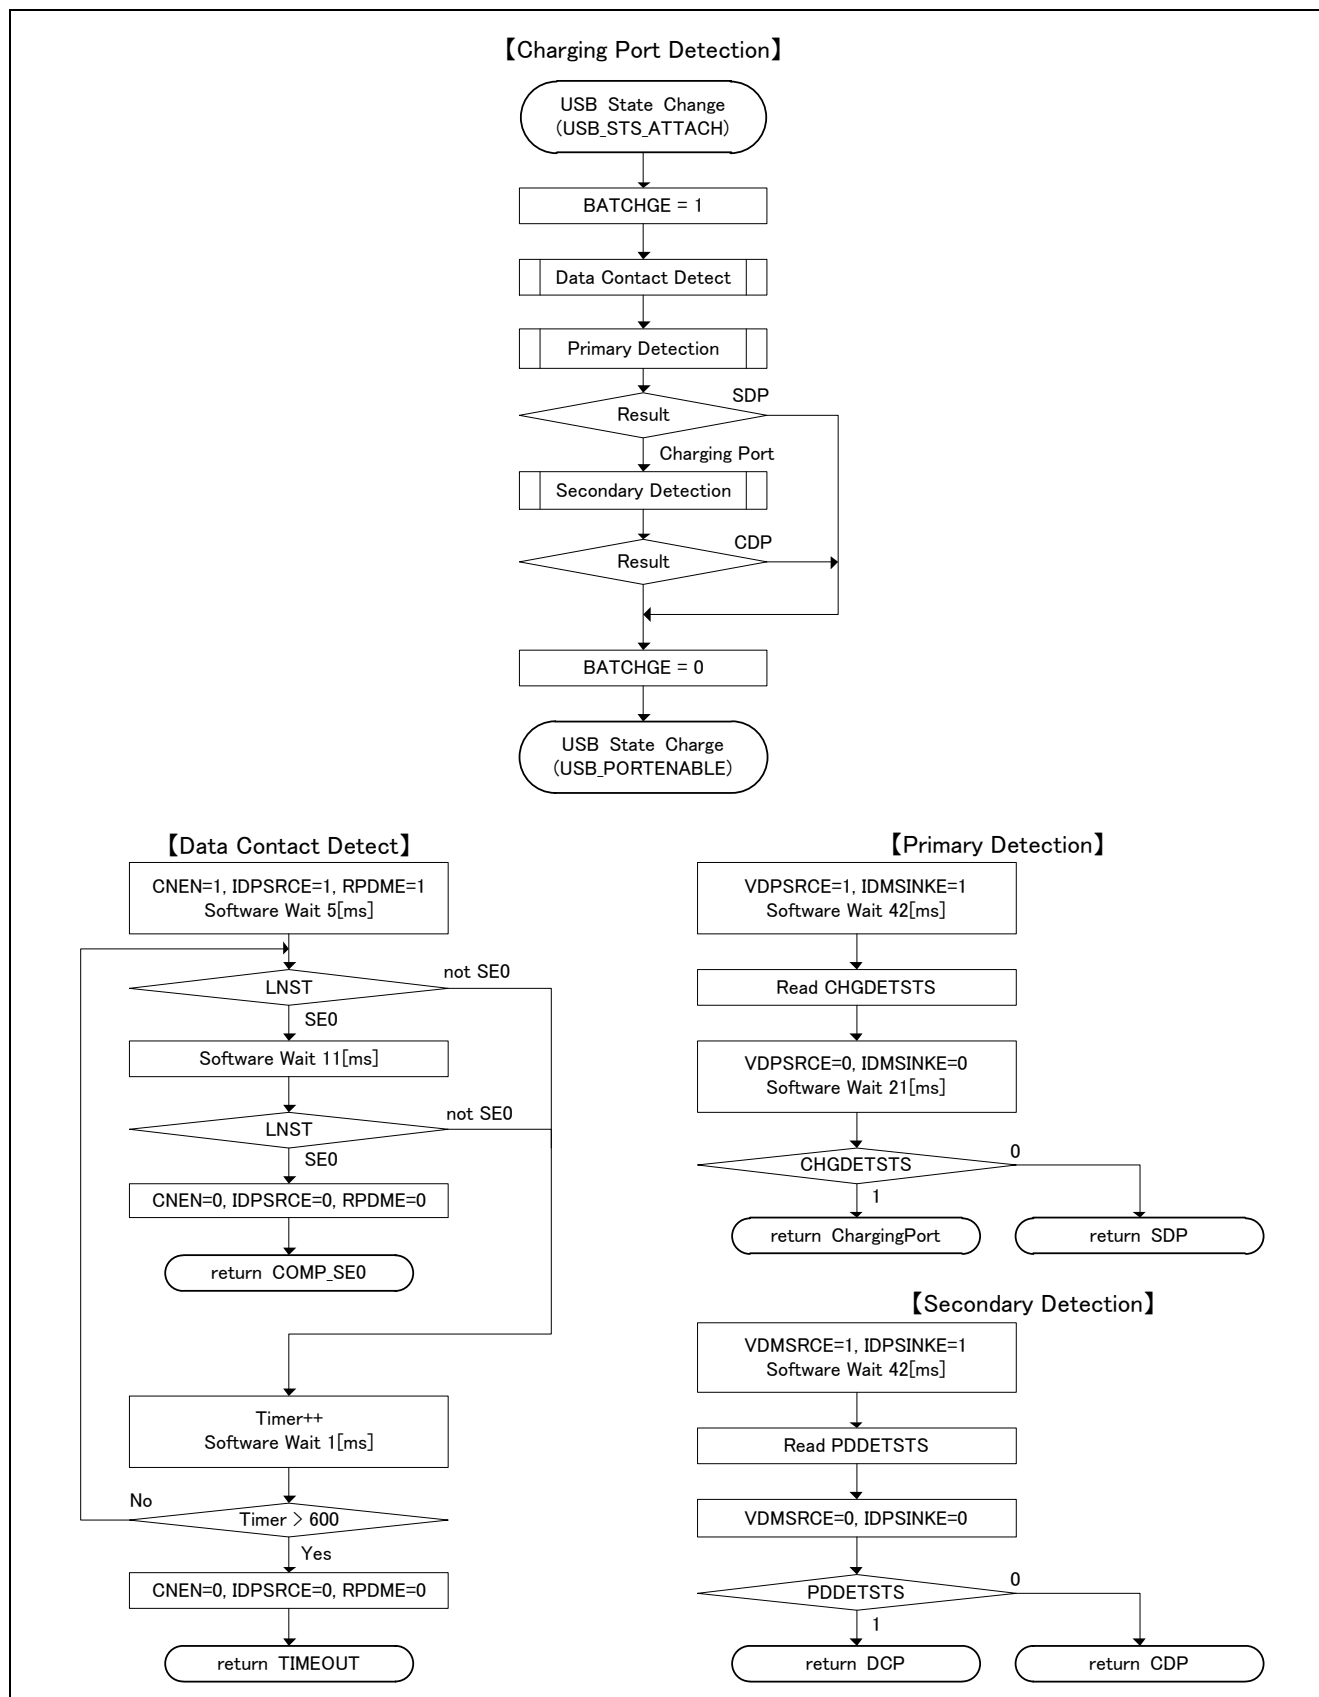


Figure 2-1 PBC processing flow

### 3. Host

#### 3.1 Host Control Driver (HCD)

##### 3.1.1 Basic function

HCD is a program for controlling the hardware. The functions of HCD are shown below.

1. Control transfer (Control Read, Control Write, No-data Control) and result notification.
2. Data transfer (bulk, interrupt) and result notification.
3. Data transfer suspension (all pipes).
4. USB communication error detection and automatic transfer retry
5. USB bus reset signal transmission and reset handshake result notification.
6. Suspend signal and resume signal transmission.
7. Attach/detach detection using ATCH and DTCH interrupts.

#### 3.2 Host Manager (MGR)

##### 3.2.1 Basic function

The functions of MGR are shown below.

1. Registration of HDCCD.
2. State management for connected devices.
3. Enumeration of connected devices.
4. Searching for endpoint information from descriptors.

##### 3.2.2 USB Standard Requests

MGR enumerates connected devices. The USB standard requests issued by MGR are listed below.

GET\_DESCRIPTOR (Device Descriptor)  
SET\_ADDRESS  
GET\_DESCRIPTOR (Configuration Descriptor)  
SET\_CONFIGURATION

### 3.3 API Information

This Driver API follows the Renesas API naming standards.

#### 3.3.1 Hardware Requirements

This driver requires your MCU support the following features:

- USB

#### 3.3.2 Software Requirements

This driver is dependent upon the following packages:

- r\_bsp
- r\_dtc\_rx (using DTC transfer)
- r\_dmaca\_rx (using DMA transfer)

#### 3.3.3 Operating Confirmation Environment

Table 3-1 shows the operating confirmation environment of this driver.

Table 3-1 Operating Confirmation Environment

Item	Contents
C compiler	Renesas Electronics C/C++ compiler for RX Family V.3.01.00 (The option "-lang=C99" is added to the default setting of IDE)
	GCC for Renesas RX 4.08.04.201902 (The option "-std=gnu99" is added to the default setting of IDE)
	IAR C/C++ Compiler for Renesas RX version 4.10.01
Real-Time OS	FreeRTOS V.10.0.0
Endian	Little Endian, Big Endian
USB Driver Revision Number	Rev.1.26
Using Board	Renesas Starter Kits for RX64M Renesas Starter Kits for RX71M Renesas Starter Kits for RX65N, Renesas Starter Kits for RX65N-2MB Renesas Starter Kits for RX72T

#### 3.3.4 Usage of Interrupt Vector

Table 3-2 shows the interrupt vector which this driver uses.

Table 3-2 List of Usage Interrupt Vectors

Device	Contents
RX64M RX71M	USBIO(GROUPB) Interrupt (Vector number: 189, Group interrupt source number : 62) USB D0FIFO0 Interrupt (Vector number: 34) / USB D1FIFO0 Interrupt (Vector number: 35) USB R0 Interrupt (Vector number:90)
	USBAR Interrupt (Vector number: 94) USB D0FIFO2 Interrupt (Vector number: 32) / USB D1FIFO2 Interrupt (Vector number: 33)
RX65N RX651	USBIO(GROUPB) Interrupt (Vector number: 185, Group interrupt source number : 62) USB D0FIFO0 Interrupt (Vector number: 34) / USB D1FIFO0 Interrupt (Vector number: 35) USB R0 Interrupt (Vector number:90)
	USBIO Interrupt (Vector number: 174) / USB R0 Interrupt (Vector number: 90)
RX66T RX72T	USB D0FIFO0 Interrupt (Vector number: 34) / USB D1FIFO0 Interrupt (Vector number: 35)

### 3.3.5 Timer

This driver (FreeRTOS) uses a timer (CMT) in RX MCU. If a timer is to be used in the user system, use a timer other than a timer is used by this driver.

### 3.3.6 Header Files

All API calls and their supporting interface definitions are located in *r\_usb\_basic\_if.h*.

### 3.3.7 Integer Types

This project uses ANSI C99 “Exact width integer types” in order to make the code clearer and more portable. These types are defined in *stdint.h*.

### 3.3.8 Compile Setting

For compile settings, refer to chapter 8, Configuration..

### 3.3.9 ROM / RAM Size

The follows show ROM/RAM size of this driver.

#### 1. CC-RX (Optimization Level: Default)

##### (1). Non-OS

	Checks arguments	Does not check arguments
ROM size	35.0K bytes (Note 3)	34.5K bytes (Note 4)
RAM size	12.9K bytes	12.9K bytes

##### (2). RTOS

	Checks arguments	Does not check arguments
ROM size	46.5K bytes (Note 3)	45.8K bytes (Note 4)
RAM size	36.9K bytes	36.9K bytes

#### 2. GCC (Optimization Level: -O2)

	Checks arguments	Does not check arguments
ROM size	40.6K bytes (Note 3)	40.1K bytes (Note 4)
RAM size	12.8K bytes	12.8K bytes

#### 3. IAR (Optimization Level: Medium)

	Checks arguments	Does not check arguments
ROM size	32.2K bytes (Note 3)	31.9K bytes (Note 4)
RAM size	11.5K bytes	11.5K bytes

Note:

1. ROM/RAM size for BSP and the vendor class is included in the above size.
2. The above is the size when specifying RX V2 core option.
3. The ROM size of “Checks arguments” is the value when *USB\_CFG\_ENABLE* is specified to *USB\_CFG\_PARAM\_CHECKING* definition in *r\_usb\_basic\_config.h* file.
4. The ROM size of “Does not check arguments” is the value when *USB\_CFG\_DISABLE* is specified to *USB\_CFG\_PARAM\_CHECKING* definition in *r\_usb\_basic\_config.h* file.
5. The result of RTOS includes the ROM/RAM size of the real-time OS.



---

### 3.3.10 Argument

---

For the structure used in the argument of API function, refer to chapter 9, **Structures**.

---

### 3.3.11 Adding the FIT Module to Your Project

---

This module must be added to each project in which it is used. Renesas recommends the method using the Smart Configurator described in (1) or (3) below. However, the Smart Configurator only supports some RX devices. Please use the methods of (2) or (4) for RX devices that are not supported by the Smart Configurator.

- (1) Adding the FIT module to your project using “Smart Configurator” on e<sup>2</sup> studio

By using the Smart Configurator in e<sup>2</sup> studio, the FIT module is automatically added to your project. Refer to “Renesas e<sup>2</sup> studio Smart Configurator User Guide (R20AN0451)” for details.

- (2) Adding the FIT module to your project using the FIT Configurator in e<sup>2</sup> studio

By using the FIT Configurator in e<sup>2</sup> studio, the FIT module is automatically added to your project. Refer to “Adding Firmware Integration Technology Modules to Projects (R01AN1723)” for details.

- (3) Adding the FIT module to your project using the Smart Configurator in CS+

By using the Smart Configurator Standalone version in CS+, the FIT module is automatically added to your project. Refer to “Renesas e<sup>2</sup> studio Smart Configurator User Guide (R20AN0451)” for details.

- (4) Adding the FIT module to your project on CS+

In CS+, please manually add the FIT module to your project. Refer to “Adding Firmware Integration Technology Modules to CS+ Projects (R01AN1826)” for details.

### 3.4 API (Application Programming Interface)

For the detail of the API function, refer to chapter 4, **API Functions**.

### 3.5 Class Request

For the processing method when this driver receives the class request, refer to **10, USB Class Requests**.

### 3.6 How to Set the Target Peripheral List (TPL)

By registering the Vendor ID (VID) and Product ID (PID) in the USB host, USB communication will only be enabled for the USB device identified with a registered VID and PID.

To register a USB device in the TPL, specify the VID and PID as a set to the macro definitions listed in Table 3-3 in the configuration file (*r\_usb\_basic\_config.h* file). The USB driver checks the TPL to make sure the VID and PID of the connected USB device are registered. If registration is confirmed, USB communication with the USB device is enabled. If the VID and PID are not registered in the TPL, USB communication is disabled.

If it is not necessary to register VID and PID in TPL, specify *USB\_NOVENDOR* and *USB\_NOPRODUCT* for the TPL definitions listed in Table 3-3. When *USB\_NOVENDOR* and *USB\_NOPRODUCT* are specified, the USB driver performs on TPL registration check, and this prevents situations from occurring in which USB communication is prevented because of the check.

**Table 3-3 TPL Definition**

Macro definition name	Description
USB_TPL_CNT	Specify the number of USB devices to be supported.
USB_TPL	Specify a VID/PID set for each USB device to be supported. (Always specify in the order of VID first, PID second.)
USB_HUB_TPL_CNT	Specify the number of USB hubs to be supported.
USB_HUB_TPL	Specify a VID/PID set for each USB hub to be supported. (Always specify in the order of VID first, PID second.)

#### == How to specify VID/PID in USB\_TPL / USB\_HUB\_TP ==

```
#define      USB_TPL      0x0011, 0x0022, 0x0033, 0x0044, 0x0055, 0x0066
                        VID      PID      VID      PID      VID      PID
                        └──┬──┘ └──┬──┘ └──┬──┘
                        USB device 1  USB device 2  USB device 3

#define      USB_HUB_TPL  0x1111, 0x2222, 0x3333, 0x4444
                        VID      PID      VID      PID
                        └──┬──┘ └──┬──┘
                        USB Hub1   USB Hub2
```

#### Example 1) Register 3 USB devices and 2 USB hubs in the TPL

```
#define      USB_CFG_TPLCNT      3
#define      USB_CFG_TPL        0x0011, 0x0022, 0x0033, 0x0044, 0x0055, 0x0066
#define      USB_CFG_HUB_TPLCNT  2
#define      USB_HUB_TPL        0x1111, 0x2222, 0x3333, 0x4444
```

#### Example 2) Register 3 USB devices (no USB hubs) in the TPL

```
#define      USB_CFG_TPLCNT      3
#define      USB_CFG_TPL        0x0011, 0x0022, 0x0033, 0x0044, 0x0055, 0x0066
#define      USB_CFG_HUB_TPLCNT  1
#define      USB_CFG_HUB_TPL      USB_NOVENDOR,USB_NOPRODUCT
```

#### Example 3) VID and PID registration not required

```
#define      USB_CFG_TPLCNT      1
#define      USB_CFG_TPL        USB_NOVENDOR,USB_NOPRODUCT
#define      USB_CFG_HUB_TPLCNT  1
```

```
#define USB_CFG_HUB_TPL USB_NOVENDOR,USB_NOPRODUCT
```

Note:

1. Set *USB\_CFG\_TPLCNT* and *USB\_CFG\_HUB\_TPLCNT* to 1, even if *USB\_NOVENDOR* and *USB\_NOPRODUCT* are specified for the TPL definitions in Table 3-3.
2. For the configuration file (*r\_usb\_basic\_config.h*), refer to chapter 8.

### 3.7 Allocation of Device Addresses

In USB Host mode, the USB driver allocates device addresses to the connected USB devices.

1. When a USB Hub is used

Device address value 1 is allocated to a USB Hub, and device address values 2 and thereafter are allocated to USB devices connected to the Hub.

2. When a USB Hub is not used

Device address value 1 is allocated to the USB device.

Note:

Device addresses are allocated in USB module units. For example, in the case of an MCU that supports multiple USBs such as RX64M, if both the USB0 module and the USB1 module are connected to USB devices, device address value 1 is allocated to each USB device.

### 3.8 Host Battery Charging (HBC)

This driver supports HBC.

HBC is the H/W control program for the target device that operates the CDP or the DCP as defined by the USB Battery Charging Specification Revision 1.2.

Processing is executed as follows according to the timing of this driver. Refer to Figure 3-1.

VBUS is driven  
Attach processing  
Detach processing

Moreover, processing is executed in coordination with the PDDETINT interrupt.

There is no necessity for control from the upper layer.

You can get the result of Change Port Detection (CPD) by calling *R\_USB\_GetInformation* function. For *R\_USB\_GetInformation* function, refer to chapter.

Note:

RX65N/RX651 and RX66T/RX72T do not support HBC.

The processing flow of HBC is shown Figure 3-1.

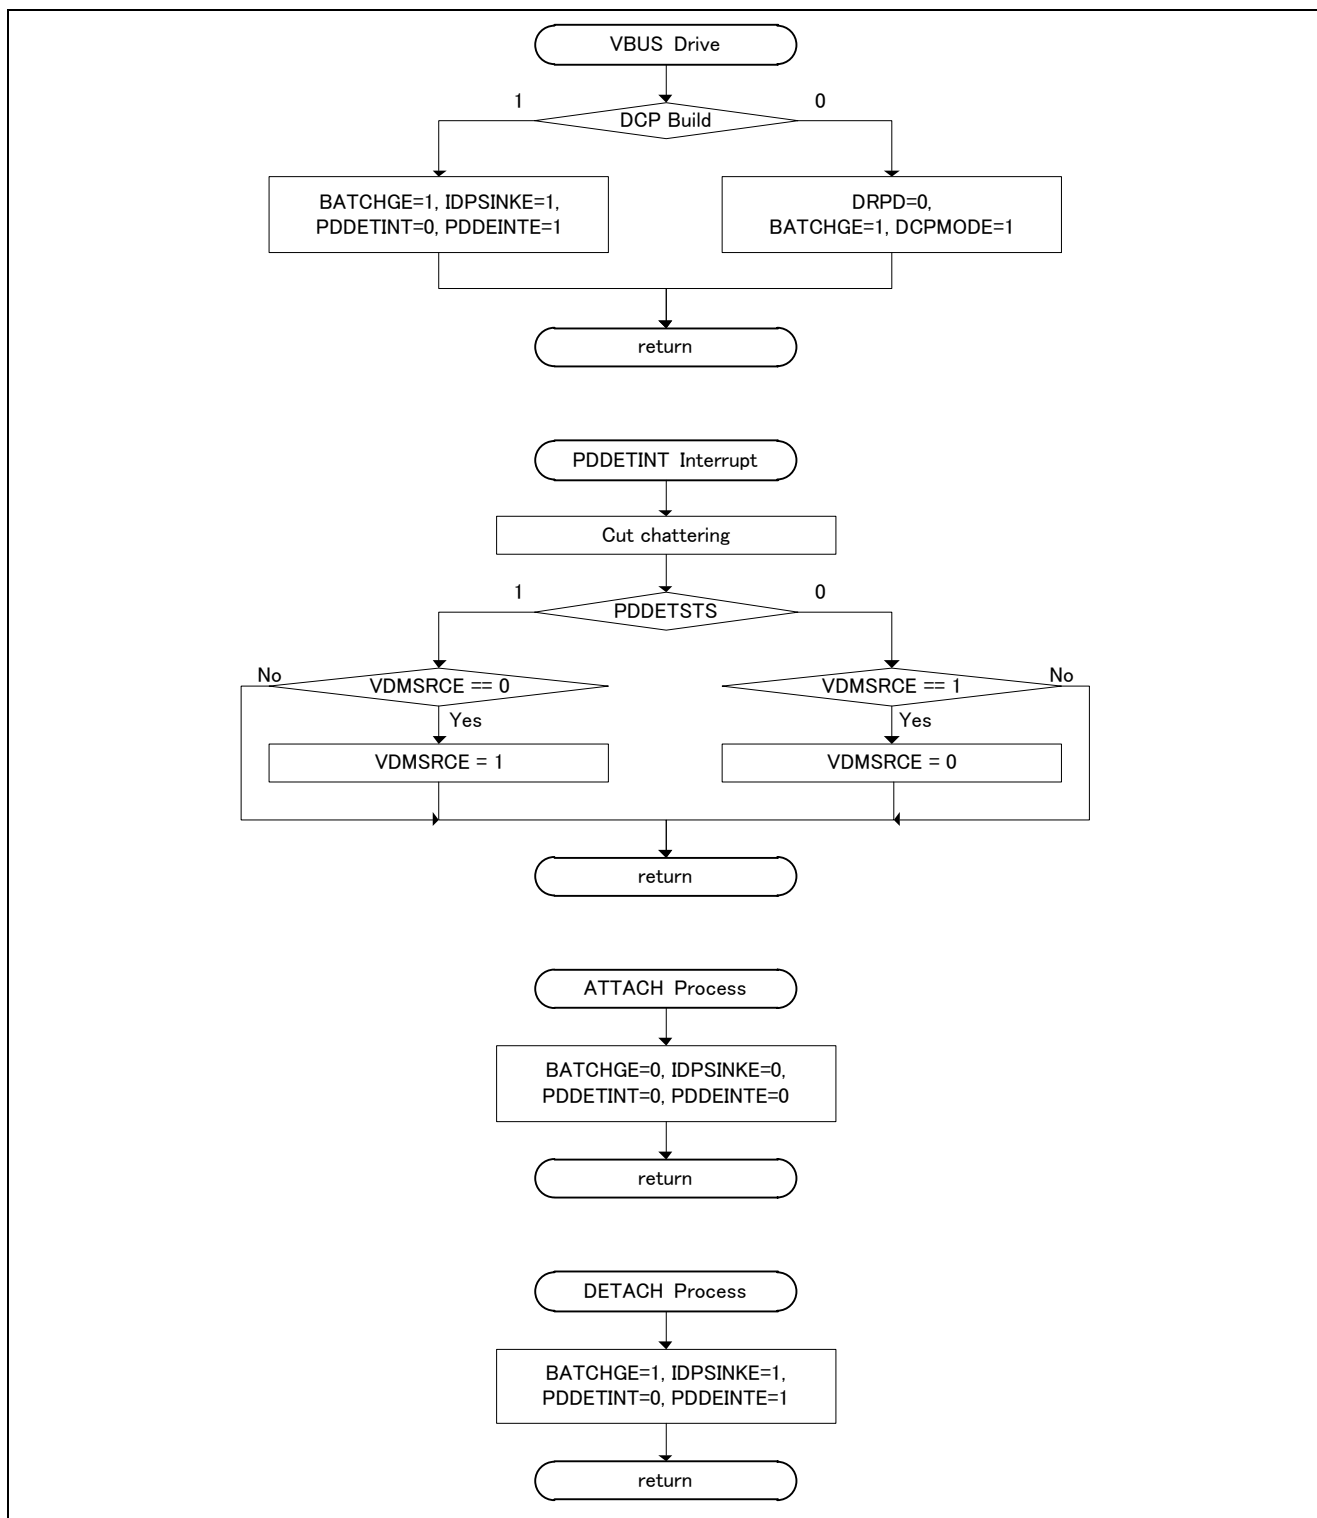


Figure 3-1 HBC processing flow

## 4. API Functions

**Table 4-1** provides a list of API functions. These APIs can be used in common for all the classes. Use the APIs below in application programs.

**Table 4-1 List of API Functions**

API	Description
R_USB_Open()	Start the USB module
R_USB_Close()	Stop the USB module
R_USB_GetVersion()	Get the driver version
R_USB_Read()	Request USB data read
R_USB_Write()	Request USB data write
R_USB_Stop()	Stop USB data read/write processing
R_USB_Suspend()	Request suspend
R_USB_Resume()	Request resume
R_USB_GetEvent()	Return USB-related completed events (Non-OS only)
R_USB_Callback()	Register a callback function (RTOS only)
R_USB_VbusSetting()	Sets VBUS supply start/stop.
R_USB_PullUp()	Pull-up enable/disable setting of D+/D- line.
R_USB_GetInformation()	Get information on USB device.
R_USB_PipeRead()	Request data read from specified pipe
R_USB_PipeWrite()	Request data write to specified pipe
R_USB_PipeStop()	Stop USB data read/write processing to specified pipe
R_USB_GetUsePipe()	Get pipe number
R_USB_GetPipeInfo()	Get pipe information

**Note:**

1. The class-specific API function other than the above API is supported in Host Mass Storage Class. Refer to the document (Document number: R01AN2026) for the class-specific API.
2. The class-specific API function other than the above API is supported in Host Human Interface Device Class. Refer to the document (Document number: R01AN2028) for the class-specific API.
3. When *USB\_CFG\_DISABLE* is specified to *USB\_CFG\_PARAM\_CHECKING* definition, the return value *USB\_ERR\_PARA* is not returned since this driver does not check the argument. Refer to chapter 8, **Configuration** for *USB\_CFG\_PARAM\_CHECKING* definition.

## 4.1 R\_USB\_Open

**Power on the USB module and initialize the USB driver. (This is a function to be used first when using the USB module.)**

### Format

```
usb_err_t      R_USB_Open(usb_ctrl_t *p_ctrl, usb_cfg_t *p_cfg)
```

### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_cfg	Pointer to usb_cfg_t structure area

### Return Value

USB_SUCCESS	Success
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	Specified USB module now in use

### Description

This function applies power to the USB module specified in the argument (*p\_ctrl*).

### Note

- For details concerning the *usb\_ctrl\_t* structure, see chapter 9.1, **usb\_ctrl\_t structure**, and for the *usb\_cfg\_t* structure, see chapter 9.3, **usb\_cfg\_t structure**.
- Specify the number of the module (*USB\_IP0/USB\_IP1*) to be started up in member (*module*) of the *usb\_ctrl\_t* structure. Specify “*USB\_IP0*” to start up the USB0 module and “*USB\_IP1*” to start up the USB1 module. If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
- If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
- Assign the device class type (see chapter 7, **Device Class Types**) to the member (*type*) of the *usb\_ctrl\_t* structure. Does not assign *USB\_HCDCC* and *USB\_PCDCC* to this member (*type*). If *USB\_HCDCC* and *USB\_PCDCC* is assigned, then *USB\_ERR\_PARA* will be returned.
- In the *usb\_cfg\_t* structure member (*usb\_mode*), specify “*USB\_HOST*” to start up USB host operations and “*USB\_PERI*” to start up USB peripheral operations. If these settings are not supported by the USB module, *USB\_ERR\_PARA* will be returned.
- Specify the USB speed (*USB\_HS / USB\_FS*) in the *usb\_ctrl\_t* structure member (*usb\_speed*). If the speed set in the member is not supported by the USB module, *USB\_ERR\_PARA* will be returned.
- Assign a pointer to the *usb\_descriptor\_t* structure to the member (*p\_usb\_reg*) of the *usb\_cfg\_t* structure. This assignment is only effective if “*USB\_PERI*” is assigned to the member (*usb\_mode*). If “*USB\_HOST*” is assigned, then assignment to the member (*p\_usb\_reg*) is ignored.
- If 0 (zero) is assigned to one of the arguments, *USB\_ERR\_PARA* will be the return value.
- Do not call this API in the multiple tasks. (**RTOS**)
- Do not call this API in the following function.
  - Interrupt function.
  - Callback function registered by *R\_USB\_Callback* function.

## Examples

### 1. In the case of USB Host mode

```
void usb_host_application(void)
{
    usb_err_t    err;
    usb_ctrl_t    ctrl;
    usb_cfg_t     cfg;
    :
    ctrl.module = USB_IP0;
    ctrl.type = USB_HCDC;
    cfg.usb_mode = USB_HOST;
    cfg.usb_speed = USB_HS;
    err = R_USB_Open(&ctrl, &cfg); /* Start USB module */
    if (USB_SUCCESS != err)
    {
        :
    }
    :
}
```

### 2. In the case of USB Peripheral

```
usb_descriptor_t smp_descriptor =
{
    g_device,
    g_config_f,
    g_config_h,
    g_qualifier,
    g_string
};
void usb_peri_application(void)
{
    usb_err_t    err;
    usb_ctrl_t    ctrl;
    usb_cfg_t     cfg;
    :
    ctrl.module = USB_IP1;
    ctrl.type = USB_PCDC;
    cfg.usb_mode = USB_PERI;
    cfg.usb_speed = USB_HS;
    cfg.p_usb_reg = &smp_descriptor;
    err = R_USB_Open(&ctrl, &cfg ); /* Start USB module */
    if (USB_SUCCESS != err)
    {
        :
    }
    :
}
```

## 4.2 R\_USB\_Close

### Power off USB module.

#### Format

```
usb_err_t      R_USB_Close(usb_ctrl_t *p_ctrl)
```

#### Arguments

p\_ctrl                      Pointer to usb\_ctrl\_t structure area

#### Return Value

USB_SUCCESS	Success
USB_ERR_PARA	Parameter error
USB_ERR_NOT_OPEN	USB module is not open.

#### Description

This function terminates power to the USB module specified in argument (*p\_ctrl*). USB0 module stops when *USB\_IP0* is specified to the member (*module*), USB1 module stops when *USB\_IP1* is specified to the member (*module*).

#### Note

1. Specify the number of the USB module (*USB\_IP0/USB\_IP1*) to be stopped in the *usb\_ctrl\_t* structure member (*module*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
2. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
3. If *USB\_NULL* is assigned to the argument (*p\_ctrl*), then *USB\_ERR\_PARA* will be the return value.
4. Do not call this API in the multiple tasks. (**RTOS**)
5. Do not call this API in the following function.
  - (1). Interrupt function.
  - (2). Callback function registered by *R\_USB\_Callback* function.

#### Example

```
void    usr_application(void)
{
    usb_err_t    err;
    usb_ctrl_t    ctrl;
    :
    ctrl.module = USB_IP0
    err = R_USB_Close(&ctrl);
    if (USB_SUCCESS != err)
    {
        :
    }
    :
}
```



### 4.3 R\_USB\_GetVersion

---

#### Return API version number

##### Format

usb\_err\_t R\_USB\_GetVersion()

##### Arguments

— —

##### Return Value

Version number

##### Description

The version number of the USB driver is returned.

##### Note

--

##### Example

```
void    usr_application( void )
{
    uint32_t    version;
    :
    version = R_USB_GetVersion();
    :
}
```

## 4.4 R\_USB\_Read

### USB data read request

#### Format

```
usb_err_t      R_USB_Read(usb_ctrl_t *p_ctrl, uint8_t *p_buf, uint32_t size)
```

#### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_buf	Pointer to area that stores read data
size	Read request size

#### Return Value

USB_SUCCESS	Successfully completed (Data read request completed)
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	Data receive request already in process for USB device with same device address.
USB_ERR_NG	Other error

#### Description

##### 1. Bulk/interrupt data transfer

###### (1). Non-OS

Requests USB data read (bulk/interrupt transfer).

The read data is stored in the area specified by argument (*p\_buf*).

After data read is completed, confirm the operation by checking the return value

(*USB\_STS\_READ\_COMPLETE*) of the *R\_USB\_GetEvent* function. The received data size is set in member (*size*) of the *usb\_ctrl\_t* structure. To figure out the size of the data when a read is complete, check the return value (*USB\_STS\_READ\_COMPLETE*) of the *R\_USB\_GetEvent* function, and then refer to the member (*size*) of the *usb\_ctrl\_t* structure.

###### (2). RTOS

Requests USB data read (bulk/interrupt transfer).

The read data is stored in the area specified by argument (*p\_buf*).

It is possible to check for the completion of a data read based on an argument (*USB\_STS\_READ\_COMPLETE* in the member (*event*) of the *usb\_ctrl\_t* structure) to the callback function registered in the USB driver.

After confirming the argument to the callback function registered in the USB driver

(*USB\_STS\_READ\_COMPLETE* in the member (*event*) of the *usb\_ctrl\_t* structure), reference the size member of the *usb\_ctrl\_t* structure to ascertain the size of the data from the completed read.

##### 2. Control data transfer

Refer to chapter 10, **USB Class Requests** for details.

#### Note

1. This API only performs data read request processing. An application program does not wait for data read completion by using this API.
2. When *USB\_SUCCESS* is returned for the return value, it only means that a data read request was performed to the USB driver, not that the data read processing has completed.
3. When the read data is n times the maximum packet size and does not meet the read request size, the USB driver assumes the data transfer is still in process and *USB\_STS\_READ\_COMPLETE* is not set as the return value of the *R\_USB\_GetEvent* function. (**Non-OS**)
4. If the data that has been read is not n times the maximum packet size and does not satisfy the read request size, the USB driver will assume that the data transfer is still in progress, so it will not call the callback function that provides notification that data reception is complete. (**RTOS**)
5. Before calling this API, assign the device class type (see chapter 7, **Device Class Types**) to the member (*type*) of the *usb\_ctrl\_t* structure. In USB Host mode, in order to identify the USB device to be accessed, assign the USB module number (*USB\_IP0* or *USB\_IP1*) to the member (*module*), and assign the device address to the member (*address*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*) or if an

- unsupported device class type is assigned to the member (*type*), then *USB\_ERR\_PARA* will be the return value.
6. If the MCU being used only supports one USB module, then do not assign *USB\_IPI* to the member (*module*). If *USB\_IPI* is assigned, then *USB\_ERR\_PARA* will be the return value.
  7. Do not assign a pointer to the auto variable (stack) area to the second argument (*p\_buf*). Allocate the area of the following size when using DTC/DMA transfer.
    - (1). When *USB\_CFG\_CNTMDON* is specified for *USB\_CFG\_CNTMD* definition in *r\_usb\_basic\_config.h* (When using USB/USBAA module.)

Allocate the area more than n times FIFO buffer size. For FIFO buffer size, refer to the chapter **12.4, Reference or Change of PIPEBUF Register**
    - (2). When *USB\_CFG\_CNTMDOFF* is specified for *USB\_CFG\_CNTMD* definition in *r\_usb\_basic\_config.h*.

Allocate the area n times the max packet size.
  8. The size of area assigned to the second argument (*p\_buf*) must be at least as large as the size specified for the third argument (*size*).
  9. If 0 (zero) is assigned to one of the arguments, *USB\_ERR\_PARA* will be the return value.
  10. In USB Host mode it is not possible to repeatedly call the *R\_USB\_Read* function with the same values assigned to the member (*type*) of the *usb\_crtl\_t* structure. If the *R\_USB\_Read* function is called repeatedly, then *USB\_ERR\_BUSY* will be the return value. To call the *R\_USB\_Read* function more than once with the same values assigned to the members (*type*), first check the *USB\_STS\_READ\_COMPLETE* return value from the *R\_USB\_GetEvent* function, and then call the *R\_USB\_Read* function. **(Non-OS)**
  11. In USB Peripheral mode it is not possible to repeatedly call the *R\_USB\_Read* function with the same value assigned to the member (*type*) of the *usb\_crtl\_t* structure. If the *R\_USB\_Read* function is called repeatedly, then *USB\_ERR\_BUSY* will be the return value. To call the *R\_USB\_Read* function more than once with the same value assigned to the member (*type*), first check the *USB\_STS\_READ\_COMPLETE* return value from the *R\_USB\_GetEvent* function, and then call the *R\_USB\_Read* function. **(Non-OS)**
  12. In Vendor Class, use the *R\_USB\_PipeRead* function.
  13. If this API is called after assigning *USB\_PCDCC*, *USB\_HMSC*, *USB\_PMSC*, *USB\_HVND* or *USB\_PVND* to the member (*type*) of the *usb\_crtl\_t* structure, then *USB\_ERR\_PARA* will be the return value.
  14. In Host Mass Storage Class, to access storage media, use the FAT (File Allocation Table) API rather than this API.
  15. In the USB device is in the CONFIGURED state, this API can be called. If this API is called when the USB device is in other than the CONFIGURED state, then *USB\_ERR\_NG* will be the return value.
  16. Do not call this API in the following function.
    - (1). Interrupt function.
    - (2). Callback function registered by *R\_USB\_Callback* function.

**Example****1. Non-OS**

```
void    usb_application( void )
{
    usb_ctrl_t    ctrl;
                :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_WRITE_COMPLETE:
                :
                ctrl.module = USB_IP1
                ctrl.adderss = adr;
                ctrl.type = USB_HCDC;
                R_USB_Read(&ctrl, g_buf, DATA_LEN);
                :
            break;
            case USB_STS_READ_COMPLETE:
                :
            break;
                :
        }
    }
}
```

## 2. RTOS

```
/* Callback function */
void usb_apl_callback (usb_ctrl_t *p_ctrl, usb_hdl_t hdl, uint8_t is_request)
{
    USB_APL_SND_MSG(hdl, (usb_msg_t *)p_ctrl);
}

void usb_application_task( void )
{
    usb_ctrl_t ctrl;
    usb_ctrl_t *p_mess;
    :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch (ctrl.event)
        {
            :
            case USB_STS_WRITE_COMPLETE:
                :
                ctrl.module = USB_IP1
                ctrl.adderss = adr;
                ctrl.type = USB_HCDC;
                R_USB_Read(&ctrl, g_buf, DATA_LEN);
                :
            break;
            case USB_STS_READ_COMPLETE:
                :
            break;
            :
        }
    }
}
```

## 4.5 R\_USB\_Write

### USB data write request

#### Format

```
usb_err_t R_USB_Write(usb_ctrl_t *p_ctrl, uint8_t *p_buf, uint32_t size)
```

#### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_buf	Pointer to area that stores write data
size	Write size

#### Return Value

USB_SUCCESS	Successfully completed (Data write request completed)
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	Data write request already in process for USB device with same device address.
USB_ERR_NG	Other error

#### Description

##### 1. Bulk/Interrupt data transfer

###### (1). Non-OS

Requests USB data write (bulk/interrupt transfer).  
 Stores write data in area specified by argument (*p\_buf*).  
 Set the device class type in *usb\_ctrl\_t* structure member (*type*).  
 Confirm after data write is completed by checking the return value (*USB\_STS\_WRITE\_COMPLETE*) of the *R\_USB\_GetEvent* function.  
 To request the transmission of a NULL packet, assign *USB\_NULL(0)* to the third argument (*size*).

###### (2). RTOS

Requests USB data write (bulk/interrupt transfer).  
 Stores write data in area specified by argument (*p\_buf*).  
 Set the device class type in *usb\_ctrl\_t* structure member (*type*).  
 It is possible to check for the completion of a data write based on an argument (*USB\_STS\_WRITE\_COMPLETE* in the member (*event*) of the *usb\_ctrl\_t* structure) to the callback function registered in the USB driver.  
 To request the transmission of a NULL packet, assign *USB\_NULL(0)* to the third argument (*size*).

##### 2. Control data transfer

Refer to chapter 10, **USB Class Requests** for details.

#### Note

1. This API only performs data write request processing. An application program does not wait for data write completion by using this API.
2. When *USB\_SUCCESS* is returned for the return value, it only means that a data write request was performed to the USB driver, not that the data write processing has completed.
3. Before calling this API, assign the device class type (see chapter 7, Device Class Types) to the member (*type*) of the *usb\_ctrl\_t* structure. In USB Host mode, in order to identify the USB device to be accessed, assign the USB module number (*USB\_IP0* or *USB\_IP1*) to the member (*module*), and assign the device address to the member (*address*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*) or if an unsupported device class type is assigned to the member (*type*), then *USB\_ERR\_PARA* will be the return value.
4. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
5. Do not assign a pointer to the auto variable (stack) area to the second argument (*p\_buf*).
6. If *USB\_NULL* is assigned to the argument (*p\_ctrl*), then *USB\_ERR\_PARA* will be the return value.

7. If a value other than 0 (zero) is set for the argument (*size*) and *USB\_NULL* is assigned to the argument (*p\_buf*), then *USB\_ERR\_PARA* will be the return value.
8. In USB Host mode it is not possible to repeatedly call the *R\_USB\_Write* function with the same values assigned to the member (*address*) of the *usb\_ctrl\_t* structure. If the *R\_USB\_Write* function is called repeatedly, then *USB\_ERR\_BUSY* will be the return value. To call the *R\_USB\_Write* function more than once with the same values assigned to the members (*address*), first check the *USB\_STS\_WRITE\_COMPLETE* return value from the *R\_USB\_GetEvent* function, and then call the *R\_USB\_Write* function. **(Non-OS)**
9. In USB Peripheral mode it is not possible to repeatedly call the *R\_USB\_Write* function with the same value assigned to the member (*type*) of the *usb\_ctrl\_t* structure. If the *R\_USB\_Write* function is called repeatedly, then *USB\_ERR\_BUSY* will be the return value. To call the *R\_USB\_Write* function more than once with the same value assigned to the member (*type*), first check the *USB\_STS\_WRITE\_COMPLETE* return value from the *R\_USB\_GetEvent* function, and then call the *R\_USB\_Write* function. **(Non-OS)**
10. In Vendor Class, use the *R\_USB\_PipeWrite* function.
11. If this API is called after assigning *USB\_HCDC*, *USB\_HMSC*, *USB\_PMSC*, *USB\_HVND* or *USB\_PVND* to the member (*type*) of the *usb\_ctrl\_t* structure, then *USB\_ERR\_PARA* will be the return value.
12. In Host Mass Storage Class, to access storage media, use the FAT (File Allocation Table) API rather than this API.
13. This API can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.
14. Do not call this API in the following function.
  - (1). Interrupt function.
  - (2). Callback function registered by *R\_USB\_Callback* function.

## Example

### 1. Non-OS

```

void    usb_application( void )
{
    usb_ctrl_t    ctrl;
    :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_READ_COMPLETE:
                :
                ctrl.module = USB_IP0;
                ctrl.address = adr;
                ctrl.type = USB_HCDC;
                R_USB_Write(&ctrl, g_buf, size);
                :
            break;
            case USB_STS_WRITE_COMPLETE:
                :
            break;
            :
        }
    }
}

```

## 2. RTOS

```
/* Callback function */
void usb_apl_callback (usb_ctrl_t *p_ctrl, usb_hdl_t hdl, uint8_t is_request)
{
    USB_APL_SND_MSG(hdl, (usb_msg_t *)p_ctrl);
}

void usb_application_task( void )
{
    usb_ctrl_t    ctrl;
    usb_ctrl_t    *p_mess;
    :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch (ctrl.event)
        {
            :
            case USB_STS_READ_COMPLETE:
                :
                ctrl.module = USB_IP0;
                ctrl.address = adr;
                ctrl.type = USB_HCDC;
                R_USB_Write(&ctrl, g_buf, size);
                :
                break;
            case USB_STS_WRITE_COMPLETE:
                :
                break;
            :
        }
    }
}
```



## 4.6 R\_USB\_Stop

### USB data read/write stop request

#### Format

usb\_err\_t R\_USB\_Stop(usb\_ctrl\_t \*p\_ctrl, uint16\_t type)

#### Arguments

p\_ctrl Pointer to usb\_ctrl\_t structure area  
type Receive (USB\_READ) or send (USB\_WRITE)

#### Return Value

USB\_SUCCESS Successfully completed (stop completed)  
USB\_ERR\_PARA Parameter error  
USB\_ERR\_NG Other error

#### Description

This function is used to request a data read/write transfer be terminated when a data read/write transfer is performing.

To stop a data read, set *USB\_READ* as the argument (*type*); to stop a data write, specify *USB\_WRITE* as the argument (*type*).

#### Note

- Before calling this API, assign the device class type to the member (*type*) of the *usb\_ctrl\_t* structure. In USB Host mode, in order to identify the USB device to be accessed, assign the USB module number (*USB\_IP0* or *USB\_IP1*) to the member (*module*), and assign the device address to the member (*address*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*) or if an unsupported device class type is assigned to the member (*type*), then *USB\_ERR\_PARA* will be the return value.
- If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
- If *USB\_NULL* is assigned to the argument (*p\_ctrl*), then *USB\_ERR\_PARA* will be the return value.
- If something other than *USB\_READ* or *USB\_WRITE* is assigned to the third argument (*type*), then *USB\_ERR\_PARA* will be the return value. When *USB\_NULL* is set to the 2nd argument (*type*), this driver operates the same processing as when *USB\_READ* is set.
- If *USB\_HCDCC* is assigned to the member (*type*) and *USB\_WRITE* is assigned to the 2nd argument (*type*), then *USB\_ERR\_PARA* will be the return value.
- If *USB\_PCDCC* is assigned to the member (*type*) and *USB\_READ* is assigned to the 2nd argument (*type*), then *USB\_ERR\_PARA* will be the return value.
- In USB Host mode, *USB\_ERR\_NG* will be the return value when this API can not stop the data read/write request.
- When the *R\_USB\_GetEvent* function is called after a data read/write stopping has been completed, the return value *USB\_STS\_READ\_COMPLETE/USB\_STS\_WRITE\_COMPLETE* is returned. **(Non-OS)**
- USB driver set *USB\_STS\_READ\_COMPLETE* or *USB\_STS\_WRITE\_COMPLTE* to the argument (the member (*event*) of the *usb\_ctrl\_t* structure) in the callback function registered in the USB driver when a data read/write stopping has been completed. **(RTOS)**
- If this API is called after assigning *USB\_HMSC*, *USB\_PMSC*, *USB\_HVND* or *USB\_PVND* to the member (*type*) of the *usb\_ctrl\_t* structure, then *USB\_ERR\_PARA* will be the return value.
- In Vendor Class, use the *R\_USB\_PipeStop* function.
- Do not use this API for the Host Mass Storage Class.
- This API can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.

15. Do not call this API in the following function.

- (1). Interrupt function.
- (2). Callback function registered by *R\_USB\_Callback* function.

## Example

### 1. Non-OS

```
void    usb_application( void )
{
    usb_ctrl_t    ctrl;
                :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
                :
            case USB_STS_DETACH:
                :
                ctrl.module = USB_IP1;
                ctrl.address = adr;
                ctrl.type = USB_HCDC;
                R_USB_Stop(&ctrl, USB_READ );    /* Receive stop */
                R_USB_Stop(&ctrl, USB_WRITE ); /* Send stop */
                :
            break;
                :
        }
    }
}
```

## 2. RTOS

```
/* Callback function */
void usb_apl_callback (usb_ctrl_t *p_ctrl, usb_hdl_t hdl, uint8_t is_request)
{
    USB_APL_SND_MSG(hdl, (usb_msg_t *)p_ctrl);
}

void usb_application_task( void )
{
    usb_ctrl_t    ctrl;
    usb_ctrl_t    *p_mess;
    :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch (ctrl.event)
        {
            :
            case USB_STS_DETACH:
                :
                ctrl.module = USB_IP1;
                ctrl.address = adr;
                ctrl.type = USB_HCDC;
                R_USB_Stop(&ctrl, USB_READ ); /* Receive stop */
                R_USB_Stop(&ctrl, USB_WRITE ); /* Send stop */
                :
                break;
            :
        }
    }
}
```

## 4.7 R\_USB\_Suspend

### Suspend signal transmission

#### Format

```
usb_err_t      R_USB_Suspend(usb_ctrl_t *p_ctrl)
```

#### Arguments

p\_ctrl                      Pointer to usb\_ctrl\_t structure area

#### Return Value

USB_SUCCESS	Successfully completed
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	During a suspend request to the specified USB module, or when the USB module is already in the suspended state
USB_ERR_NG	Other error

#### Description

##### 1. Non-OS

This function sends a SUSPEND signal from the USB module assigned to the member (*module*) of the *usb\_ctrl\_t* structure. After the suspend request is completed, confirm the operation with the return value (*USB\_STS\_SUSPEND*) of the *R\_USB\_GetEvent* function.

##### 2. RTOS

This function sends a SUSPEND signal from the USB module assigned to the member (*module*) of the *usb\_ctrl\_t* structure.

It is possible to check for the completion of the suspend request based on an argument (*USB\_STS\_SUSPEND* in the member (*event*) of the *usb\_ctrl\_t* structure) to the callback function registered in the USB driver.

#### Note

1. This API only performs a Suspend signal transmission. An application program does not wait for Suspend signal transmission completion by using this API.
2. This API can only be used in USB host mode. If this API is used in USB Peripheral mode, then *USB\_ERR\_NG* will be the return value.
3. This API does not support the Selective Suspend function.
4. Assign the USB module to which a SUSPEND signal is transmitted to the member (*module*) of the *usb\_ctrl\_t* structure. *USB\_IP0* or *USB\_IP1* should be assigned to the member (*module*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*) or if an unsupported device class type is assigned to the member (*type*), then *USB\_ERR\_PARA* will be the return value.
5. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
6. If *USB\_NULL* is assigned to the argument (*p\_ctrl*), then *USB\_ERR\_PARA* will be the return value.
7. When this API is called in the state of other than the configured or the suspend state, *USB\_ERR\_NG* is returned.
8. Do not call this API in the following function.
  - (1). Interrupt function.
  - (2). Callback function registered by *R\_USB\_Callback* function.

**Example****1. Non-OS**

```

void usb_host_application( void )
{
    usb_ctrl_t ctrl;
    :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_NONE:
                :
                ctrl.module = USB_IP0;
                R_USB_Suspend(&ctrl);
                break;
            case USB_STS_SUSPEND:
                :
                break;
            :
        }
    }
}

```

**2. RTOS**

```

/* Callback function */
void usb_apl_callback (usb_ctrl_t *p_ctrl, usb_hdl_t hdl, uint8_t is_request)
{
    USB_APL_SND_MSG(id, (usb_msg_t *)p_ctrl);
}

void usb_application_task( void )
{
    usb_ctrl_t ctrl;
    usb_ctrl_t *p_mess;
    :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch (ctrl.event)
        {
            :
            ctrl.module = USB_IP0;
            R_USB_Suspend(&ctrl);
            break;
            case USB_STS_SUSPEND:
                :
            break;
            :
        }
    }
}

```

## 4.8 R\_USB\_Resume

### Resume signal transmission

#### Format

```
usb_err_t      R_USB_Resume(usb_ctrl_t *p_ctrl)
```

#### Arguments

p\_ctrl                      Pointer to usb\_ctrl\_t structure area

#### Return Value

USB_SUCCESS	Successfully completed
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	During a resume request processing
USB_ERR_NOT_SUSPEND	USB device is not in the SUSPEND state.
USB_ERR_NG	USB device is not in a state that can request the remote wakeup. (USB peripheral mode only)

#### Description

##### 1. Non-OS

This function sends a RESUME signal from the USB module assigned to the member (*module*) of the *usb\_ctrl\_t* structure.

After the resume request is completed, confirm the operation with the return value (*USB\_STS\_RESUME*) of the *R\_USB\_GetEvent* function

##### 2. RTOS

This function sends a RESUME signal from the USB module assigned to the member (*module*) of the *usb\_ctrl\_t* structure.

It is possible to check for the completion of the resume request based on an argument (*USB\_STS\_RESUME* in the member (*event*) of the *usb\_ctrl\_t* structure) to the callback function registered in the USB driver.

#### Note

- This API only performs a Resume signal transmission request. An application program does not wait for Resume signal transmission completion by using this API.
- Please call this API after calling the *R\_USB\_Open* function (and before calling the *R\_USB\_Close* function).
- In USB Peripheral mode, this API can be used for sending RemoteWakeup signal only when receiving *SetFeature* command which *DEVICE\_REMOTE\_WAKEUP* is specified to *Feature Selector*. If this API is called before receiving the *SetFeature* command, then *USB\_ERR\_NG* will be the return value.
- Assign the USB module to which the RESUME signal is transmitted to the member (*module*) of the *usb\_ctrl\_t* structure. *USB\_IP0* or *USB\_IP1* should be assigned to the member (*module*). If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
- If *USB\_NULL* is assigned to the argument (*p\_ctrl*), then *USB\_ERR\_PARA* will be the return value.
- This API can be called when the USB device is in the suspend state. When the API is called in any other state, *USB\_ERR\_NOT\_SUSPEND* is returned.
- Do not call this API in the following function.
  - Interrupt function.
  - Callback function registered by *R\_USB\_Callback* function.

**Example****1. Non-OS****(1). In the case of USB Host mode**

```

void usb_host_application( void )
{
    usb_ctrl_t ctrl;
    :
    while (1)
    {
        switch (R_USB_GetEvent( &ctrl ))
        {
            :
            case USB_STS_NONE:
                :
                ctrl.module = USB_IP0;
                R_USB_Resume( &ctrl );
                :
                break;
            case USB_STS_RESUME:
                :
                break;
            :
        }
    }
}

```

**(2). In the case of USB Peripheral mode**

```

void usb_peri_application( void )
{
    usb_ctrl_t ctrl;
    :
    while (1)
    {
        switch (R_USB_GetEvent( &ctrl ))
        {
            :
            case USB_STS_NONE:
                :
                R_USB_Resume(&ctrl);
                :
                break;
            case USB_STS_RESUME:
                :
                break;
            :
        }
    }
}

```

**2. RTOS****(1). In the case of USB Host mode**

```

/* Callback function */
void usb_apl_callback (usb_ctrl_t *p_ctrl, usb_hdl_t hdl, uint8_t is_request)
{

```

```

    USB_APL_SND_MSG(hdl, (usb_msg_t *)p_ctrl);
}

void      usb_application_task( void )
{
    usb_ctrl_t    ctrl;
    usb_ctrl_t    *p_mess;
    :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch (ctrl.event)
        {
            :
            ctrl.module = USB_IP0;
            R_USB_Resume( &ctrl );
            :
            break;
            case USB_STS_RESUME:
                :
            break;
            :
        }
    }
}

```

## (2). In the case of USB Peripheral mode

```

void      usb_peri_application( void )
{
    usb_ctrl_t    ctrl;
    usb_ctrl_t    *p_mess;
    :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch (ctrl.event)
        {
            :
            R_USB_Resume(&ctrl);
            :
            break;
            case USB_STS_RESUME:
                :
            break;
            :
        }
    }
}

```



## 4.9 R\_USB\_GetEvent

### Get completed USB-related events (Non-OS only)

#### Format

usb\_status\_t      R\_USB\_GetEvent(usb\_ctrl\_t \*p\_ctrl)

#### Arguments

p\_ctrl              Pointer to usb\_ctrl\_t structure area

#### Return Value

--                  Value of completed USB-related events

#### Description

This function obtains completed USB-related events.

In USB host mode, the device address value of the USB device that completed an event is specified in the *usb\_ctrl\_t* structure member (*address*) specified by the event's argument. In USB peripheral mode, *USB\_NULL* is specified in member (*address*).

#### Note

1. Please call this API after calling the *R\_USB\_Open* function (and before calling the *R\_USB\_Close* function).
2. Refer to chapter 6, **Return Value of R\_USB\_GetEvent Function / Retrieval of USB Completion Events** " for details on the completed event value used as the API return value.
3. If there is no completed event when calling this API, then *USB\_STS\_NONE* will be the return value.
4. Please call this API in the main loop of the user application program.
5. Do not call this API in the interrupt function.

#### Example

```
void usb_host_application( void )
{
    usb_ctrl_t    ctrl;
    :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_CONFIGURED:
            :
                break;
            :
        }
    }
}
```

## 4.10 R\_USB\_Callback

**Register a callback function to be called upon completion of a USB-related event. (RTOS only)**

### Format

```
void R_USB_Callback(usb_callback_t *p_callback)
```

### Arguments

p\_callback      Pointer to the callback function

### Return Value

--

### Description

This function registers a callback function to be called when a USB-related event has completed.

When a USB-related event has completed, the USB driver will call the callback function that has been registered using this API.

### Note

1. Call this API after calling the R\_USB\_Open function (and before calling the R\_USB\_Close function).
2. For details regarding the USB event values that are specified as arguments to this API, see chapter 6, **Return Value of R\_USB\_GetEvent Function / Retrieval of USB Completion Events**.
3. For information regarding callback functions, see chapter 5, **Callback Function**.
4. Do not call this API in the interrupt function.

### Example

```
void usb_apl_callback (usb_ctrl_t *p_ctrl)
{
    USB_APL_SND_MSG(USB_APL_MBX, (usb_msg_t *)p_ctrl);
}

void usb_application_task(void)
{
    usb_ctrl_t  ctrl;
    usb_ctrl_t  *p_mess;
    usb_cfg_t   cfg;

    usb_pin_setting(); /* USB MCU pin setting */

    ctrl.module      = USE_USBIP;
    ctrl.type        = USB_PCDC;
    cfg.usb_speed    = USB_SUPPORT_SPEED; /* USB_HS/USB_FS */
    cfg.p_usb_reg    = (usb_descriptor_t *)&usb_descriptor;
    R_USB_Open(&ctrl, &cfg); /* Initializes the USB module */

    R_USB_Callback(usb_apl_callback);

    while (1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);

        ctrl = *p_mess;

        switch (ctrl.event)
```

```
{
    :
}
}
```

## 4.11 R\_USB\_VbusSetting

### VBUS Supply Start/Stop Specification

#### Format

usb\_err\_t                    R\_USB\_VbusSetting( usb\_ctrl\_t \*p\_ctrl, uint16\_t state )

#### Arguments

p\_ctrl                    Pointer to usb\_ctrl\_t structure area  
state                    VBUS supply start/stop specification

#### Return Value

USB\_SUCCESS            Successful completion (VBUS supply start/stop completed)  
USB\_ERR\_PARA            Parameter error  
USB\_ERR\_NG              Other error

#### Description

Specifies starting or stopping the VBUS supply.

#### Note

1. For information on setting the VBUS output of the power source IC for the USB Host to either Low Assert or High Assert, see the setting of the *USB\_CFG\_VBUS* definition described in chapter 8, **Configuration** (*r\_usb\_basic\_config.h*).
2. Assign the module number (*USB\_IP0/USB\_IP1*) to specify starting or stopping the VBUS supply to the member (*module*) of the first argument (*p\_ctrl*). If "*USB\_IP0*" is assigned, setting is applied to the USB0 module. If "*USB\_IP1*" is assigned, setting is applied to the USB1 module. If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
3. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
4. Assign "*USB\_ON*" or "*USB\_OFF*" to the second argument. Assign "*USB\_ON*" in order to start the VBUS supply, and assign "*USB\_OFF*" in order to stop the VBUS supply. If the value other than *USB\_ON* or *USB\_OFF* is assigned, then *USB\_ERR\_PARA* will be the return value. When *USB\_NULL* is set to the 2nd argument (*state*), this driver operates the same processing as when *USB\_OFF* is set.
5. If *USB\_NULL* is assigned to the argument (*p\_ctrl*), then *USB\_ERR\_PARA* will be the return value.
6. Use this API only when the application program needs to control VBUS. (This driver does not control VBUS after turning on VBUS in the initialization processing.)
7. This API is processed only in USB Host mode. If this API is called in USB Peripheral mode, then *USB\_ERR\_NG* will be the return value.
8. Do not call this API in the following function.
  - (1). Interrupt function.
  - (2). Callback function registered by *R\_USB\_Callback* function.

**Example**

```
void usb_host_application( void )
{
    usb_ctrl_t ctrl;
    :
    :
    ctrl.module = USB_IP0;
    R_USB_VbusSetting( &ctrl, USB_ON ); /* Start VBUS supply */
    :
    :
    ctrl.module = USB_IP0;
    R_USB_VbusSetting( &ctrl, USB_OFF ); /* Stop VBUS supply */
    :
    :
}
```

## 4.12 R\_USB\_PullUp

Pull-up enable/disable setting of D+/D- line

### Format

usb\_err\_t                    R\_USB\_PullUp(uint16\_t state)

### Arguments

state                      Pull-up enable/disable setting

### Return Value

USB_SUCCESS	Successful completion (Pull-up enable/disable setting completed)
USB_ERR_PARA	Parameter error
USB_ERR_NG	Other error

### Description

This API enables or disables pull-up of D+/D- line.

### Note

1. Assign "*USB\_ON*" or "*USB\_OFF*" to the argument(*state*). Assign "*USB\_ON*" in order to enable pull-up, and assign "*USB\_OFF*" in order to disable pull-up. If the value other than *USB\_ON* or *USB\_OFF* is assigned, then *USB\_ERR\_PARA* will be the return value. When *USB\_NULL* is set to the argument, this driver operates the same processing as when *USB\_OFF* is set.
2. Use this API only when need the control of D+/D- line in the application program. (USB driver controls D+/D- line when attaching or detaching to USB Host)
3. This API is processed only in USB Peripheral mode. If this API is called in USB Host mode, then *USB\_ERR\_NG* will be the return value.
4. Do not call this API in the following function.
  - (1). Interrupt function.
  - (2). Callback function registered by *R\_USB\_Callback* function.

### Example

```
void usb_peri_application( void )
{
    :
    :
    R_USB_PullUp(USB_ON ); /* Pull-up enable */
    :
    :
    R_USB_PullUp(USB_OFF ); /* Pull-up disable */
    :
    :
}
```

## 4.13 R\_USB\_GetInformation

### Get USB device information

#### Format

```
usb_err_t      R_USB_GetInformation(usb_ctrl_t *p_ctrl, usb_info_t *p_info)
```

#### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_info	Pointer to usb_info_t structure area

#### Return Value

USB_SUCCESS	Successful completion (VBUS supply start/stop completed)
USB_ERR_PARA	Parameter error
USB_ERR_NG	Other error

#### Description

This function obtains completed USB-related events.

For information to be obtained, see chapter 9.6, **usb\_info\_t structure**.

#### Note

1. Call this API after calling the *R\_USB\_Open* function (and before calling the *R\_USB\_Close* function). When this API is called before calling *R\_USB\_Open* function, then *USB\_ERR\_PARA* will be the return value.
2. In USB Host mode, in order to identify the USB device to obtain information, assign the USB module number (*USB\_IP0/USB\_IP1*) to the member (*module*), and assign the device address to the member (*address*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
3. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
4. In USB Peripheral mode, assign *USB\_NULL* to the first argument (*p\_ctrl*).
5. In USB Host mode, do not assign *USB\_NULL* to the first argument (*p\_ctrl*). If *USB\_NULL* is assigned, then *USB\_ERR\_PARA* will be the return value.
6. Do not assign *USB\_NULL* to the second argument (*p\_info*). If *USB\_NULL* is assigned, then *USB\_ERR\_PARA* will be the return value.

#### Example

##### 1. In the case of USB Host mode

```
void usb_host_application( void )
{
    usb_ctrl_t ctrl;
    usb_info_t info;
    :
    ctrl.module = USB_IP0;
    ctrl.address = adr;
    R_USB_GetInformation( &ctrl, &info );
    :
}
```

##### 2. In the case of USB Peripheral mode

```
void usb_peri_application( void )
{
    usb_ctrl_t ctrl;
    usb_info_t info;
```

```
        :  
R_USB_GetInformation( (usb_ctrl_t *)USB_NULL, &info );  
        :  
}
```



## 4.14 R\_USB\_PipeRead

### Request data read via specified pipe

#### Format

```
usb_err_t      R_USB_PipeRead(usb_ctrl_t *p_ctrl, uint8_t *p_buf, uint32_t size)
```

#### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_buf	Pointer to area that stores data
size	Read request size

#### Return Value

USB_SUCCESS	Successfully completed
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	Specified pipe now handling data receive/send request
USB_ERR_NG	Other error

#### Description

##### 1. Non-OS

This function requests a data read (bulk/interrupt transfer) via the pipe specified in the argument. The read data is stored in the area specified in the argument (*p\_buf*). After the data read is completed, confirm the operation with the *R\_USB\_GetEvent* function return value (*USB\_STS\_READ\_COMPLETE*). To figure out the size of the data when a read is complete, check the return value (*USB\_STS\_READ\_COMPLETE*) of the *R\_USB\_GetEvent* function, and then refer to the member (*size*) of the *usb\_ctrl\_t* structure.

##### 2. RTOS

This function requests a data read (bulk/interrupt transfer) via the pipe specified in the argument. The read data is stored in the area specified in the argument (*p\_buf*). It is possible to check for the completion of a data read based on an argument (*USB\_STS\_READ\_COMPLETE* in the member (*event*) of the *usb\_ctrl\_t* structure) to the callback function registered in the USB driver. After confirming the argument to the callback function registered in the USB driver (*USB\_STS\_READ\_COMPLETE* in the event member of the *usb\_ctrl\_t* structure), reference the size member of the *usb\_ctrl\_t* structure to ascertain the size of the data from the completed read.

#### Note

1. This API only performs data read request processing. An application program does not wait for data read completion by using this API.
2. When *USB\_SUCCESS* is returned for the return value, it only means that a data read request was performed to the USB driver, not that the data read processing has completed.
3. When the read data is n times the max packet size and does not meet the read request size, the USB driver assumes the data transfer is still in process and *USB\_STS\_READ\_COMPLETE* is not set as the return value of the *R\_USB\_GetEvent* function. **(Non-OS)**
4. If the data that has been read is not n times the maximum packet size and does not satisfy the read request size, the USB driver will assume that the data transfer is still in progress, so it will not call the callback function that provides notification that data reception is complete. **(RTOS)**
5. Before calling this API, assign the PIPE number (*USB\_PIPE1* to *USB\_PIPE9*) to be used to the member (*pipe*) of the *usb\_ctrl\_t* structure. In USB Host mode, in order to identify the USB device to be accessed, assign the USB module number (*USB\_IP0* or *USB\_IP1*) to the member (*module*), and assign the device address to the member (*address*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
6. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.

7. If something other than *USB\_PIPE1* through *USB\_PIPE9* is assigned to the member (*pipe*) of the *usb\_ctrl\_t* structure, then *USB\_ERR\_PARA* will be the return value.
8. Do not assign a pointer to the auto variable (stack) area to the second argument (*p\_buf*).
9. The size of area assigned to the second argument (*p\_buf*) must be at least as large as the size specified for the third argument (*size*). Allocate the area of the following size when using DTC/DMA transfer.
  - (1). When *USB\_CFG\_CNTMDON* is specified for *USB\_CFG\_CNTMD* definition in *r\_usb\_basic\_config.h* (When using USB/USBAA module.)

Allocate the area more than n times FIFO buffer size. For FIFO buffer size, refer to the chapter **12.4, Reference or Change of PIPEBUF Register**
  - (2). When *USB\_CFG\_CNTMDOFF* is specified for *USB\_CFG\_CNTMD* definition in *r\_usb\_basic\_config.h*.

Allocate the area n times the max packet size.
10. If 0 (zero) is assigned to one of the arguments, then *USB\_ERR\_PARA* will be the return value.
11. It is not possible to repeatedly call the *R\_USB\_PipeRead* function with the same value assigned to the member (*pipe*) of the *usb\_ctrl\_t* structure. If the *R\_USB\_PipeRead* function is called repeatedly, then *USB\_ERR\_BUSY* will be the return value. To call the *R\_USB\_PipeRead* function more than once with the same value assigned to the member (*pipe*), first check the *USB\_STS\_READ\_COMPLETE* return value from the *R\_USB\_GetEvent* function, and then call the *R\_USB\_PipeRead* function. (**Non-OS**)
12. In CDC/HID Class, to perform a Bulk/Interrupt transfer, use the *R\_USB\_Read* function rather than this API. With Host Mass Storage Class, to perform data access to the MSC device, use the FAT (File Allocation Table) API rather than this API.
13. Assign nothing to the member (*type*) of the *usb\_ctrl\_t* structure. Even if the device class type or something is assigned to the member (*type*), it is ignored.
14. To transfer the data for a Control transfer, use the *R\_USB\_Read* function rather than this API.
15. Enable one of *USB\_CFG\_HVND\_USB* or *USB\_CFG\_PVND\_USE* definition when using this API. If this API is used when these definitions are not enabled, *USB\_ERR\_NG* is returned. For *USB\_CFG\_HVND\_USB* or *USB\_CFG\_PVND\_USE* definition, refer to chapter **8, Configuration**.
16. This API can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.
17. Do not call this API in the following function. (RTOS only)
  - (1). Interrupt function.
  - (2). Callback function registered by *R\_USB\_Callback* function.

**Example****1. Non-OS**

```
void      usb_application( void )
{
    usb_ctrl_t ctrl;
        :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_WRITE_COMPLETE:
                :
                ctrl.module = USB_IP1;
                ctrl.pipe = USB_PIPE1;
                R_USB_PipeRead(&ctrl, buf, size);
                :
            break;
            case USB_STS_READ_COMPLETE:
                :
            break;
                :
        }
    }
}
```

## 2. RTOS

```
/* Callback Function */
void usb_apl_callback (usb_ctrl_t *p_ctrl, usb_hdl_t hdl, uint8_t is_request)
{
    USB_APL_SND_MSG(hdl, (usb_msg_t *)p_ctrl);
}

/* Application Task */
void usb_application_task( void )
{
    usb_ctrl_t ctrl;
    usb_ctrl_t *p_mess;
    :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch (ctrl.event)
        {
            :
            case USB_STS_WRITE_COMPLETE:
                :
                ctrl.module = USB_IP1;
                ctrl.pipe = USB_PIPE1;
                R_USB_PipeRead(&ctrl, buf, size);
                :
                break;
            case USB_STS_READ_COMPLETE:
                :
                break;
            :
        }
    }
}
```

## 4.15 R\_USB\_PipeWrite

### Request data write to specified pipe

#### Format

```
usb_err_t      R_USB_PipeWrite(usb_ctrl_t *p_ctrl, uint8_t *p_buf, uint32_t size)
```

#### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_buf	Pointer to area that stores data
size	Write request size

#### Return Value

USB_SUCCESS	Successfully completed
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	Specified pipe now handling data receive/send request
USB_ERR_NG	Other error

#### Description

##### 1. Non-OS

This function requests a data write (bulk/interrupt transfer).

The write data is stored in the area specified in the argument (*p\_buf*).

After data write is completed, confirm the operation with the return value (*USB\_STS\_WRITE\_COMPLETE*) of the *R\_USB\_GetEvent* function.

To request the transmission of a NULL packet, assign *USB\_NULL* (0) to the third argument (*size*).

##### 2. RTOS

This function requests a data write (bulk/interrupt transfer).

The write data is stored in the area specified in the argument (*p\_buf*).

It is possible to check for the completion of a data write based on an argument (*USB\_STS\_WRITE\_COMPLETE* in the member (*event*) of the *usb\_ctrl\_t* structure) to the callback function registered in the USB driver.

To request the transmission of a NULL packet, assign *USB\_NULL* (0) to the third argument (*size*).

#### Note

1. This API only performs data write request processing. An application program does not wait for data write completion by using this API.
2. When *USB\_SUCCESS* is returned for the return value, it only means that a data write request was performed to the USB driver, not that the data write processing has completed.
3. Before calling this API, assign the PIPE number (*USB\_PIPE1* to *USB\_PIPE9*) to be used to the member (*pipe*) of the *usb\_ctrl\_t* structure. In USB Host mode, in order to identify the USB device to be accessed, assign the USB module number (*USB\_IP0* or *USB\_IP1*) to the member (*module*), and assign the device address to the member (*address*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
4. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
5. If something other than *USB\_PIPE1* through *USB\_PIPE9* is assigned to the member (*pipe*) of the *usb\_ctrl\_t* structure, then *USB\_ERR\_PARA* will be the return value.
6. Do not assign a pointer to the auto variable (stack) area to the second argument (*p\_buf*).
7. If 0 (zero) is assigned to the argument (*p\_ctrl* or *p\_buf*), then *USB\_ERR\_PARA* will be the return value.
8. It is not possible to repeatedly call the *R\_USB\_PipeWrite* function with the same value assigned to the member (*pipe*) of the *usb\_ctrl\_t* structure. If the *R\_USB\_PipeWrite* function is called repeatedly, then *USB\_ERR\_BUSY* will be the return value. To call the *R\_USB\_PipeWrite* function more than once with the same value assigned

to the member (*pipe*), first check the *USB\_STS\_WRITE\_COMPLETE* return value from the *R\_USB\_GetEvent* function, and then call the *R\_USB\_PipeWrite* function. (**Non-OS**)

9. In CDC/HID Class, to perform a Bulk/Interrupt transfer, use the *R\_USB\_Write* function rather than this API. In Host Mass Storage Class, to perform data access to the MSC device, use the FAT (File Allocation Table) API rather than this API.
10. Assign nothing to the member (*type*) of the *usb\_ctrl\_t* structure. Even if the device class type or something is assigned to the member (*type*), it is ignored.
11. To transfer the data for a Control transfer, use the *R\_USB\_Write* function rather than this API.
12. Enable one of *USB\_CFG\_HVND\_USB* or *USB\_CFG\_PVND\_USE* definition when using this API. If this API is used when these definitions are not enabled, *USB\_ERR\_NG* is returned. For *USB\_CFG\_HVND\_USB* or *USB\_CFG\_PVND\_USE* definition, refer to chapter 8, **Configuration**.
13. This API can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.
14. Do not call this API in the following function.
  - (1). Interrupt function.
  - (2). Callback function registered by *R\_USB\_Callback* function.

## Example

### 1. Non-OS

```
void    usb_application( void )
{
    usb_ctrl_t ctrl;
        :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_READ_COMPLETE:
                :
                ctrl.moudle = USB_IP0;
                ctrl.pipe = USB_PIPE2;
                R_USB_PipeWrite(&ctrl, g_buf, size);
                :
            break;
            case USB_STS_WRITE_COMPLETE:
                :
            break;
                :
        }
    }
}
```

## 2. RTOS

```
/* Callback Function */
void usb_apl_callback (usb_ctrl_t *p_ctrl, usb_hdl_t hdl, uint8_t is_request)
{
    USB_APL_SND_MSG(hdl, (usb_msg_t *)p_ctrl);
}

/* Application Task */
void usb_application_task( void )
{
    usb_ctrl_t ctrl;
    usb_ctrl_t *p_mess;
    :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch (ctrl.event)
        {
            :
            case USB_STS_READ_COMPLETE:
                :
                ctrl.moudle = USB_IP0;
                ctrl.pipe = USB_PIPE2;
                R_USB_PipeWrite(&ctrl, g_buf, size);
                :
            break;
            case USB_STS_WRITE_COMPLETE:
                :
            break;
            :
        }
    }
}
```

## 4.16 R\_USB\_PipeStop

### Stop data read/write via specified pipe

#### Format

```
usb_err_t      R_USB_PipeStop(usb_ctrl_t *p_ctrl)
```

#### Arguments

p\_ctrl                      Pointer to usb\_ctrl\_t structure area

#### Return Value

USB_SUCCESS	Successfully completed (stop request completed)
USB_ERR_PARA	Parameter error
USB_ERR_NG	Other error

#### Description

This function is used to terminate a data read/write operation.

#### Note

- Before calling this API, specify the selected pipe number (*USB\_PIPE0* to *USB\_PIPE9*) in the *usb\_ctrl\_t* member (*pipe*). When using two USB modules in the USB host mode, also specify the number of the selected USB module (*USB\_IP0/USB\_IP1*) in the member (*module*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value. In USB Peripheral mode, no assignment to the members (*address* and *module*) is required. If assignment is performed, it is ignored.
- If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
- If something other than *USB\_PIPE1* through *USB\_PIPE9* is assigned to the member (*pipe*) of the *usb\_ctrl\_t* structure, then *USB\_ERR\_PARA* will be the return value.
- If *USB\_NULL* is assigned to the argument (*p\_ctrl*), then *USB\_ERR\_PARA* will be the return value.
- In USB Host mode, *USB\_ERR\_NG* will be the return value when this API can not stop the data read/write request.
- When the *R\_USB\_GetEvent* function is called after a data read/write stopping has been completed, the return value *USB\_STS\_READ\_COMPLETE/USB\_STS\_WRITE\_COMPLETE* is returned. **(Non-OS)**
- USB driver set *USB\_STS\_READ\_COMPLETE* or *USB\_STS\_WRITE\_COMPLTE* to the argument (the member (*event*) of the *usb\_ctrl\_t* structure) in the callback function registered in the USB driver when a data read/write stopping has been completed. **(RTOS)**
- Assign nothing to the member (*type*) of the *usb\_ctrl\_t* structure. Even if the device class type or something is assigned to the member (*type*), it is ignored.
- Enable one of *USB\_CFG\_HVND\_USB* or *USB\_CFG\_PVND\_USE* definition when using this API. If this API is used when these definitions are not enabled, *USB\_ERR\_NG* is returned. For *USB\_CFG\_HVND\_USB* or *USB\_CFG\_PVND\_USE* definition, refer to chapter 8, **Configuration**.
- This API can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.
- Do not call this API in the following function.
  - Interrupt function.
  - Callback function registered by *R\_USB\_Callback* function.

#### Example



**1. Non-OS**

```

void    usb_application( void )
{
    usb_ctrl_t ctrl;
        :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_DETACH:
                :
                ctrl.module = USB_IP0;
                ctrl.pipe = USB_PIPE1;
                R_USB_PipeStop( &ctrl );
                :
            break;
            :
        }
    }
}

```

**2. RTOS**

```

/* Callback Function */
void usb_apl_callback (usb_ctrl_t *p_ctrl, usb_hdl_t hdl, uint8_t is_request)
{
    USB_APL_SND_MSG(hdl, (usb_msg_t *)p_ctrl);
}
/* Application Task */
void    usb_application_task( void )
{
    usb_ctrl_t ctrl;
    usb_ctrl_t *p_mess;
        :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch (ctrl.event)
        {
            :
            case USB_STS_DETACH:
                :
                ctrl.module = USB_IP0;
                ctrl.pipe = USB_PIPE1;
                R_USB_PipeStop( &ctrl );
                :
            break;
            :
        }
    }
}

```

## 4.17 R\_USB\_GetUsePipe

### Get used pipe number from bit map

#### Format

```
usb_err_t      R_USB_GetUsePipe(usb_ctrl_t *p_ctrl, uint16_t *p_pipe)
```

#### Arguments

p\_ctrl                      Pointer to usb\_ctrl\_t structure area  
p\_pipe                      Pointer to area that stores the selected pipe number (bit map information)

#### Return Value

USB\_SUCCESS      Successfully completed  
USB\_ERR\_PARA      Parameter error  
USB\_ERR\_NG        Other error

#### Description

Get the selected pipe number (number of the pipe that has completed initialization) via bit map information. The bit map information is stored in the area specified in argument (*p\_pipe*). Based on the information (*module* member and *address* member) assigned to the *usb\_ctrl\_t* structure, obtains the PIPE information of that USB device.

The relationship between the pipe number specified in the bit map information and the bit position is shown below.

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
—	—	—	—	—	—	PIPE9	PIPE8	PIPE7	PIPE6	PIPE5	PIPE4	PIPE3	PIPE2	PIPE1	PIPE0
0	0	0	0	0	0	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1	1

0: Not used, 1: Used

For example, when PIPE1, PIPE2, and PIPE8 are used, the value “0x0107” is set in the area specified in argument (*p\_pipe*).

#### Note

1. In USB Host mode, before calling this API, assign the device address of the USB device whose Pipe information is to be obtained, and the USB module number (*USB\_IP0/USB\_IP1*) connected to that USB device, to the module (*address* and *module*) of the *usb\_ctrl\_t* structure. If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
2. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
3. In USB Peripheral mode, assign *USB\_NULL* to the first argument (*p\_ctrl*). In USB Host mode, does not assign *USB\_NULL* to the first argument (*p\_ctrl*). If *USB\_NULL* is assigned, then *USB\_ERR\_PARA* will be the return value.
4. Bit map information b0(PIPE0) is always set to "1".
5. If *USB\_NULL* is assigned to the argument (*p\_ctrl*), then *USB\_ERR\_PARA* will be the return value.
6. This API can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.

**Example****(1). In the case of USB Host mode**

```
void    usb_application( void )
{
    uint16_t usepipe;
    usb_ctrl_t ctrl;

    while (1)
    {
        :
        case USB_STS_CONFIGURED:
            :
            ctrl.module = USB_IP0;
            ctrl.address = adr;
            R_USB_GetUsePipe(&ctrl, &usepipe);
            :
            break;
            :
    }
}
```

**(2). In the case of USB Peripheral mode**

```
void    usb_application( void )
{
    uint16_t usepipe;
    usb_ctrl_t ctrl;

    while (1)
    {
        :
        case USB_STS_CONFIGURED:
            :
            R_USB_GetUsePipe((usb_ctrl_t *)USB_NULL, &usepipe);
            :
            break;
            :
    }
}
```

---

## 4.18 R\_USB\_GetPipeInfo

---

### Get pipe information for specified pipe

#### Format

usb\_err\_t                    R\_USB\_GetPipeInfo(usb\_ctrl\_t \*p\_ctrl, usb\_pipe\_t \*p\_info)

#### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_info	Pointer to usb_pipe_t structure area

#### Return Value

USB_SUCCESS	Successfully completed
USB_ERR_PARA	Parameter error
USB_ERR_NG	Other error

#### Description

This function gets the following pipe information regarding the pipe specified in the argument (*p\_ctrl*) member (*pipe*): endpoint number, transfer type, transfer direction and maximum packet size. The obtained pipe information is stored in the area specified in the argument (*p\_info*).

#### Note

1. Before calling this API, specify the pipe number (*USB\_PIPE1* to *USB\_PIPE9*) in the *usb\_ctrl\_t* structure member (*pipe*). When using two USB modules in the USB host mode, also specify the USB module number in the member (*module*).
2. In USB Host mode, before calling this API, assign the device address of the USB device whose Pipe information is to be obtained, and the USB module number (*USB\_IP0/USB\_IP1*) connected to that USB device, to the members (*address* and *module*) of the *usb\_ctrl\_t* structure. If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
3. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
4. If 0 (zero) is assigned to one of the arguments, *USB\_ERR\_PARA* will be the return value.
5. In USB Peripheral mode, no assignment to the members (*address* and *module*) is required.
6. Refer to chapter 9.5, **usb\_pipe\_t structure** for details on the *usb\_pipe\_t* structure.
7. This function can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.

**Example**

```
void usb_host_application( void )
{
    usb_pipe_t info;
    usb_ctrl_t ctrl;

    while (1)
    {
        case USB_STS_CONFIGURED:
            ctrl.pipe = USB_PIPE3;
            ctrl.module = USB_IP1;
            ctrl.address= address;
            R_USB_GetPipeInfo( &ctrl, &info );
            break;
    }
}
```

## 5. Callback Function (RTOS only)

When a USB event has completed, the USB driver will call a callback function. A callback function is created by the user as a user application program, and must be registered in the USB driver using the *R\_USB\_Callback* function.

A callback functions that is registered in the USB driver must support the arguments and return values shown below.

Arguments	:	usb_ctrl_t	*p_ctrl	// Pointer to a usb_ctrl_t structure area
	:	usb_hdl_t	hdl	// Task handle which USB event has completed
	:	uint8_t	is_request	// Class request reception flag
Return values	:	void		// None

Note:

- (1). In addition to the USB completion event, a variety of information about the event is also set to the argument (*p\_ctrl*) by the USB driver. Be sure to notify the application task of the relevant argument information using the real-time OS API.
- (2). If the member (*event*) in the argument (*p\_ctrl*) is the following, the task handle of the application task which calls the API related to the event is set to the argument (*hdl*). In the other case, *USB\_NULL* is set to the argument (*hdl*).
  - a. USB\_STS\_READ\_COMPLETE
  - b. USB\_STS\_WRITE\_COMPLETE
  - c. USB\_STS\_REQUEST\_COMPLETE (Note a)
  - d. USB\_STS\_SUSPEND (Note b)
  - e. USB\_STS\_RESUME (Note b)
  - f. USB\_STS\_MSC\_CMD\_COMPLETE

Note:

- a. In USB Peripheral mode, when this driver received the class request with the no data status stage, *USB\_NULL* is set to the argument(*hdl*).
- b. In USB Peripheral mode, *USB\_NULL* is set to the argument(*hdl*).
- (3). In USB Peripheral mode, when this driver received the class request, *USB\_ON* is set to the argument (*is\_request*).In the other case, *USB\_OFF* is set. When the argument (*is\_request*) is *USB\_ON*, the information related the class request is set to the member (*setup*) in the argumet (*p\_ctrl*).

Example)

```
void usb_apl_callback (usb_ctrl_t *p_ctrl, usb_hdl_t hdl, uint8_t is_request)
{
    /* Notify application task of USB event information using the real-time OS API */
    USB_APL_SND_MSG(hdl, (usb_msg_t *)p_ctrl);
}
```

## 6. Return Value of R\_USB\_GetEvent Function / Retrieval of USB Completion Events

### (1). Non-OS

The return values for the *R\_USB\_GetEvent* function are listed below. Make sure you describe a program in the application program to be triggered by each return value from the *R\_USB\_GetEvent* function.

### (2). RTOS

When a USB event has completed, the callback function that has been registered using the *R\_USB\_Callback* function will be called by the USB driver. The member (*event*) of the argument to this callback function (the pointer to the *usb\_ctrl\_t* structure) will be set to the USB event information for the completed event. In the application program, be sure to define a callback function and, from inside that callback function, notify the application task of the completed USB event using, for example, an API that supports FreeRTOS.

Return Value	Description	Host	Peri
USB_STS_DEFAULT	USB device has transitioned to default state.	×	○
USB_STS_CONFIGURED	USB device has transitioned to configured state.	○	○
USB_STS_SUSPEND	USB device has transitioned to suspend state.	×	○
USB_STS_RESUME	USB device has returned from suspend state.	○	○
USB_STS_DETACH	USB device has been detached from USB host.	○	○
USB_STS_REQUEST	USB device received USB request (Setup).	×	○
USB_STS_REQUEST_COMPLETE	USB request data transfer/receive is complete; device has transitioned to status stage.	○	○
USB_STS_READ_COMPLETE	USB data read processing is complete.	○	○
USB_STS_WRITE_COMPLETE	USB data write processing is complete.	○	○
USB_STS_BC	Attachment of USB device that supports battery charging function detected.	○	×
USB_STS_OVERCURRENT	Overcurrent detected.	○	×
USB_STS_NOT_SUPPORT	Unsupported USB device has been connected.	○	×
USB_STS_NONE (Non-OS only)	No USB-related events.	○	○

### 6.1 USB\_STS\_DEFAULT

Indicates that the device state of the USB device has transitioned to the Default state.

### 6.2 USB\_STS\_CONFIGURED

Indicates that the device state of the USB device has transitioned to the Configured state. The *usb\_ctrl\_t* structure is set to the following information. In USB host mode, information is also set in the following *usb\_ctrl\_t* structure member.

- module : The module number of the USB module that has transitioned to the Configured state (USB Host mode only).
- type : Device class type (USB host mode only) when USB device has transitioned to configured state.
- address : Device address (USB host mode only) when USB device has transitioned to configured state.

### 6.3 USB\_STS\_SUSPEND

Indicates that the device state of the USB device has transitioned to the Configured state. The *usb\_ctrl\_t* structure is set to the following information.

### 6.4 USB\_STS\_RESUME

Indicates that the USB device in the Suspend state has been resumed from the Suspend state by the Resume signal.

Note:

When in USB Host mode, indicates that the USB device has been resumed by the RemoteWakeUp signal from an HID device.

## 6.5 USB\_STS\_DETACH

Indicates that the USB device is in the Detached state from USB Host. When in USB Host mode, information is also set to the following members of the *usb\_ctrl\_t* structure.

module : USB module number of detached USB module (in USB host mode only)  
address : Device address of the detached USB device (in USB host mode only)

## 6.6 USB\_STS\_REQUEST

Indicates the state in which the USB device has received a USB request (Setup). Information is also set to the following members of the *usb\_ctrl\_t* structure.

setup : Received USB request information (8 bytes)

Note:

1. When a request has been received for support of the no-data control status stage, even if the *R\_USB\_GetEvent* function is called, *USB\_STS\_REQUEST\_COMPLETE* is sent as the return value instead of *USB\_STS\_REQUEST*. **(Non-OS)**
2. If a request for support of the no data control status stage is received, the *event* member will be set to *USB\_STS\_REQUEST\_COMPLETE*, and not to *USB\_STS\_REQUEST*. **(RTOS)**
3. For more details on USB request information (8 bytes) stored in member (*setup*), refer to chapter 9.2, **usb\_setup\_t structure**.

## 6.7 USB\_STS\_REQUEST\_COMPLETE

Indicates that the stage transits to the idle stage after the status stage of a control transfer is completed. In addition to this, the following member of the *usb\_ctrl\_t* structure also has information.

module : USB module number of completed the request (in USB host mode only)  
address : Device address of USB device of completed the request (in USB host mode only)  
status : Sets either USB\_ACK / USB\_STALL

Note:

When a request has been received for support of the no-data control status stage, USB request information (8 bytes) is stored in the *usb\_ctrl\_t* structure member (*setup*). For more details on USB request information (8 bytes) stored in member (*setup*), refer to chapter 9.2, **usb\_setup\_t structure**.

## 6.8 USB\_STS\_READ\_COMPLETE

Indicates that a data read has been completed by *R\_USB\_Read* / *R\_USB\_PipeRead*. Information is also set in the following *usb\_ctrl\_t* structure member.

module : USB module number of completed data read (in USB host mode only)  
address : Device address of USB device of completed data read (in USB host mode only)  
type : Device class type of completed data read (only set when using *R\_USB\_Read* function)  
size : Size of read data  
pipe : Pipe number of completed data read  
status : Read completion error information

Note:

1. In USB host mode, device address of USB device of completed data read is set in the member (*address*) and the USB module number (*USB\_IP0* / *USB\_IP1*) of the connected USB device is set in the member (*module*).
2. In the case of the *R\_USB\_PipeRead* function, the member (*pipe*) has the PIPE number (*USB\_PIPE1* to *USB\_PIPE9*) for which data read is completed. In the case of the *R\_USB\_Read* function, *USB\_NULL* is set to the member (*pipe*).
3. For details on device class type, refer to chapter 7, **Device Class Types**.
4. The member (*status*) has the read completion error information. The error information set to this member is as follows.



USB_SUCCESS	:	Data read successfully completed
USB_ERR_OVER	:	Received data size over
USB_ERR_SHORT	:	Received data size short
USB_ERR_NG	:	Data reception failed

- (1). Even if the reception request size is less than  $\text{MaxPacketSize} \times n$ , if  $\text{MaxPacketSize} \times n$  bytes of data are received, then *USB\_ERR\_OVER* is set.  
For example, if *MaxPacketSize* is 64 bytes, the specified reception request size is 510 bytes (less than  $\text{MaxPacketSize} \times n$ ), and the actual received data size is 512 bytes ( $\text{MaxPacketSize} \times n$ ), then *USB\_ERR\_OVER* is set.
- (2). If the reception request size is less than  $\text{MaxPacketSize} \times n$  and the actual received data size is less than this reception request size, then *USB\_ERR\_SHORT* is set.  
For example, if *MaxPacketSize* is 64 bytes, the specified reception request size is 510 bytes, and the actual received data size is 509 bytes, then *USB\_ERR\_SHORT* is set.
- (3). The read data size is set in the member *size* when the read completion error information is *USB\_SUCCESS* or *USB\_ERR\_SHORT*.

## 6.9 USB\_STS\_WRITE\_COMPLETE

Indicates that a data read has been completed by *R\_USB\_Write* / *R\_USB\_PipeWrite*. Information is also set in the following *usb\_ctrl\_t* structure member.

module	:	USB module number of completed data write (in USB host mode only)
address	:	Device address of USB device of completed data write (in USB host mode only)
type	:	Device class type of completed data write (only set when using <i>R_USB_Write</i> function)
pipe	:	Pipe number of completed data write
status	:	Write completion error information

Note:

1. For *R\_USB\_Write* function: class type is set in the *usb\_ctrl\_t* structure member (*type*) and *USB\_NULL* is set in the member (*pipe*).
2. In the case of *R\_USB\_PipeWrite* function, the member (*pipe*) has the PIPE number (*USB\_PIPE1* to *USB\_PIPE9*) for which data write has been completed. In the case of the *R\_USB\_Write* function, *USB\_NULL* is set to the member (*pipe*).
3. For details on device class type, refer to chapter 7, **Device Class Types**.
4. The member (*status*) has the write completion error information. The error information set to this member is as follows.

USB_SUCCESS	:	Data write successfully completed
USB_ERR_NG	:	Data transmission failed

## 6.10 USB\_STS\_BC

Indicates the state in which a USB Host / USB device that supports the battery charging feature has been connected. Information is also set in the following *usb\_ctrl\_t* structure member.

module	:	USB module which USB device supports Battery Charging function is connected to (USB Host mode only)
--------	---	---

## 6.11 USB\_STS\_OVERCURRENT

In USB Host mode, indicates that the overcurrent is detected. Information is also set in the following *usb\_ctrl\_t* structure member.

module	:	USB module number of detected overcurrent ( <i>USB_IP0</i> / <i>USB_IP1</i> )
--------	---	---

## 6.12 USB\_STS\_NOT\_SUPPORT

In USB Host mode, indicates that an unsupported USB device is connected, then *USB\_STS\_NOT\_SUPPORT* will be the return value.

## 6.13 USB\_STS\_NONE (Non-OS)

When the *R\_USB\_GetEvent* function is called in the “no USB-related event” status, *USB\_STS\_NONE* is sent as the return value. Information is also set in the following *usb\_ctrl\_t* structure member.

status : USB device status

## 7. Device Class Types

The device class types assigned to the member(*type*) of the *usb\_ctrl\_t* and *usb\_info\_t* structures are as follows. Please specify the device class supported by your system.

Device class type	Description
USB_HCDC	Host Communication Device Class
USB_HCDCC	Host Communication Device Class (Control Class)
USB_HHID	Host Human Interface Device Class
USB_HMSC	Host Mass Storage Device Class
USB_PCDC	Peripheral Communication Device Class
USB_PCDCC	Peripheral Communication Device Class (Control Class)
USB_PHID	Peripheral Human Interface Device Class
USB_PMSC	Peripheral Mass Storage Device Class
USB_HVNDR	Host Vendor Class
USB_PVNDR	Peripheral Vendor Class

Note:

1. Host Communication Device Class: When transmitting data in a bulk transfer, specify *USB\_HCDC* in the *usb\_ctrl\_t* structure member (*type*). When transmitting data in an interrupt transfer, specify *USB\_HCDC* in the *usb\_ctrl\_t* structure member (*type*).
2. Peripheral Communication Device Class: When transmitting data in a bulk transfer, specify *USB\_PCDC* in the *usb\_ctrl\_t* structure member (*type*). When transmitting data in an interrupt transfer, specify *USB\_PCDCC* in the *usb\_ctrl\_t* structure member (*type*).
3. For an application program, do not assign *USB\_HMSC*, *USB\_PMSC*, *USB\_HVND*, and *USB\_PVND* to the member (*type*) of the *usb\_ctrl\_t* structure.

## 8. Configuration (r\_usb\_basic\_config.h)

### 8.1 USB Host and Peripheral Common Configurations

Perform settings for the definitions below in both USB Host and USB Peripheral modes.

#### 1. USB operating mode setting

Set the operating mode (Host/Peripheral) of the USB module for the definition of *USB\_CFG\_MODE*.

##### (1). USB Host mode

Set *USB\_CFG\_HOST* for the definition of *USB\_CFG\_MODE*.

```
#define USB_CFG_MODE USB_CFG_HOST
```

##### (2). USB Peripheral mode

Set *USB\_CFG\_PERI* for the definition of *USB\_CFG\_MODE*.

```
#define USB_CFG_MODE USB_CFG_PERI
```

#### 2. Argument check setting

Specify whether to perform argument checking for all of the APIs listed in chapter 4, **API Functions**.

```
#define USB_CFG_PARAM_CHECKING USB_CFG_ENABLE // Checks arguments.
#define USB_CFG_PARAM_CHECKING USB_CFG_DISABLE // Does not check arguments.
```

#### 3. Device class setting

Enable the definition of the USB driver to be used among the definitions below.

```
#define USB_CFG_HCDC_USE // Host Communication Device Class
#define USB_CFG_HHID_USE // Host Human Interface Device Class
#define USB_CFG_HMSC_USE // Host Mass Storage Class
#define USB_CFG_HVNDR_USE // Host Vendor Class
#define USB_CFG_PCDC_USE // Peripheral Communication Device Class
#define USB_CFG_PHID_USE // Peripheral Human Interface Device Class
#define USB_CFG_PMSC_USE // Peripheral Mass Storage Class
#define USB_CFG_PVNDR_USE // Peripheral Vendor Class
```

#### 4. DTC use setting

Specify whether to use the DTC.

```
#define USB_CFG_DTC USB_CFG_ENABLE // Uses DTC
#define USB_CFG_DTC USB_CFG_DISABLE // Does not use DTC
```

Note:

If *USB\_CFG\_ENABLE* is set for the definition of *USB\_CFG\_DTC*, be sure to set *USB\_CFG\_DISABLE* for the definition of *USB\_CFG\_DMA* in 5 below.

#### 5. DMA use setting

Specify whether to use the DMA.

```
#define USB_CFG_DMA USB_CFG_ENABLE // Uses DMA.
#define USB_CFG_DMA USB_CFG_DISABLE // Does not use DMA.
```

Note:

- (1). If *USB\_CFG\_ENABLE* is set for the definition of *USB\_CFG\_DMA*, be sure to set *USB\_CFG\_DISABLE* for the definition of *USB\_CFG\_DTC* in 4 above.
- (2). If *USB\_CFG\_ENABLE* is set for the definition of *USB\_CFG\_DMA*, set the DMA Channel number for the definition in 6 below.

#### 6. DMA Channel setting

If *USB\_CFG\_ENABLE* is set in 5 above, set the DMA Channel number to be used.

```
#define USB_CFG_USB0_DMA_TX    DMA Channel number    // Transmission setting for
                                USB0 module
#define USB_CFG_USB0_DMA_RX    DMA Channel number    // Transmission setting for
                                USB0 module
#define USB_CFG_USB1_DMA_TX    DMA Channel number    // Transmission setting for
                                USB1 module
#define USB_CFG_USB1_DMA_RX    DMA Channel number    // Transmission setting for
                                USB1 module
```

**Note:**

- (1). Set one of the DMA channel numbers from *USB\_CFG\_CH0* to *USB\_CFG\_CH7*. Do not set the same DMA Channel number.
- (2). If DMA transfer is not used, set *USB\_CFG\_NOUSE* as the DMA Channel number.
- (3). Be sure to specify the different DMA channel number to DMA sending and receiving when using USB Host Mass Storage class.

The following is the specifying example.

- a. When using the DMA transfer for DMA sending and receiving by using USB0 module

```
#define USB_CFG_USB0_DMA_TX    USB_CFG_CH0
#define USB_CFG_USB0_DMA_RX    USB_CFG_CH3
```

**Note:**

Be sure to specify USB PIPE1 and USB PIPE2 for DMA transfer.

- b. When using DMA for data sending and not using DMA for data receiving using USB1 module

```
#define USB_CFG_USB1_DMA_TX    USB_CFG_CH0
```

**Note:**

Specify the one of USB PIPE1 or USB PIPE2 for the sending USB PIPE (DMA transfer) and specify the one of USB\_PIPE3, USB\_PIPE4 or USB\_PIPE5 for the receiving USB PIPE.

- c. When using DMA for data sending and not using DMA for data receiving using USB0 module, and, when using DMA for data receiving and not using DMA for data sending using USB1 module.

```
#define USB_CFG_USB0_DMA_TX    USB_CFG_CH1
#define USB_CFG_USB1_DMA_RX    USB_CFG_CH2
```

**Note:**

- a) In USB0 module, specify the one of USB PIPE1 or USB PIPE2 for the sending USB PIPE (DMA transfer) and specify the one of USB\_PIPE3, USB\_PIPE4 or USB\_PIPE5 for the receiving USB PIPE.
- b) In USB1 module, specify the one of USB PIPE1 or USB PIPE2 for the receiving USB PIPE (DMA transfer) and specify the one of USB\_PIPE3, USB\_PIPE4 or USB\_PIPE5 for the sending USB PIPE.

**7. Setting Battery Charging (BC) function**

Set the Battery Charging function to be enabled or disabled as the following definition. Set *USB\_CFG\_ENABLE* as the definition below in order to use the Battery Charging function.

```
#define USB_CFG_BC            USB_CFG_ENABLE    // Uses BC function.
#define USB_CFG_BC            USB_CFG_DISABLE   // Does not use BC function.
```

**Note:**

In the case of a USB module other than USBAA/USBA module, this definition is ignored.

**8. PLL clock frequency setting**

Set the PLL clock source frequency for the definition below.

```
#define USB_CFG_CLKSEL        USB_CFG_24MHZ    // Set to 24 MHz
#define USB_CFG_CLKSEL        USB_CFG_20MHZ    // Set to 20 MHz
#define USB_CFG_CLKSEL        USB_CFG_OTHER    // Set to other than 24/20 MHz
```

## Note:

- a. In the case of a USB module other than USBAA/USBA module, this definition is ignored.
- b. The USBAA or USBA module is a USB module used in the RX71M or RX64M.
- c. To input a clock other than a 24-MHz or 20-MHz clock to the XTAL pin, set *USB\_CFG\_OTHER* for the definition of *USB\_CFG\_CLKSEL*. If *USB\_CFG\_OTHER* is set, the USBAA/USBA module operates in Classic (CL) only mode. For information on CL only mode, refer to the RX71M/RX64M hardware manual.

## 9. CPU bus wait setting

Assign the value to be set for the BUSWAIT register in the USBAA/USBA module as the definition of *USB\_CFG\_BUSWAIT*.

```
#define USB_CFG_BUSWAIT 7 // Set to 7 wait cycles
```

## Note:

- (1). For the calculation of the value to be set for *USB\_CFG\_BUSWAIT*, refer to the chapter of the BUSWAIT register in the RX71M/RX64M hardware manual.
- (2). With regard to the USB module other than the USBAA/USBA module, this definition is ignored.
- (3). The USBAA or USBA module is a USB module used in the RX71M or RX64M.

## 10. Interrupt Priority Level setting

Assign the interrupt priority level of the interrupt related to USB for *USB\_CFG\_INTERRUPT\_PRIORITY* definition.

```
#define USB_CFG_INTERRUPT_PRIORITY 3 // 1(low) – 15(high)
```

## 8.2 Settings in USB Host Mode

To make a USB module to work as a USB Host, set the definitions below according to the system to be used.

## 1. Setting power source IC for USB Host

Set the VBUS output of the power source IC for the USB Host being used to either Low Assert or High Assert. For Low Assert, set *USB\_CFG\_LOW* as the definition below, and for High Assert, set *USB\_CFG\_HIGH* as the definition below.

```
#define USB_CFG_VBUS USB_CFG_HIGH // High Assert
#define USB_CFG_VBUS USB_CFG_LOW  // Low Assert
```

## 2. Setting USB port operation when using Battery Charging (BC) function

Set the Dedicated Charging Port (DCP) to be enabled or disabled as the following definition. If the BC function is being implemented as the Dedicated Charging Port (DCP), then set *USB\_CFG\_ENABLE* as the definition below. If *USB\_CFG\_DISABLE* is set, the BC function is implemented as the Charging Downstream Port (CDP).

```
#define USB_CFG_DCP USB_CFG_ENABLE // DCP enabled.
#define USB_CFG_DCP USB_CFG_DISABLE // DCP disabled.
```

## Note:

If *USB\_CFG\_ENABLE* is set for this definition, then set *USB\_CFG\_ENABLE* for the definition of *USB\_CFG\_BC* in above.

## 3. USB Hub use setting

Specify whether to use the USB Hub.

```
#define USB_CFG_HUB USB_CFG_ENABLE // Using USB Hub
#define USB_CFG_HUB USB_CFG_DISABLE // Not using USB Hub
```

## 4. Type-C use setting

Specify whether to use the Type-C.

```
#define USB_CFG_TYPEC USB_CFG_ENABLE // Using Type-C
#define USB_CFG_TYPEC USB_CFG_DISABLE // Not using Type-C
```

## 5. Setting Compliance Test mode

Set Compliance Test support for the USB Embedded Host to be enabled or disabled as the following definition. To perform the Compliance Test, set *USB\_CFG\_ENABLE* as the definition below. When not performing the Compliance Test, set *USB\_CFG\_DISABLE* as the definition below.

```
#define USB_CFG_COMPLIANCE USB_CFG_ENABLE // Compliance Test supported.
#define USB_CFG_COMPLIANCE USB_CFG_DISABLE // Compliance Test not supported.
```

## 6. Setting a Targeted Peripheral List (TPL)

Set the number of the USB devices and the VID and PID pairs for the USB device to be connected as necessary as the following definition. For a method to set the TPL, see chapter 3.6, **How to Set the Target Peripheral List (TPL)**.

```
#define USB_CFG_TPLCNT Number of the USB devices to be connected.
#define USB_CFG_TPL Set the VID and PID pairs for the USB device to be connected.
```

## 7. Setting a Targeted Peripheral List (TPL) for USB Hub

Set the number of the USB Hubs and the VID and PID pairs for the USB Hubs to be connected as the following definition. For a method to set the TPL, see chapter 3.6, **How to Set the Target Peripheral List (TPL)**.

```
#define USB_CFG_HUB_TPLCNT Set the number of the USB Hubs to be connected.
#define USB_CFG_HUB_TPL Set the VID and PID pairs for the USB Hub to be connected.
```

## 8. Setting Hi-speed Embedded Host Electrical Test

Set Hi-speed Embedded Host Electrical Test support to be enabled or disabled as the following definition. To perform the Hi-speed Embedded Host Electrical Test, set *USB\_CFG\_ENABLE* as the definition below.

```
#define USB_CFG_ELECTRICAL USB_CFG_ENABLE // HS Electrical Test supported
#define USB_CFG_ELECTRICAL USB_CFG_DISABLE // HS Electrical Test not supported
```

Note:

- (1). If *USB\_CFG\_ENABLE* is set for this definition, then set *USB\_CFG\_ENABLE* for the definition of *USB\_CFG\_COMPLIANCE* in 3 above.
- (2). In the case of a USB module other than USBAA module, this definition is ignored.

## 8.3 Settings in USB Peripheral Mode

To make a USB module to work as a USB Peripheral, set the definitions below according to the system to be used.

## 1. USB module selection setting

Set the USB module number to be used for the definition of *USB\_CFG\_USE\_USBIP*.

```
#define USB_CFG_USE_USBIP USB_CFG_IP0 // Uses USB0 module
#define USB_CFG_USE_USBIP USB_CFG_IP1 // Uses USB1 module
```

Note:

If the MCU being used only supports one USB module, then set *USB\_CFG\_IP0* for the definition of *USB\_CFG\_USE\_USBIP*.

## 2. Request notification setting

Set whether this driver notifies the application program the reception of *SET\_INTERFACE*, *SET\_FEATURE/CLEAR\_FEATURE* request or not.

```
#define USB_CFG_REQUEST USB_CFG_ENABLE // Notification
#define USB_CFG_REQUEST USB_CFG_DISABLE // Not notification
```

**Note:**

This driver notifies the application program the request reception when Feature Selector (wValue) in the received *SET\_FEATURE/CLEAR\_FEATURE* is *DEVICE\_REMOTE\_WAKEUP*.

**8.4 Other Definitions**

In addition to the above, the following definitions 1 through 2 are also provided in *r\_usb\_basic\_config.h*. Recommended values have been set for these definitions, so only change them when necessary.

**1. DBLB bit setting**

Set or clear the DBLB bit in the pipe configuration register (PIPECFG) of the USB module using the following definition.

```
#define USB_CFG_DBLB USB_CFG_DBLBON // DBLB bit set.
#define USB_CFG_DBLB USB_CFG_DBLBOFF // DBLB bit cleared.
```

**2. CNTMD bit setting (USBA/USBAa module only)**

Set or clear the CNTMD bit in the pipe configuration register (PIPECFG) of the USB module using the following definition.

```
#define USB_CFG_CNTMD USB_CFG_CNTMDON // CNTMD bit set.
#define USB_CFG_CNTMD USB_CFG_CNTMDOFF // CNTMD bit cleared.
```

**Note:**

- (1). The setting of the DBLB and CNTMD bits above is performed for all the pipes being used. Therefore, in this configuration, it is not possible to perform the pipe-specific settings for these bits.
- (2). For details on the pipe configuration register (PIPECFG), refer to the MCU hardware manual.
- (3). Be sure to set SHTNAK bit.



## 9. Structures

This chapter describes the structures used in the application program.

### 9.1 usb\_ctrl\_t structure

The *usb\_ctrl\_t* structure is used for USB data transmission and other operations. The *usb\_ctrl\_t* structure can be used in all APIs listed in Table 4-1, excluding *R\_USB\_GetVersion*.

```
typedef struct usb_ctrl {
    uint8_t      module;          /* Note 1 */
    uint8_t      address;         /* Note 2 */
    uint8_t      pipe;            /* Note 3 */
    uint8_t      type;            /* Note 4 */
    uint8_t      status;          /* Note 5 */
    uint8_t      event;           /* Note 6 */
    uint32_t     size;            /* Note 7 */
    usb_set_up   setup;           /* Note 8 */
    void         *p_data;         /* Note 9 */
} usb_ctrl_t;
```

Note:

1. Member (*module*) is used to specify the USB module number.
2. Member (*address*) is used to specify the USB device address.
3. Member (*pipe*) is used to specify the USB module pipe number. For example, specify the pipe number when using the *R\_USB\_PipeRead* function or *R\_USB\_PipeWrite* function.
4. Member (*type*) is used to specify the device class type.
5. The USB device state or the result of a USB request command is stored in the member (*status*). The USB driver sets in this member. Therefore, except when initializing the *usb\_ctrl\_t* structure area or processing an ACK/STALL response to a vendor class request, the application program should not write into this member. For status stage processing to a vendor class request, see chapter **10.2.3, Status Stage Processing**.
6. Member (*event*) is used to set the completion event by USB driver. (RTOS only)
7. Member (*size*) is used to set the size of data that is read. The USB driver sets this member. Therefore, the application program should not write into this member.
8. Member (*setup*) is used to set the information about a class request.
9. Member (*p\_data*) is used to set information other than the above.

### 9.2 usb\_setup\_t structure

The *usb\_setup\_t* structure is used when sending or receiving a USB class request. To send a class request to a USB device (in USB Host mode), assign to the members of the *usb\_setup\_t* structure the information for the class request to be sent. To obtain class request information from the USB Host (in USB Peripheral mode), refer to the members of the *usb\_setup\_t* structure.

```
typedef struct usb_setup {
    uint16_t     type;             /* Note 1 */
    uint16_t     value;            /* Note 2 */
    uint16_t     index;            /* Note 3 */
    uint16_t     length;           /* Note 4 */
} usb_setup_t;
```

Note:

1. In USB Host mode, the value assigned to the member (*type*) is set to the USBREQ register, and in USB Peripheral mode, the value of the USBREQ register is set to the member (*type*).
2. In USB Host mode, the value assigned to the member (*value*) is set to the USBVAL register, and in USB Peripheral mode, the value of the USBVAL register is set to the member (*value*).
3. In USB Host mode, the value assigned to the member (*index*) is set to the USBINDX register, and in USB Peripheral mode, the value of the USBINDX register is set to the member (*index*).
4. In USB Host mode, the value assigned to the member (*length*) is set to the USBLENG register, and in USB Peripheral mode, the value of the USBLENG register is set to the member (*length*).
5. For information on the USBREQ, USBVAL, USBINDX, and USBLENG registers, refer to the MCU user's manual.

### 9.3 usb\_cfg\_t structure

The *usb\_cfg\_t* structure is used to register essential information such as settings to indicate use of USB host or USB peripheral as the USB module and to specify USB speed. This structure can only be used for the *R\_USB\_Open* function listed in **Table 4-1**.

```
typedef struct usb_cfg {
    uint8_t      usb_mode;      /* Note 1 */
    uint8_t      usb_speed;     /* Note 2 */
    usb_descriptor_t *p_usb_reg; /* Note 3 */
} usb_cfg_t;
```

Note:

1. Specify whether to use USB host or USB peripheral mode as the USB module in member (*usb\_mode*). To select USB host, set *USB\_HOST*; to select USB peripheral, set *USB\_PERI* in the member.
2. Specify the USB speed for USB module operations. Set “*USB\_HS*” to select Hi-speed, “*USB\_FS*” to select Full-speed.
3. Specify the *usb\_descriptor\_t* type pointer for the USB device in member (*p\_usb\_reg*). Refer to chapter 9.4, **usb\_descriptor\_t structure** for details on the *usb\_descriptor\_t* type. This member can only be set in USB peripheral mode. Even if it is set in USB host mode, the settings will be ignored.

### 9.4 usb\_descriptor\_t structure

The *usb\_descriptor\_t* structure stores descriptor information such as device descriptor and configuration descriptor. The descriptor information set in this structure is sent to the USB host as response data to a standard request during enumeration of the USB host. This structure is specified in the *R\_USB\_Open* function argument.

```
typedef struct usb_descriptor {
    uint8_t      *p_device;      /* Note 1 */
    uint8_t      *p_config_f;    /* Note 2 */
    uint8_t      *p_config_h;    /* Note 3 */
    uint8_t      *p_qualifier;    /* Note 4 */
    uint8_t      **pp_string;     /* Note 5 */
    uint8_t      num_string;      /* Note 6 */
} usb_descriptor_t;
```

Note:

1. Specify the top address of the area that stores the device descriptor in the member (*p\_device*).
2. Specify the top address of the area that stores the Full-speed configuration descriptor in the member (*p\_config\_f*). Even when using Hi-speed, make sure you specify the top address of the area that stores the Full-speed configuration descriptor in this member.
3. Specify the top address of the area that stores the Hi-speed configuration descriptor in the member (*p\_config\_h*). For Full-speed, specify *USB\_NULL* to this member.

4. Specify the top address of the area that stores the qualifier descriptor in the member (*p\_qualifier*). For Full-speed, specify *USB\_NULL* to this member.
5. Specify the top address of the string descriptor table in the member (*pp\_string*). In the string descriptor table, specify the top address of the areas that store each string descriptor.

## Ex. 1) Full-speed

```
usb_descriptor_t usb_descriptor =
{
    smp_device,
    smp_config_f,
    USB_NULL,
    USB_NULL,
    smp_string,
    3,
};
```

## Ex. 2) Hi-speed

```
usb_descriptor_t usb_descriptor =
{
    smp_device,
    smp_config_f,
    smp_config_h,
    smp_qualifier,
    smp_string,
    3,
};
```

6. Specify the number of the string descriptor which set in the string descriptor table to the member (*num\_string*).

## 9.5 usb\_pipe\_t structure

The USB driver sets information about the USB pipe (PIPE1 to PIPE9) in the *usb\_pipe\_t* structure. Use the *R\_USB\_GetPipeInfo* function to reference the pipe information set in the structure.

```
typedef struct usb_pipe {
    uint8_t    ep;           /* Note 1 */
    uint8_t    type;        /* Note 2 */
    uint16_t    mxps;       /* Note 3 */
} usb_pipe_t;
```

### Note:

1. The endpoint number is set in member (*ep*). The direction (IN/OUT) is set in the highest bit. When the highest bit is "1", the direction is IN, when "0", the direction is OUT.
2. The transfer type (bulk/interrupt) is set in member (*type*). For a Bulk transfer, "*USB\_BULK*" is set, and for an Interrupt transfer, "*USB\_INT*" is set.
3. The maximum packet size is set in member (*mxps*).

## 9.6 usb\_info\_t structure

The following information on the USB device is set for the *usb\_info\_t* structure by calling the *R\_USB\_GetInformation* function.

```
typedef struct usb_info {
    uint8_t    type;        /* Note 1 */
    uint8_t    speed;       /* Note 2 */
    uint8_t    status;      /* Note 3 */
    uint8_t    port;        /* Note 4 */
} usb_info_t;
```

### Note:

1. In USB Host mode, the device class type of the connected USB device is set for the member (*type*). In USB Peripheral mode, the supporting device class type is set for the member (*type*). For information on the device class types, see **7, Device Class Types**. (In the case of PCDC, *USB\_PCDC* is set in this member(*type*))
2. The USB speed (*USB\_HS/USB\_FS/USB\_LS*) is set for the member (*speed*). In USB Host mode, if no USB device is connected, then *USB\_NOT\_CONNECT* is set.
3. One of the following states of the USB device is set for the member (*status*).

USB_STS_DEFAULT	:	Default state
USB_STS_ADDRESS	:	Address state (USB Peripheral only)
USB_STS_CONFIGURED	:	Configured state
USB_STS_SUSPEND	:	Suspend state
USB_STS_DETACH	:	Detach state

- The following information of the Battery Charging (BC) function of the device connected to the port is set to the member (*port*).

USB_SDP	:	Standard Downstream Port
USB_CDP	:	Charging Downstream Port
USB_DCP	:	Dedicated Charging Port (USB Peripheral only)

## 9.7 usb\_compliance\_t structure

This structure is used when running the USB compliance test. The structure specifies the following USB-related information:

```
typedef struct usb_compliance {
    usb_ct_status_t    status;      /* Note 1 */
    uint16_t           vid;         /* Note 2 */
    uint16_t           pid;         /* Note 3 */
} usb_compliance_t;
```

Note:

- The member status can be set to the following values to indicate the status of the connected USB device:

USB_CT_ATTACH	:	USB device attach detected
USB_CT_DETACH	:	USB device detach detected
USB_CT_TPL	:	Attach detected of USB device listed in TPL
USB_CT_NOTTPL	:	Attach detected of USB device not listed in TPL
USB_CT_HUB	:	USB hub connection detected
USB_CT_OVRCUR	:	Overcurrent detected
USB_CT_NORES	:	No response to control read transfer
USB_CT_SETUP_ERR	:	Setup transaction error occurred

- The member vid is set to a value indicating the vendor ID of the connected USB device.
- The member pid is set to a value indicating the product ID of the connected USB device.

## 10. USB Class Requests

This chapter describes how to process USB class requests. As standard requests are processed by the USB driver, they do not need to be included in the application program.

### 10.1 USB Host operations

#### 10.1.1 USB request (setup) transfer

A USB request is sent to the USB device using the *R\_USB\_Write* function. The following describes the transfer procedure.

1. Set *USB\_REQUEST* in the *usb\_ctrl\_t* structure member (*type*).
2. Set the USB request (setup: 8 bytes) in the *usb\_ctrl\_t* structure member (*setup*) area. Refer to chapter 9.2, **usb\_setup\_t structure** for details on how to set member (*setup*).
3. If the request supports the control write data stage, store the transfer data in a buffer. If the request supports the control read data stage, reserve a buffer to store the data received from the USB device. Note: do not reserve the auto-variable (stack) area of the buffer.
4. Specify the data buffer top address in the second argument of the *R\_USB\_Write* function, and the data size in the third argument. If the request supports no-data control status stage, specify *USB\_NULL* for both the second and third arguments.
5. Call the *R\_USB\_Write* function.

#### 10.1.2 USB request completion

##### 1. Non-OS

Confirm the completion of a USB request with the return value (*USB\_STS\_REQUEST\_COMPLETE*) of the *R\_USB\_GetEvent* function. For a request that supports the control read data stage, the received data is stored in the area specified in the second argument of the *R\_USB\_Write* function.

##### 2. RTOS

It is possible to check for the completion of a USB request based on an argument to the callback function registered in the USB driver (*USB\_STS\_REQUEST\_COMPLETE* in the event member of the *usb\_ctrl\_t* structure). In the case of a request for support of the control read data stage, the received data will be stored in the area specified by the second *R\_USB\_Write* function.

Confirm the USB request results from the *usb\_ctrl\_t* structure member (*status*), which is set as follows.

status	Description
USB_ACK	Successfully completed
USB_STALL	Stalled

#### 10.1.3 USB request processing example

##### 1. Non-OS

```
void usr_application (void)
{
    usb_ctrl_t ctrl;
    switch( R_USB_GetEvent( &ctrl ) )
    {
        /* Request setting processing to ctrl.setup */
        :
        /* For request that supports control write data stage, set transfer data in g_buf area. */
        :
        ctrl.type = USB_REQUEST;
        R_USB_Write(&ctrl, g_buf, size); /* Send USB request (Setup stage). */
        break;
        case USB_STS_REQUEST_COMPLETE: /* USB request completed. */
            if(USB_ACK == ctrl.status) /* Confirm results of USB request. */
            {
                /* For request that supports control read data stage, store receive data in g_buf area. */
                :
            }
    }
}
```

```

        break;
    }
}

```

## 2. RTOS

```

void usr_application_task (void )
{
    usb_ctrl_t ctrl;
    usb_ctrl_t *p_mess;
    :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch(ctrl.event)
        {
            /* Request setting processing to ctrl.setup */
            :
            /* For request that supports control write data stage, set transfer data in g_buf area. */
            :
            ctrl.type = USB_REQUEST;
            R_USB_Write(&ctrl, g_buf, size); /* Send USB request (Setup stage). */
            break;
        case USB_STS_REQUEST_COMPLETE: /* USB request completed. */
            if(USB_ACK == ctrl.status) /* Confirm results of USB request. */
            {
                /* For request that supports control read data stage, store receive data in g_buf area. */
                :
            }
            break;
        }
    }
}

```

## 10.2 USB Peripheral operations

### 10.2.1 USB request (Setup)

#### 1. Non-OS

Confirm receipt of the USB request (Setup) sent by the USB host with the return value (*USB\_STS\_REQUEST*) of the *R\_USB\_GetEvent* function. The contents of the USB request (Setup: 8 bytes) are stored in the *usb\_ctrl\_t* structure member (*setup*) area. Refer to chapter 9.2, **usb\_setup\_t structure** for a description of the settings for member (*setup*).

#### 2. RTOS

It is possible to check for the reception of a USB request (Setup) transmitted from the USB Host using an argument to the callback function registered in the USB driver (*USB\_STS\_REQUEST* in the event member of the *usb\_ctrl\_t* structure). The contents of the USB request (Setup: 8 bytes) are stored in the *usb\_ctrl\_t* structure member (*setup*) area. Refer to chapter 9.2, **usb\_setup\_t structure** for a description of the settings for member (*setup*).

#### Note:

Note that when a request for support of the no data status stage is received, the argument to the callback function registered in the USB driver (the member (*event*) of the *usb\_ctrl\_t* structure) will be set to *USB\_STS\_REQUEST\_COMPLETE*, and not to *USB\_STS\_REQUEST*.

## 10.2.2 USB request data

The *R\_USB\_Read* function is used to receive data in the data stage and the *R\_USB\_Write* function is used to send data to the USB host. The following describes the receive and send procedures.

### 1. Receive procedure

- (1). Set the *USB\_REQUEST* in the *usb\_ctrl\_t* structure member (*type*).
- (2). In the *R\_USB\_Read* function, specify the pointer to area that stores data in the second argument, and the requested data size in the third argument.
- (3). Call the *R\_USB\_Read* function.

Note:

- (1). Confirm receipt of the request data with the return value (*USB\_STS\_REQUEST\_COMPLETE*) of the *R\_USB\_GetEvent* function. (**Non-OS**)
- (2). It is possible to check for the reception completion of a request data based on an argument to the callback function registered in the USB driver (*USB\_STS\_READ\_COMPLETE* in the member (*event*) of the *usb\_ctrl\_t* structure). (**RTOS**)

### 2. Send procedure

- (1). Set *USB\_REQUEST* in the *usb\_ctrl\_t* structure member (*type*).
- (2). Store the data from the data stage in a buffer. In the *R\_USB\_Write* function, specify the top address of the buffer in the second argument, and the transfer data size in the third argument.
- (3). Call the *R\_USB\_Write* function.

Note:

- (1). Confirm receipt of the request data with the return value (*USB\_STS\_REQUEST\_COMPLETE*) of the *R\_USB\_GetEvent* function. (**Non-OS**)
- (2). It is possible to check for the transmission completion of a request data based on an argument to the callback function registered in the USB driver (*USB\_STS\_REQUEST\_COMPLETE* in the member (*event*) of the *usb\_ctrl\_t* structure). (**RTOS**)

## 10.2.3 Status Stage Processing

In the following case, this driver does not process to the status stage. The user need to process the status stage in the application program. The user needs to process the status stage in the application program. For how to process the status stage, see **10.2.4, Example USB request processing description**.

- (1). Case of responding ACK to a class request that supports no-data control status stage
- (2). Case of responding STALL to a class request

Note:

When receiving a class request that support the data stage, this USB driver process the status stage after processing the data stage.

## 10.2.4 Example USB request processing description

### 1. Request that supports control read data stage

#### (1). Non-OS

```
void usr_application (void )
{
    usb_ctrl_t ctrl;
    switch( R_USB_GetEvent( &ctrl ) )
    {
        :
        case USB_REQUEST: /* Receive USB request */
            /* ctrl.setup analysis processing*/
            :
            /* data setup processing */
            :
            ctrl.type = USB_REQUEST;
            R_USB_Write(&ctrl, g_buf, size); /* data (data stage) send request */
            break;
        case USB_STS_REQUEST_COMPLETE:
            :
            break;
        :
    }
}
```

#### (2). RTOS

```
void usr_application_task (void )
{
    usb_ctrl_t ctrl;
    usb_ctrl_t *p_mess;
    :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch (ctrl.event)
        {
            :
            case USB_REQUEST: /* Receive USB request */
                /* ctrl.setup analysis processing*/
                :
                /* data setup processing */
                :
                ctrl.type = USB_REQUEST;
                R_USB_Write(&ctrl, g_buf, size); /* data (data stage) send request */
                break;
            case USB_STS_REQUEST_COMPLETE:
                :
                break;
            :
        }
    }
}
```



## 2. Request that supports control write data stage

### (1). Non-OS

```
void usr_application (void )
{
    usb_ctrl_t ctrl;
    switch( R_USB_GetEvent( &ctrl ) )
    {
        :
        case USB_REQUEST: /* Receive USB request */
            /* ctrl.setup analysis processing */
            :
            ctrl.type = USB_REQUEST;
            R_USB_Read(&ctrl, g_buf, size); /* data (data stage) receive request */
            break;
        case USB_STS_REQUEST_COMPLETE:
            :
            break;
    }
}
```

### (2). RTOS

```
void usr_application_task (void )
{
    usb_ctrl_t ctrl;
    usb_ctrl_t *p_mess;
    :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch (ctrl.event)
        {
            :
            case USB_REQUEST: /* Receive USB request */
                /* ctrl.setup analysis processing */
                :
                ctrl.type = USB_REQUEST;
                R_USB_Read(&ctrl, g_buf, size); /* data (data stage) receive request */
                break;
            case USB_STS_REQUEST_COMPLETE:
                :
                break;
        }
    }
}
```

## 3. Request that supports no-data control status stage

### (1). ACK response

#### a. Non-OS

```
void usr_application (void )
{
    usb_ctrl_t ctrl;
    switch( R_USB_GetEvent( &ctrl ) )
    {
        :
        case USB_STS_REQUEST:
            /* ctrl.setup analysis processing */
            :
    }
```

```

        :
        ctrl.type = USB_REQUEST:
        ctrl.status = USB_ACK;
        R_USB_Write(&ctrl, (uint8_t *)USB_NULL, (uint32_t)USB_NULL);
    break;
    case USB_STS_REQUEST_COMPLETE:
        :
    break;
        :
    }
}

```

#### b. RTOS

```

void usr_application_task (void )
{
    usb_ctrl_t *p_mess;
    :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch (ctrl.event)
        {
            :
            case USB_STS_REQUEST:
                /* ctrl.setup analysis processing */
                :
                ctrl.type = USB_REQUEST:
                ctrl.status = USB_ACK;
                R_USB_Write(&ctrl, (uint8_t *)USB_NULL, (uint32_t)USB_NULL);
            break;
            case USB_STS_REQUEST_COMPLETE:
                :
            break;
                :
        }
    }
}

```

### (2). STALL response

#### a. Non-OS

```

void usr_application (void )
{
    usb_ctrl_t ctrl;
    switch( R_USB_GetEvent( &ctrl ) )
    {
        :
        case USB_STS_REQUEST:
            /* ctrl.setup analysis processing */
            :
            ctrl.type = USB_REQUEST:
            ctrl.status = USB_STALL;
            R_USB_Write(&ctrl, (uint8_t *)USB_NULL, (uint32_t)USB_NULL);
        break;
        case USB_STS_REQUEST_COMPLETE:
            :
        break;
            :
    }
}

```

## b. RTOS

```
void usr_application_task (void )
{
    usb_ctrl_t *p_mess;
    :
    while(1)
    {
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t **)&p_mess);
        ctrl = *p_mess;
        switch (ctrl.event)
        {
            :
            case USB_STS_REQUEST:
                /* ctrl.setup analysis processing */
                :
                ctrl.type = USB_REQUEST;
                ctrl.status = USB_STALL;
                R_USB_Write(&ctrl, (uint8_t *)USB_NULL, (uint32_t)USB_NULL);
                break;
            case USB_STS_REQUEST_COMPLETE:
                :
                break;
            :
        }
    }
}
```

## 11. DTC/DMA Transfer

### 11.1 Basic Specification

The specifications of the DTC/DMA transfer sample program code included in USB-BASIC-FW are listed below. USB Pipe 1 and Pipe2 can use DTC/DMA access.

**Table11-1** shows DTC/DMA Setting Specifications.

**Table11-1 DTC/DMA Setting Specifications**

Setting	Description
FIFO port used	D0FIFO and D1FIFO port
Transfer mode	Block transfer mode
Chain transfer	Disabled
Address mode	Full address mode
Read skip	Disabled
Access bit width (MBW)	4-byte transfer: 32-bit width (when using USBa/USBAa module only) 2-byte transfer: 16-bit width (when using USBb module only)
USB transfer type	BULK transfer
Transfer end	Receive direction: BRDY interrupt Transmit direction: D0FIFO/D1FIFO interrupt, BEMP interrupt

Note:

This driver does not support to use DMA transfer and DTC transfer at the same time.

### 11.2 Notes

#### 11.2.1 DTC transfer

1. Refer to "Special Note" described in the chapter "R\_DTC\_Open" in the application note "RX Family DTC module" (Document No. R01AN1819).
2. Please add the following 3 lines immediately before including the *r\_dtc\_rx\_if.h* file in *r\_usb\_basic\_config.h* file when using DTC transfer of RX66T.

```
#if defined(BSP_MCU_RX66T)           // Addition
#define BSP_MCU_RX72T                // Addition
#endif                               // Addition
#include "r_dtc_rx_if.h"
```

#### 11.2.2 Data Reception Buffer Size

The user needs to allocate the buffer area for the following size to store the receiving data.

- (1). When *USB\_CFG\_CNTMDON* is specified for *USB\_CFG\_CNTMD* definition in *r\_usb\_basic\_config.h* (When using USBa/USBAa module.)

Allocate the area more than n times FIFO buffer size. For FIFO buffer size, refer to the chapter **12.4, Reference or Change of PIPEBUF Register**

- (2). When *USB\_CFG\_CNTMDOFF* is specified for *USB\_CFG\_CNTMD* definition in *r\_usb\_basic\_config.h*.

Allocate the area n times the max packet size.

#### 11.2.3 USB Pipe

USB pipe which is used by DMA/DTC transfer is only PIPE1 and PIPE2. This driver does not work properly when USB pipe except PIPE1 and PIPE2 is used for DMA/DTC transfer. When data transfer is performed by combining DMA/DTC transfer and CPU transfer, use PIPE1 or PIPE2 for DTM/DTC transfer and use PIPE3, PIPE4 or PIPE5 for CPU transfer.

### 11.2.4 Initialization Function for DMA/DTC transfer

Call the following DMA/DTC transfer initialization function in the user application program.

Transfer Type	Initialization Function
DTC	R_DTC_Open
DMA	R_DMACA_Init R_DMACA_Open

Note:

Specify the following definition to the argument in R\_DMACA\_Open function. For the detail of the following definition, refer to chapter 8, **Configuration (r\_usb\_basic\_config.h)**.

```
USB_CFG_USB0_DMA_TX,  USB_CFG_USB0_DMA_RX  
USB_CFG_USB1_DMA_TX,  USB_CFG_USB1_DMA_RX
```

Example)

```
R_DMACA_Init();  
R_DMACA_Open(USB_CFG_USB1_DMA_TX);  
R_DMACA_Open(USB_CFG_USB1_DMA_RX);
```

## 12. Additional Notes

### 12.1 Vendor ID

Be sure to use the user's own Vendor ID for the one to be provided in the Device Descriptor.

### 12.2 Compliance Test

In order to run the USB Compliance Test it is necessary to display USB device-related information on a display device such as an LCD. When the `USB_CFG_COMPLIANCE` definition in the configuration file (`r_usb_basic_config.h`) is set to `USB_CFG_ENABLE`, the USB driver calls the function (`usb_compliance_disp`) indicated below. This function should be defined within the application program, and the function should contain processing for displaying USB device-related information, etc.

Function name : `void usb_compliance_disp( usb_compliance_t *);`  
 Argument : `usb_compliance_t *` Pointer to structure for storing USB information

Note:

1. The USB driver sets the USB device-related information in an area indicated by an argument, and the `usb_compliance_disp` function is called.
2. For information on the `usb_compliance_t` structure, refer to **9.7, `usb_compliance_t` structure**.
3. When the `USB_CFG_COMPLIANCE` definition in `r_usb_basic_config.h` is set to `USB_CFG_ENABLE`, it is necessary to register the vendor ID and product ID in the TPL definitions for USB devices and USB hubs. For information on TPL definitions, refer to 10, Target Peripheral List (TPL) Settings.
4. For a program sample of the `usb_compliance_disp` function, see **14.1, `usb_compliance_disp` function**.

### 12.3 Hi-speed Embedded Host Electrical Test

The USB Protocol and Electrical Test Tool is required in order to run the Hi-speed embedded host electrical test. To run the test, define `USB_CFG_ELECTRICAL` in the `r_usb_basic_config.h` file as `USB_CFG_ENABLE`. For information on this definition, refer to chapter 8, **Configuration (`r_usb_basic_config.h`)**.

### 12.4 Reference or Change of PIPEBUF Register

Recommended values are set to the `BUFSIZE` and `BUFNMB` bits of the PIPEBUF register that are supported by the USB and USBAA modules. When referring or changing to these bits, refer or change the following variables in the USB driver.

Device Class	File Name	Variable Name
Host Communication Device Class	<code>r_usb_hcdc_driver.c</code>	<code>g_usb_hcdc_eptbl</code>
Host Human I/F Device Class	<code>r_usb_hhid_driver.c</code>	<code>g_usb_hhid_eptbl</code>
Host Mass Storage Class	<code>r_usb_hmsc_driver.c</code>	<code>g_usb_hmsc_eptbl</code>
Peripheral Communication Device Class	<code>r_usb_peptable.c</code>	<code>g_usb_eptbl</code>
Peripheral Human I/F Device Class		
Peripheral Mass Storage Class		

### 12.5 RTOS

#### 12.5.1 Task Priority

The value from 8 to 11 is specified to the priority for USB driver task. Please specify the value from 0 to 7 to the priority for the application task.

#### 12.5.2 `configMAX_PRIORITIES` definition

Specify a value of 12 or more to `configMAX_PRIORITIES` definition defined in `FreeRTOSConfig.h` file when using FreeRTOS.

## 13. Creating an Application Program

This chapter explains how to create an application program using the API functions described throughout this document. Please make sure you use the API functions described here when developing your application program.

### 13.1 Configuration

Set each configuration file (header file) in the `r_config` folder to meet the specifications and requirements of your system. Please refer to chapter 8, **Configuration** about setting of the configuration file.

### 13.2 Descriptor Creation

For USB peripheral operations, you will need to create descriptors to meet your system specifications. Register the created descriptors in the `usb_descriptor_t` function members. USB host operations do not require creation of special descriptors.

### 13.3 Application Program Creation

#### 13.3.1 Include

Make sure you include the following files in your application program.

1. `r_usb_basic_if.h` (Inclusion is obligatory.)
2. `r_usb_xxxx_if.h` (I/F file provided for the USB device class to be used )
3. Include a header file for FAT when creating the application program for Host Mass Storage Class.
4. Include any other driver-related header files that are used within the application program.

Note:

Please describe `"#undef BSP_MCU_RX72T"` immediately before including the `r_dtc_rx_if.h` file when using DTC transfer of RX66T.

```
#undef BSP_MCU_RX72T
#include "r_dtc_rx_if.h"
```

#### 13.3.2 Initialization

1. MCU pin settings

USB input/output pin settings are necessary to use the USB controller. The following is a list of USB pins that need to be set. Set the following pins as necessary.

Table13-1 USB I/O Pin Settings for USB Peripheral Operation

Pin Name	I/O	Function
USB_VBUS	input	VBUS pin for USB communication

Table13-2 USB I/O Pin Settings for USB Host Operation

Pin Name	I/O	Function
USB_VBUSEN	output	VBUS output enabled pin for USB communication
USB_OVRCURA	input	Overcurrent detection pin for USB communication

Note:

Please refer to the corresponding MCU user's manual for the pin settings in ports used for your application program.

2. DTC/DMA-related initialization

Call the DTC/DMA initialization function when using the DTC/DMA transfer.

Transfer	Function
DTC	R_DTC_Open
DMA	R_DMACA_Init R_DMACA_Open

Note:

- (1). The setting for DTC/DMA transfer is needed when using DTC/DMA transfer. Refer to chapter 8, **Configuration (r\_usb\_basic\_config.h)**.
- (2). You need to specify the using DMA channel number to the argument for *R\_DMACA\_Open* function when using DMA transfer. Be sure to specify one of the following definitions for the argument.

DMA Channel Number	Description
USB_CFG_USB0_DMA_TX	Transmission setting for USB0 module
USB_CFG_USB0_DMA_RX	Reception setting for USB0 module
USB_CFG_USB1_DMA_TX	Transmission setting for USB1 module
USB_CFG_USB1_DMA_RX	Reception setting for USB1 module

Example 1) DMA transmission setting of USB0 module.

```
R_DMACA_Open(USB_CFG_USB0_DMA_TX);
```

(Specify one of USB PIPE3 to USB PIPE5 for the reception USB pipe.)

Example 2) DMA reception setting of USB1 module.

```
R_DMACA_Open(USB_CFG_USB1_DMA_RX);
```

(Specify one of USB PIPE3 to USB PIPE5 for the reception USB pipe.)

Example 3) DMA transmission/reception setting of USB1 module.

```
R_DMACA_Open(USB_CFG_USB1_DMA_TX);
```

```
R_DMACA_Open(USB_CFG_USB1_DMA_RX);
```

(Don't specify USB pipe other than USB PIPE1 and USB PIPE2.)

- (3). You can use USB PIPE1 and PIPE2 when using DMA/DTC transfer. This driver does not support DMA/DTC transfer when using USB PIPE3 to PIPE5.
- (4). Specify the using USB pipe number in each USB class configuration.

### 3. USB-related initialization

Call the *R\_USB\_Open* function to initialize the USB module (hardware) and USB driver software used for your application program.

### 4. Creation and Registration of Callback Functions (RTOS only)

Use the *R\_USB\_Callback* function to create callback functions to register. After creation, register the callback function in question in the USB driver using the *R\_USB\_Callback* function.

In addition to the USB completion event, a variety of information about the event is also set by the USB driver. Be sure to notify the application task of the relevant argument information using, for example, the FreeRTOS API.

Example)

```
void usb_apl_callback (usb_ctrl_t *p_ctrl)
{
    /* Notify application task of USB event information using FreeRTOS API */
    USB_APL_SND_MSG(USB_APL_MBX, (usb_msg_t *)p_ctrl);
}
```

### 13.3.3 Descriptor Creation

For USB peripheral operations please create descriptors to meet your system specifications. Refer to chapter 2.5, **Descriptor** for more details about descriptors. USB host operations do not require creation of special descriptors.



### 13.3.4 Creation of Main Routine and Application Program Tasks

#### (1). Non-OS

Please describe the main routine in the main loop format. Make sure you call the `R_USB_GetEvent` function in the main loop. The USB-related completed events are obtained from the return value of the `R_USB_GetEvent` function. Also make sure your application program has a routine for each return value. The routine is triggered by the corresponding return value

Note:

- a. Carry out USB data communication using the `R_USB_Read`, `R_USB_Write`, `R_USB_PipeRead`, and `R_USB_PipeWrite` functions after checking the return value `USB_STS_CONFIGURED` of `R_USB_GetEvent` function.
- b. Use API supported by FAT when accessing to MSC device in the host mass storage class.

#### (2). RTOS

Write application program tasks in loop format. In the main loop, be sure to call the FreeRTOS API to retrieve the information (USB completion events and the like) that is received as notifications from the callback function. Write programs that correspond to the respective USB completion events, with the USB completion events retrieved by the application task as a trigger.

Note:

- a. When the USB device is in the Configured state, carry out USB data communication using the `R_USB_Read`, `R_USB_Write`, `R_USB_PipeRead`, and `R_USB_PipeWrite` functions. It is possible to check whether or not the USB device is in the Configured state using an argument to the callback function registered in the USB driver (`USB_STS_REQUEST_CONFIGURED` in the event member of the `usb_ctrl_t` structure).
- b. Use API supported by FAT when accessing to MSC device in Host mass storage class.

### 13.3.5 Registration to the real time OS (RTOS only)

Register the following in FreeRTOS.

1. Application Program Tasks
2. FreeRTOS features used by application tasks and callback functions

Note:

Set the priority of application program tasks to a priority value of 7 or lower.

### 13.3.6 Application program description example

#### (1). Non-OS

##### a. CPU transfer

```
#include "r_usb_basic_if.h"
#include "r_usb_pcdc_if.h"

void      usb_peri_application( void )
{
    usb_ctrl_t  ctrl;
    usb_cfg_t   cfg;

    /* MCU pin setting */
    usb_pin_setting();

    /* Initialization processing */
    ctrl.module = USB_IP1; /* Specify the selected USB module */
    cfg.usb_mode = USB_PERI; /* Specify either USB host or USB peri */
    cfg.usb_speed = USB_HS; /* Specify the USB speed */
```

```

cfg.p_usb_reg = &smp_descriptor; /* Specify the top address of the descriptor table */
R_USB_Open( &ctrl, &cfg );

/* main routine */
while(1)
{
    switch( R_USB_GetEvent( &ctrl ) )
    {
        case USB_STS_CONFIGURED:
        case USB_STS_WRITE_COMPLETE:
            ctrl.type = USB_PCDC;
            R_USB_Read( &ctrl, g_buf, 64 );
            break;
        case USB_STS_READ_COMPLETE:
            ctrl.type = USB_PCDC;
            R_USB_Write( &ctrl, g_buf, ctrl.size );
            break;
        default:
            break;
    }
}
}

```

#### b. DMA transfer

```

#include "r_usb_basic_if.h"
#include "r_usb_pcdc_if.h"
#include "r_dmaca_rx_if.h"

void      usb_peri_application( void )
{
    usb_ctrl_t  ctrl;
    usb_cfg_t   cfg;

/* MCU pin setting */
usb_pin_setting();

/* DMA initialization processing */
R_DMACA_Init();
R_DMACA_Open(USB_CFG_USB0_DMA_TX);
R_DMACA_Open(USB_CFG_USB0_DMA_RX);

/* Initialization processing */
ctrl.module = USB_IP0; /* Specify the selected USB module */
cfg.usb_mode = USB_PERI; /* Specify either USB host or USB peri */
cfg.usb_speed = USB_HS; /* Specify the USB speed */
cfg.p_usb_reg = &smp_descriptor; /* Specify the top address of the descriptor table */
R_USB_Open( &ctrl, &cfg );

/* main routine */
while(1)
{
    switch( R_USB_GetEvent( &ctrl ) )
    {
        case USB_STS_CONFIGURED:
        case USB_STS_WRITE_COMPLETE:
            ctrl.type = USB_PCDC;
            R_USB_Read( &ctrl, g_buf, 64 );
            break;
        case USB_STS_READ_COMPLETE:
            ctrl.type = USB_PCDC;

```

```

        R_USB_Write( &ctrl, g_buf, ctrl.size );
        break;
    default:
        break;
    }
}
}

```

### c. DTC transfer

```

#include "r_usb_basic_if.h"
#include "r_usb_pcdc_if.h"
#include "r_usb_dtc_rx_if.h"

void usb_peri_application( void )
{
    usb_ctrl_t ctrl;
    usb_cfg_t cfg;

    /* MCU pin setting */
    usb_pin_setting();

    /* DTC initialization processing */
    R_DTC_Open();

    /* Initialization processing */
    ctrl.module = USB_IP0; /* Specify the selected USB module */
    cfg.usb_mode = USB_PERI; /* Specify either USB host or USB peri */
    cfg.usb_speed = USB_HS; /* Specify the USB speed */
    cfg.p_usb_reg = &smp_descriptor; /* Specify the top address of the descriptor table */
    R_USB_Open( &ctrl, &cfg );

    /* main routine */
    while(1)
    {
        switch( R_USB_GetEvent( &ctrl ) )
        {
            case USB_STS_CONFIGURED:
            case USB_STS_WRITE_COMPLETE:
                ctrl.type = USB_PCDC;
                R_USB_Read( &ctrl, g_buf, 64 );
                break;
            case USB_STS_READ_COMPLETE:
                ctrl.type = USB_PCDC;
                R_USB_Write( &ctrl, g_buf, ctrl.size );
                break;
            default:
                break;
        }
    }
}

```

## (2). RTOS

### a. CPU transfer

```

#include "r_usb_basic_if.h"
#include "r_usb_pcdc_if.h"

/* Callback Function */
void usb_apl_callback(usb_ctrl_t *p_ctrl, usb_hdl_t hdl, uint8_t is_request)
{

```

```

/* Notify application program task of USB completion event */
USB_APL_SND_MSG(hdl, (usb_msg_t *)p_ctrl);
}

/* Application Task */
void usb_application_task(void)
{
    usb_ctrl_t ctrl;
    usb_ctrl_t *p_mess;
    usb_cfg_t cfg;

    /* MCU pin setting */
    usb_pin_setting();

    /* Initialization processing */
    ctrl.module = USB_IP1; /* Specify the selected USB module */
    cfg.usb_mode = USB_PERI; /* Specify either USB host or USB peri */
    cfg.usb_speed = USB_HS; /* Specify the USB speed */
    cfg.p_usb_reg = &smp_descriptor; /* Specify the top address of the descriptor table */
    R_USB_Open( &ctrl, &cfg );

    /* Register callback function */
    R_USB_Callback(usb_apl_callback);

    /* main routine */
    while(1)
    {
        /* Retrieve USB completion event about which notification was received from callback
        function */
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t *)&p_mess);

        ctrl = *p_mess;

        switch(ctrl.event)
        {
            case USB_STS_CONFIGURED:
            case USB_STS_WRITE_COMPLETE:
                ctrl.type = USB_PCDC;
                R_USB_Read( &ctrl, g_buf, 64 );
                break;
            case USB_STS_READ_COMPLETE:
                ctrl.type = USB_PCDC;
                R_USB_Write( &ctrl, g_buf, ctrl.size );
                break;
            default:
                break;
        }
    }
}

```

#### b. DMA transfer

```

#include "r_usb_basic_if.h"
#include "r_usb_pcdc_if.h"
#include "r_dmaca_rx_if.h"

/* Callback Function */
void usb_apl_callback(usb_ctrl_t *p_ctrl, usb_hdl_t hdl, uint8_t is_request)
{
    /* Notify application program task of USB completion event */
    USB_APL_SND_MSG(id, (usb_msg_t *)p_ctrl);
}

```

```

}

/* Application Task */
void usb_peri_application( void )
{
    usb_ctrl_t  ctrl;
    usb_ctrl_t  *p_mess;
    usb_cfg_t   cfg;

    /* MCU pin setting */
    usb_pin_setting();

    /* DMA initialization processing */
    R_DMACA_Init();
    R_DMACA_Open(USB_CFG_USB0_DMA_TX);
    R_DMACA_Open(USB_CFG_USB0_DMA_RX);

    /* Initialization processing */
    ctrl.module = USB_IP0; /* Specify the selected USB module */
    cfg.usb_mode = USB_PERI; /* Specify either USB host or USB peri */
    cfg.usb_speed = USB_HS; /* Specify the USB speed */
    cfg.p_usb_reg = &smp_descriptor; /* Specify the top address of the descriptor table */
    R_USB_Open( &ctrl, &cfg );

    /* Register callback function */
    R_USB_Callback(usb_apl_callback);

    /* main routine */
    while(1)
    {
        /* Retrieve USB completion event about which notification was received from callback function */
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t *)&p_mess);

        ctrl = *p_mess;

        switch(ctrl.event)
        {
            case USB_STS_CONFIGURED:
            case USB_STS_WRITE_COMPLETE:
                ctrl.type = USB_PCDC;
                R_USB_Read( &ctrl, g_buf, 64 );
                break;
            case USB_STS_READ_COMPLETE:
                ctrl.type = USB_PCDC;
                R_USB_Write( &ctrl, g_buf, ctrl.size );
                break;
            default:
                break;
        }
    }
}

```

### c. DTC transfer

```

#include "r_usb_basic_if.h"
#include "r_usb_pcdc_if.h"
#include "r_usb_dtc_rx_if.h"

/* Callback Function */
void usb_apl_callback(usb_ctrl_t *p_ctrl, usb_hdl_t hdl, uint8_t is_request)

```

```

{
    /* Notify application program task of USB completion event */
    USB_APL_SND_MSG(id, (usb_msg_t *)p_ctrl);
}

/* Application Task */
void usb_peri_application( void )
{
    usb_ctrl_t  ctrl;
    usb_ctrl_t  *p_mess;
    usb_cfg_t   cfg;

    /* MCU pin setting */
    usb_pin_setting();

    /* DTC initialization processing */
    R_DTC_Open();

    /* Initialization processing */
    ctrl.module = USB_IP0; /* Specify the selected USB module */
    cfg.usb_mode = USB_PERI; /* Specify either USB host or USB peri */
    cfg.usb_speed = USB_HS; /* Specify the USB speed */
    cfg.p_usb_reg = &smp_descriptor; /* Specify the top address of the descriptor table */
    R_USB_Open( &ctrl, &cfg );

    /* Register callback function */
    R_USB_Callback(usb_apl_callback);

    /* main routine */
    while(1)
    {
        /* Retrieve USB completion event about which notification was received from callback function */
        USB_APL_RCV_MSG(USB_APL_MBX, (usb_msg_t *)&p_mess);

        ctrl = *p_mess;

        switch(ctrl.event)
        {
            case USB_STS_CONFIGURED:
            case USB_STS_WRITE_COMPLETE:
                ctrl.type = USB_PCDC;
                R_USB_Read( &ctrl, g_buf, 64 );
                break;
            case USB_STS_READ_COMPLETE:
                ctrl.type = USB_PCDC;
                R_USB_Write( &ctrl, g_buf, ctrl.size );
                break;
            default:
                break;
        }
    }
}

```

## 14. Program Sample

### 14.1 usb\_compliance\_disp function

```
void usb_compliance_disp (usb_compliance_t *p_info)
{
    uint8_t          disp_data[32];

    disp_data = (usb_comp_disp_t*)param;

    switch(p_info->status)
    {
        case USB_CT_ATTACH:                /* Device Attach Detection */
            display("ATTACH ");
            break;

        case USB_CT_DETACH:                /* Device Detach Detection */
            display("DETTACH");
            break;

        case USB_CT_TPL:                   /* TPL device connect */
            sprintf(disp_data,"TPL PID:%04x VID:%04x",p_info->pid, p_info->vid);
            display(disp_data);
            break;

        case USB_CT_NOTTPL:                /* Not TPL device connect */
            sprintf(disp_data,"NOTPL PID:%04x VID:%04x",p_info->pid, p_info->vid);
            display(disp_data);
            break;

        case USB_CT_HUB:                   /* USB Hub connect */
            display("Hub");
            break;

        case USB_CT_NOTRESP:               /* Response Time out for Control Read Transfer */
            display("Not response");
            break;

        default:
            break;
    }
}
```

**Note:**

The display function in the above function displays character strings on a display device. It must be provided by the customer.

**Website and Support**

Renesas Electronics Website

<http://www.renesas.com/>

Inquiries

<http://www.renesas.com/inquiry>

All trademarks and registered trademarks are the property of their respective owners.



## Revision Record

Rev.	Date	Page	Description
			Summary
1.00	Aug 1, 2014	—	First edition issued
1.10	Dec 26, 2014	—	RX71M is added in Target Device. The multiple connecting of USB deive is supported in Host mode.
1.11	Sep 30, 2015	—	RX63N and RX631 are added in Target Device.
1.20	Sep 30, 2016	—	1. RX65N and RX651 are added in Target Device. 2. Supporting DMA transfer. 3. Supporting USB Host and Peripheral Interface Driver application note (Document No.R01AN3293EJ)
1.21	Mar 31, 2017	—	1. Supported Technical Update (Document number. TN-RX*-A172A/E) 2. The following chapters are added in this document. (1). 2.5 Descriptor (2). 3.6 How to Set the Target Peripheral List (TPL) (3). 3.7 Allocation of Device Addresses (4). 6. Return Value of R_USB_GetEvent Function / Retrieval of USB Completion Events (5). 7. Device Class Types (6). 8. Configuration (7). 9. Structures (8). 10. USB Class Requests (9). 11. Additional Notes (10). 14. Program Sample 3. The following chapters are deleted. "Hub Class", "non-OS Scheduler"
1.22	Sep 30, 2017	—	Supporting RX65N/RX651-2M
1.23	Mar 31, 2018	—	1. Supporting Smart Configurator. 2. Adding the member (num_string) in usb_descriptor_t structure.
1.24	Dec 28, 2018	—	Supported RTOS.
1.25	Apr 16, 2019	—	Added RX66T/RX72T in Target Device.
1.26	May 31, 2019	—	1. Support GCC compiler and IAR compiler. 2. Remove RX63N from Target Device.

## General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

### 1. Handling of Unused Pins

Handle unused pins in accordance with the directions given under Handling of Unused Pins in the manual.

- The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible. Unused pins should be handled as described under Handling of Unused Pins in the manual.

### 2. Processing at Power-on

The state of the product is undefined at the moment when power is supplied.

- The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the moment when power is supplied.  
In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the moment when power is supplied until the reset process is completed.  
In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the moment when power is supplied until the power reaches the level at which resetting has been specified.

### 3. Prohibition of Access to Reserved Addresses

Access to reserved addresses is prohibited.

- The reserved addresses are provided for the possible future expansion of functions. Do not access these addresses; the correct operation of LSI is not guaranteed if they are accessed.

### 4. Clock Signals

After applying a reset, only release the reset line after the operating clock signal has become stable. When switching the clock signal during program execution, wait until the target clock signal has stabilized.

- When the clock signal is generated with an external resonator (or from an external oscillator) during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Moreover, when switching to a clock signal produced with an external resonator (or by an external oscillator) while program execution is in progress, wait until the target clock signal is stable.

### 5. Differences between Products

Before changing from one product to another, i.e. to a product with a different part number, confirm that the change will not lead to problems.

- The characteristics of Microprocessing unit or Microcontroller unit products in the same group but having a different part number may differ in terms of the internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
  2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
  3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
  4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
  5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
  6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
  7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
  8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
  9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
  10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
  11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
  12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)



### SALES OFFICES

### Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

**Renesas Electronics Corporation**  
TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan

**Renesas Electronics America Inc.**  
1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.  
Tel: +1-408-432-8888, Fax: +1-408-434-5351

**Renesas Electronics Canada Limited**  
9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3  
Tel: +1-905-237-2004

**Renesas Electronics Europe GmbH**  
Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

**Renesas Electronics (China) Co., Ltd.**  
Room 101-T01, Floor 1, Building 7, Yard No. 7, 8th Street, Shangdi, Haidian District, Beijing 100085, China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

**Renesas Electronics (Shanghai) Co., Ltd.**  
Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai 200333, China  
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

**Renesas Electronics Hong Kong Limited**  
Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2265-6688, Fax: +852 2886-9022

**Renesas Electronics Taiwan Co., Ltd.**  
13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan  
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

**Renesas Electronics Singapore Pte. Ltd.**  
80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

**Renesas Electronics Malaysia Sdn.Bhd.**  
Unit No 3A-1 Level 3A Tower 8 UOA Business Park, No 1 Jalan Pengaturcara U1/51A, Seksyen U1, 40150 Shah Alam, Selangor, Malaysia  
Tel: +60-3-5022-1288, Fax: +60-3-5022-1290

**Renesas Electronics India Pvt. Ltd.**  
No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India  
Tel: +91-80-67208700

**Renesas Electronics Korea Co., Ltd.**  
17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5338