


RS485 Small Weather Station Config tool instruction


1 Connect sensor

Connect sensor to PC by a RS485 to USB converter

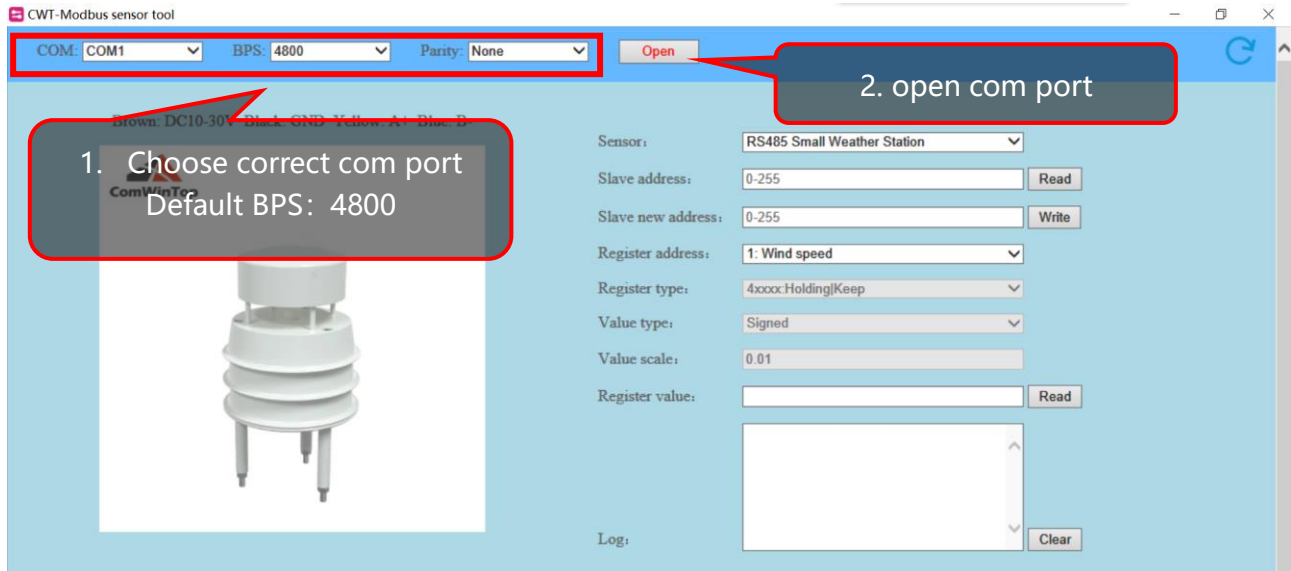


2 Read value

2.1 read ID

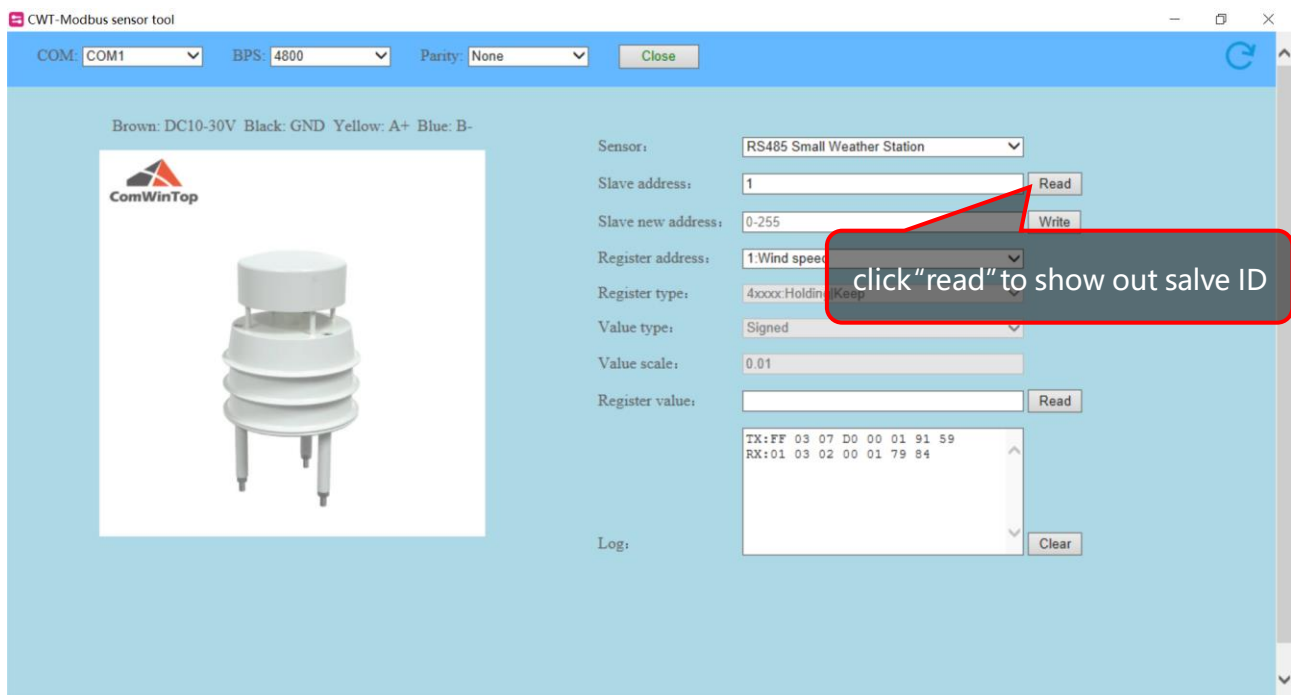


2.2 read wind speed

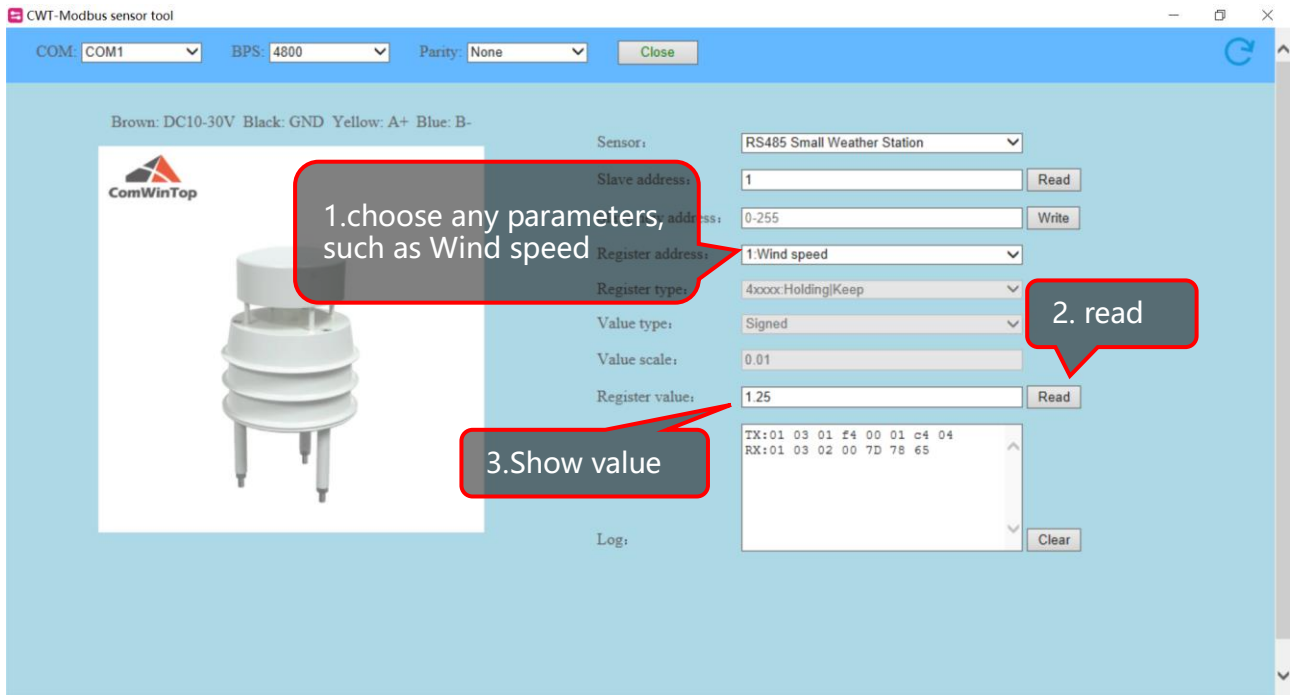


3 Set parameters

3.1 Set ID

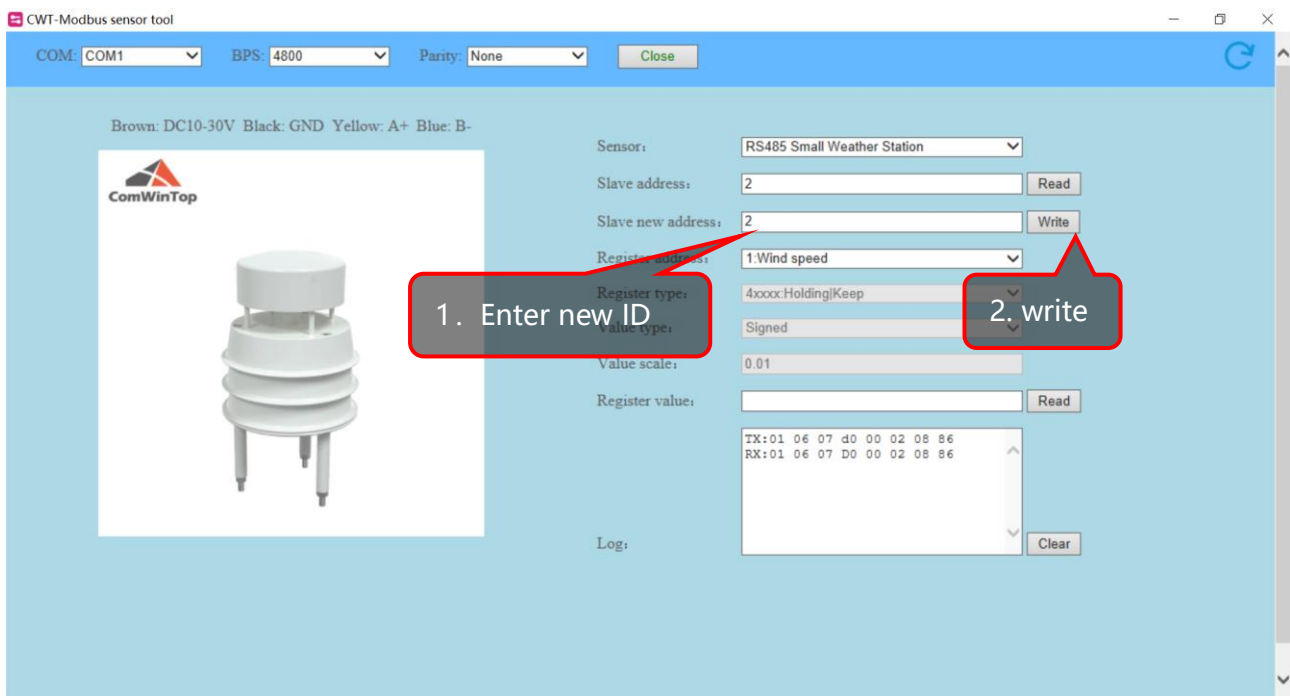

3.2 Set BPS

0=2400, 1=4800, 2=9600

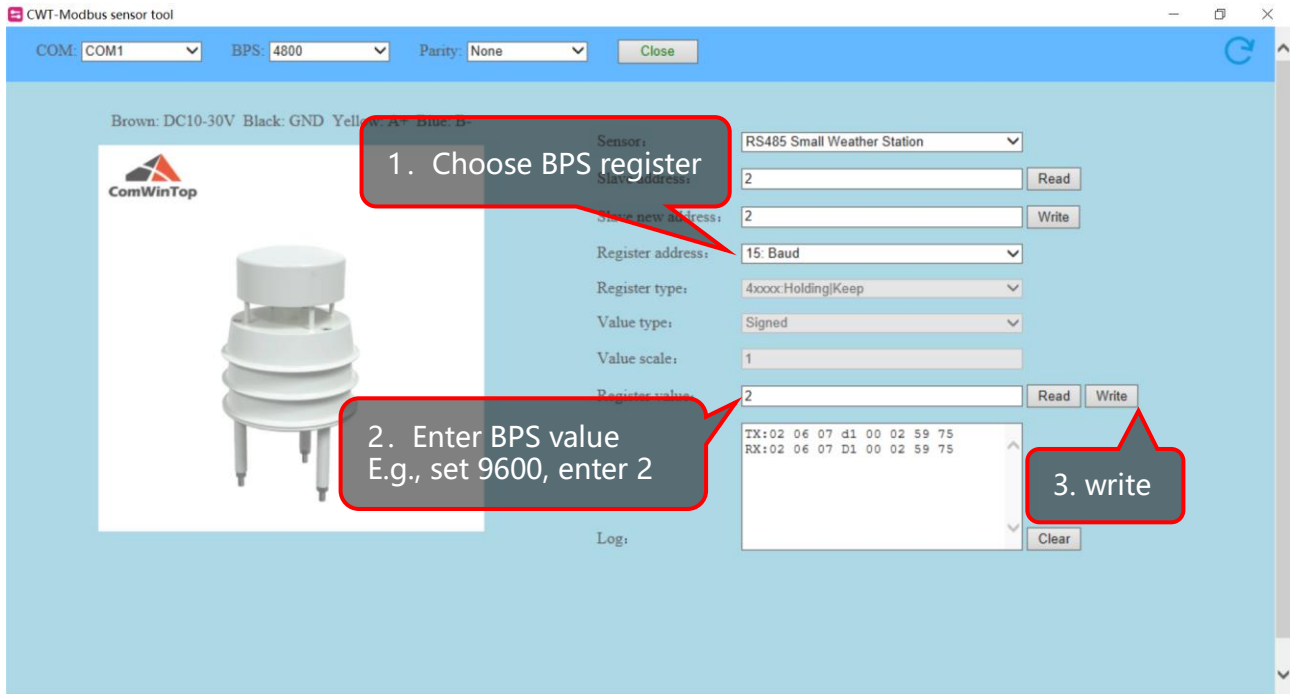

3.3 Reset Rainfall

