


Config tool instruction


1 Connect sensor

Connect sensor to PC by a RS485 to USB converter

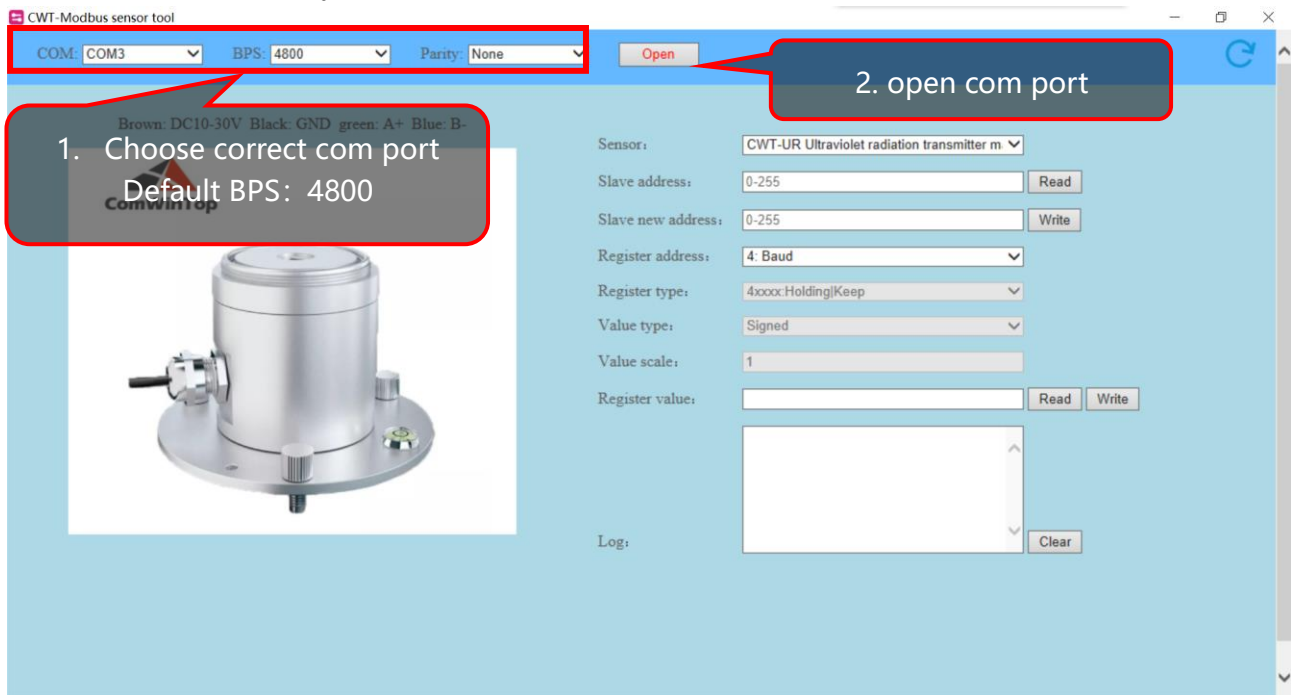


2 Read value

2.1 read ID

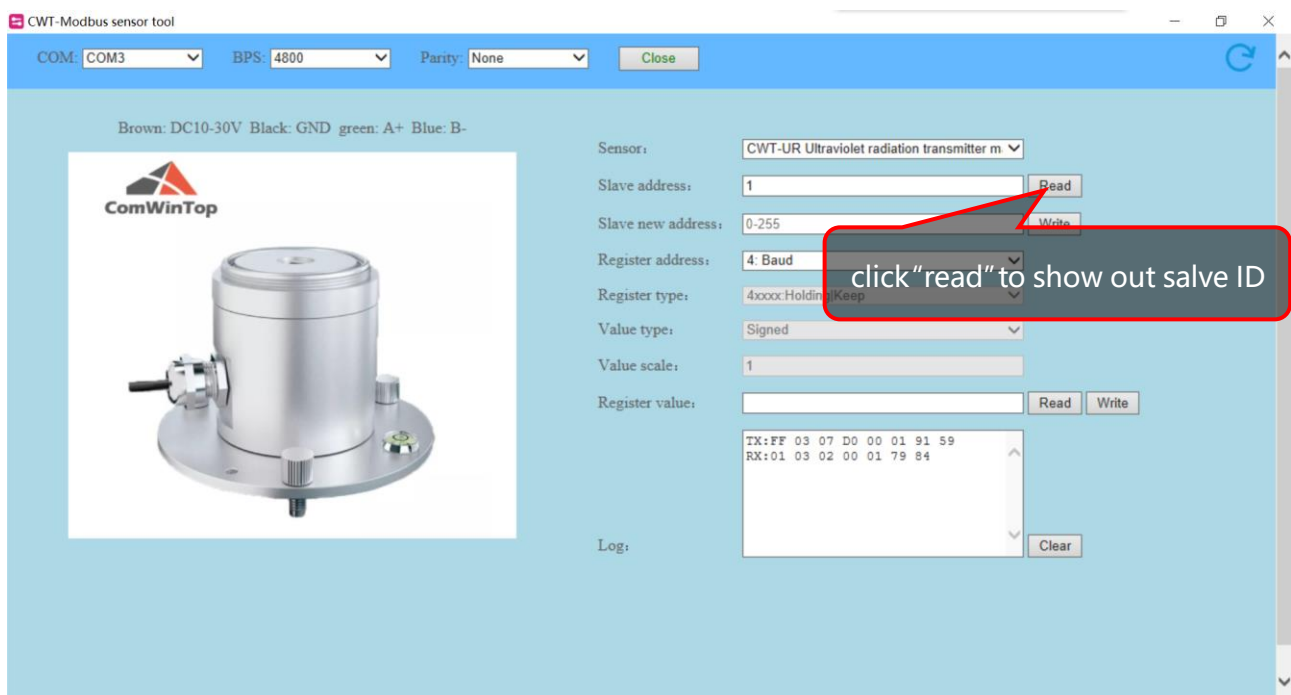


2.2 read UV intensity

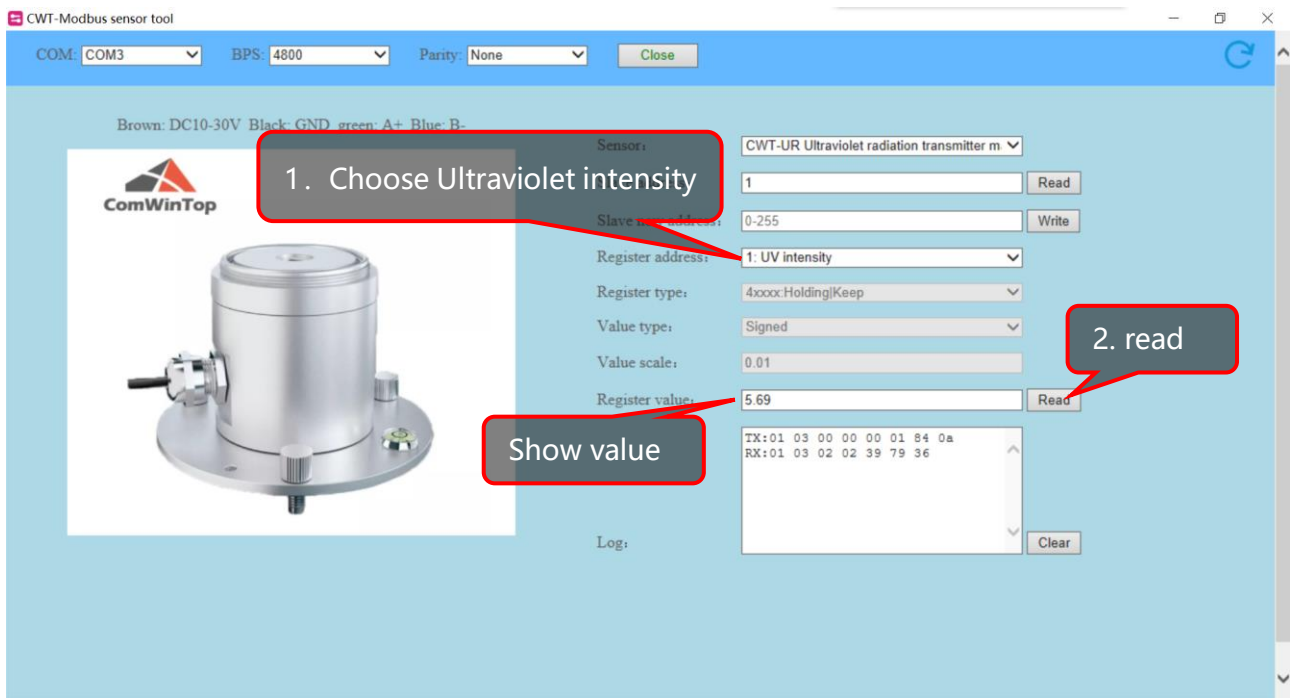

3 Set parameters

3.1 Set ID

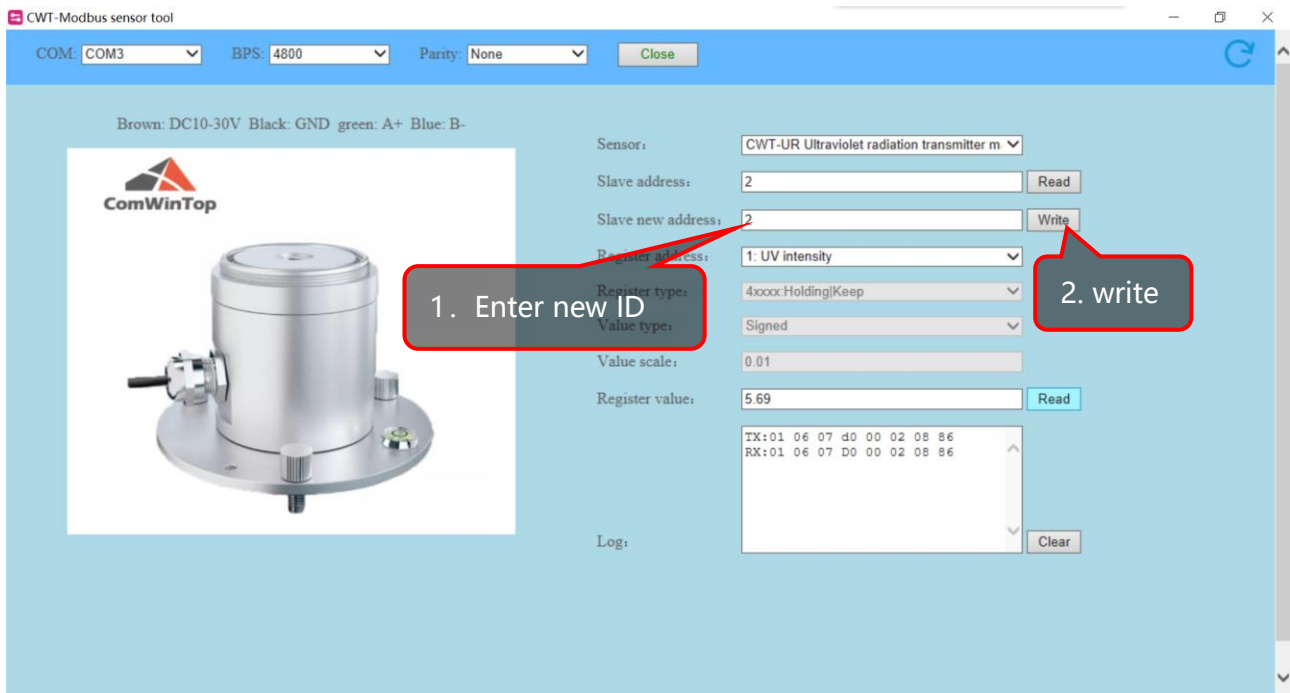

3.2 Set baud (00=2400,01=4800,02=9600)

