





SW24
SW_Push




```
graph LR; RST --- SW24; SW24 --- GND;
```


Left Encoder



Right Encoder

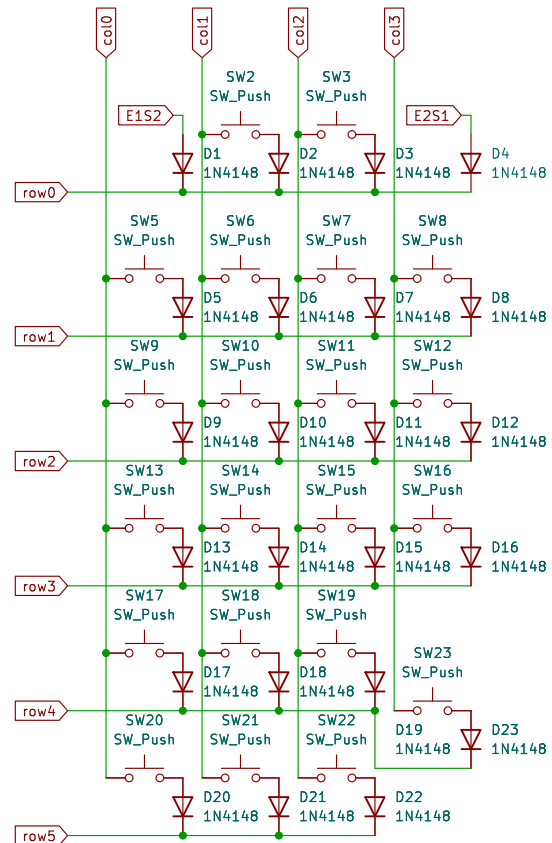

ONLY USE THE BATTERY CONNECTOR FOR CONTROLLER
ALLOWING POWER INPUT VIA THE RAW PIN AND
THAT PROVIDES A ONBOARD CHARGING CIRCUIT
SUCH AS THE nice!nano.

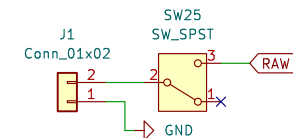

Battery Connector

Id: 1/1