




H1 MountingHole_Pad H2 MountingHole_Pad H3 MountingHole_Pad H4 MountingHole_Pad


SW24
SW_Push

The diagram shows a push-button switch labeled SW24 and SW_Push. One terminal of the switch is connected to the RST pin of the microcontroller, and the other terminal is connected to GND.


Left Encoder



Right Encoder

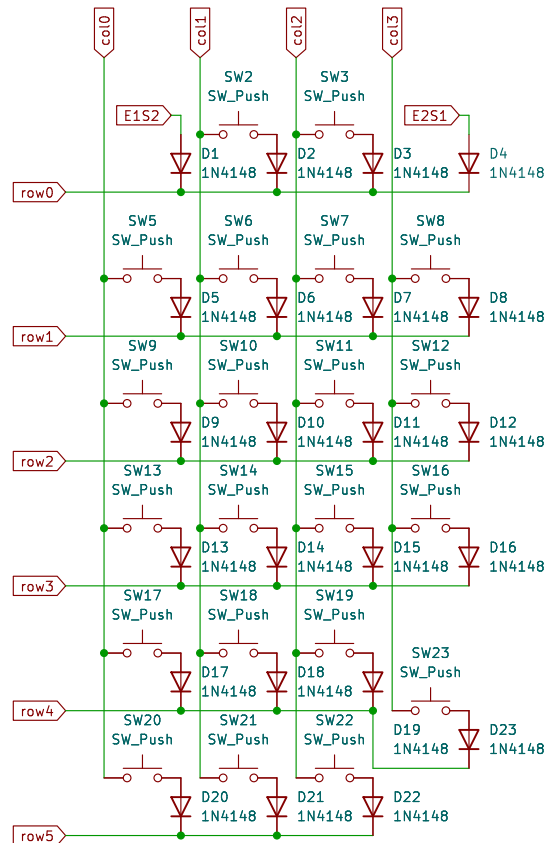

ONLY USE THE BATTERY CONNECTOR FOR CONTROLLER
ALLOWING POWER INPUT VIA THE RAW PIN AND
THAT PROVIDES A ONBOARD CHARGING CIRCUIT
SUCH AS THE nice!nano.

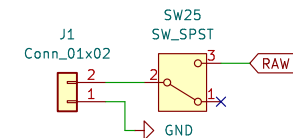

Battery Connector

Id: 1/1