


TO DEFOG THE WINDSHIELD

- Press the "DEFOG" push button. Automatically the fan will operate and air will be directed on the windshield from the outlets at the windshield

CAUTION: Part of the mechanism of the automatic temperature control system is located back of the instrument panel and is visible through a hole in the panel. Under no circumstances are objects to be thrust into this opening or the opening covered.

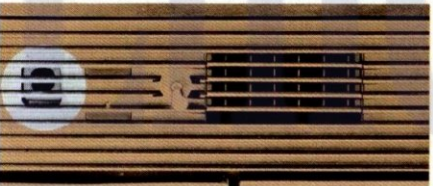

TIPS FOR BETTER AIR CONDITIONING

If the car has been parked with the windows closed during hot weather (especially under a direct sun), the air conditioner will do a much faster job of cooling if you will drive for two or three minutes with all windows open. This will force most of the warm air out of the car. Then, close the windows and operate the air conditioner in the regular manner.

NOTE: An air conditioner, as part of its normal operation, removes a considerable amount of moisture (water) from the air as it passes through the cooling unit. A drain hose leads from the air conditioner to a point under the car. Oftentimes after the car stops, a pool of water may collect on the ground or pavement below the drain.

CONVERTIBLE TOP-OPTIONS-ACCESSORIES
SECTION SIX TABLE OF CONTENTS

	Page No.		Page No.
CONVERTIBLE TOP.....	34	POWER ANTENNA.....	37
TO LOWER THE TOP.....	34	STEREO-SONIC TAPE PLAYER SYSTEMS.....	37
TO RAISE THE TOP.....	34	SPEED CONTROL.....	39
CONVERTIBLE TOP OUTSIDE DECKLID		SPEED ACTUATED POWER DOOR LOCKS.....	40
RELEASE SWITCH.....	34	AUTOMATIC HEADLAMP DIMMER.....	41
RADIO (AM).....	35	POWER VENT WINDOWS.....	43
RADIO (AM-FM).....	35	TILT STEERING WHEEL.....	43
PUSH BUTTON SETTING FOR AM & FM		REMOTE CONTROL DECKLID RELEASE.....	44
OPERATION.....	36	SIX-WAY POWER SEAT.....	44
TOWN AND COUNTRY SELECTOR		RECLINING SEAT BACK AND HEAD REST.....	45
SWITCHES.....	37	SHOULDER BELTS.....	45
REAR SEAT SPEAKERS.....	37	ADDITIONAL ACCESSORIES.....	46