

# USER MANUAL

## ENHANCED PINBALL



# **CONTENS**

**1.Setting Up**

**2.Powering Up**

**3.Controls**

**4.To play a game**

**5.To disable FX Tables**

**6.To disable the “Coin Button”**

**7.To change the Volume**

**8.To adjust the shaker motor**


**9.Adjusting the feet**

**10. Fixing the 32” screen’s cabinet**

**11. To change the view of Table(FX3)**

**12. Another way to change the volume**

## Setting Up

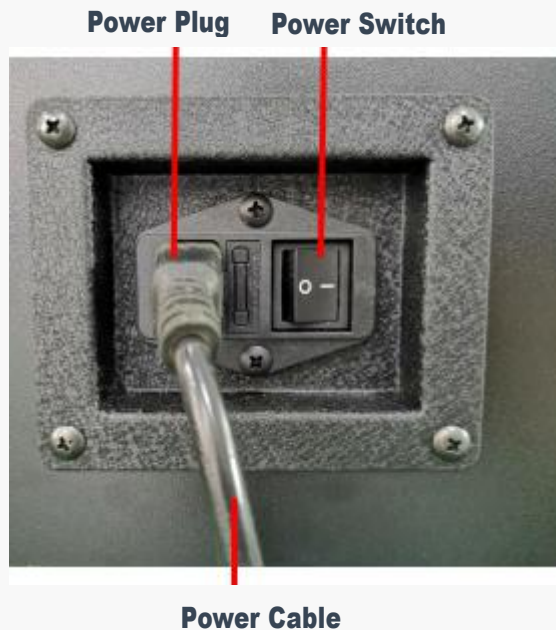

## Powering Up

To switch the unit on, plug the power cable into a wall socket, then the connecting lead into the Power Plug on the side of the machine. Power the machine on by flipping the power switch to on. The machine will power on, and load up the games menu.

## The bottom of cabinet's switches instruction:



The left button is the computer's button. Press this button to power on the computer or off. The right button is the whole machine's power button. More convenient to power on the machine or off. Warm Tip: Unplug the plug, when you don't use the machine, for the environment protection.

## Controls



1. Left MagnaSave(game playing) Nudge Left(FX); PageLeft (game exploring)
2. Left Flipper(game playing); Left (game exploring)
- 3 . Right Flipper(game playing); Right (game exploring)
4. Right MagnaSave/Fire(game playing) Nudge Right(FX); PageRight (game exploring)
5. Select Game List/Game Menu(game exploring),Start game (game playing)



6. Plunger



7. Coin button to insert coin, for free play



8. Exit



Launch ball



**Note: In FX3 Games, press Start button to choose to start a new game or continue playing game.**



## To play a game

**Note: FX2&FX3 Table games are free play games. Can be disabled.**

When you would like to start a new game, you can press the “1”, “2” button to choose the game. Then press the “Start” button to enter the game, press the “Coin” button to get credit or insert coins to get credits. When you get credits, you can press the “Start” or “4” button to start game. Finally, pull the plunger or press “Launch” button to launch and press the “2”, “3” button to play games.

**Note:**

- 1.Free Play Mode: To play a game, you must enter the game first, then press the “Coin” Button for free play.
- 2.Coin Operated Mode: To play a game, you must enter the game first, then insert coins to play game.
- 3.You can add your favorite games into the Favorite Game List. You can also remove games from Favorite Game List.

### To disable FX Tables:


1. Power off the machine.
2. Open the back door and pull out the usb stick.
3. Prepare usb mouse and plug in the computer.
4. Power on the machine.
5. Double left click "DISABLE FX" When Windows desktop comes out.
6. Use mouse to shutdown the computer.
7. Take off the usb mouse and plug in the usb stick.
8. Power on the computer.



### To disable "Coin Button":

#### **Coin Button can work (Free play Mode):**

1. Power off the machine and open the coin door.
2. Pull out the Coin Button's microswitch.
3. To make the black/purple wire connect the microswitch's 1 terminal, make the black/purple wire connect the microswitch's 2 terminal. As picture show for you:
4. Press back the microswitch into the Coin button.

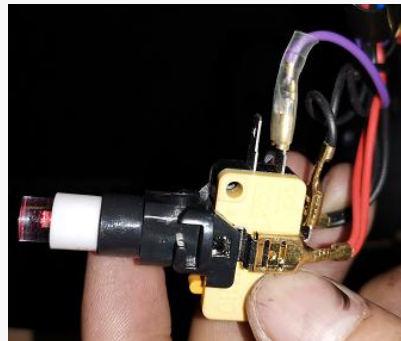

#### **Coin Button can't work (Coin Operated Mode):**

- 1&2&4 Steps are same.
3. To make the black/purple wire connect the microswitch's 2 terminal, make the black/purple wire connect the microswitch's 3 terminal.


### To change the Volume:

1. Open the coin door.
2. The amplifier controls can be just inside of the machine as seen above. The large central dial changes the volume, and the smaller dials will alter the bass and treble respectively. You can adjust the amplifier as you like.
3. When done, you can simply close the coin door and lock up again.



### To adjust the shaker motor:

1. Open the coin door, the shaker motor's switch is on the back of the coin acceptor.
2. You can use the switch to put it have a stronger vibration or not.
3. When done, you can simply close the coin door and lock up again.

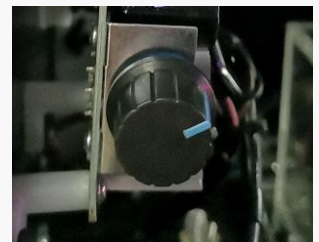

### Adjusting the Feet:

The virtual pinball's feet can each be individually adusted.

To adjust the feet, simply twist the feet in either direction to move up or down. If needed, you can use a 22 mm spanner to turn the nut to the desired level.



### Fixing the 32" screen's cabinet:




1. Lift up the cabinet.
  2. Open the cabinet's back door.
  3. Tighten the screws. As the picture show.
- Note: The screws are in a bag for you.



### To change view of Table (FX3)

1. There are two buttons back to the coin door:
2. The blue button is to change View Of Table (FX3); The red button is for spare.

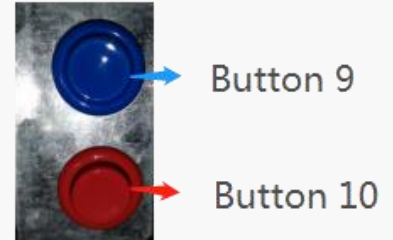

### Another way to change the volume

For this game machine, in addition to adjust the amplifier, there is an another way to change volume.

**Note: Do not do the following without special requirements:**

**All the actions are to be held down "Button 10" without release.**

Game Volume is divided into whole game volume and ROM volume.

#### **How to change the whole game volume:**

1. To reduce volume: First, press the "Button 10", at the same time, press "Left MagnaSave Button".
2. To increase volume: First, press the "Button 10", at the same time, press "Right MagnaSave Button".



#### **How to change the ROM volume:**

1. All the actions are to be held down "Button 10" without release.
2. Press "Right Flipper Button" to come into the volume adjusting's interface.
3. Press "Right/Left Flipper Button" to increase or reduce ROM volume.

**Note: In some games, when you change the ROM volume, the DMD screen will have tip: To open the coin door.**

**When you see this tip, please press "Button 9" (open coin door). Then repeat 2 and 3 steps.**

**When you finish to change the ROM volume. Please press "Button 9" (close coin door).**

4. Press "Coin Button" continuously and quickly for tow times to save ROM volume.
5. Press "Exit Button" to exit game.





# **ENHANCED——** **——PINBALL**