

## 4701 - Elegant Arcade



# Control Panel

## Quick Starting

To start playing a game. First find the category by pressing the *Change Categories button* shown below until you come to the category that you want.

Then use the joystick to navigate through the game selection screen. Push down on the joystick to move to the next game on list. Also you can push to the right to jump to the next page of games. Hold the joystick to the right to cycle through the pages quickly. Once you have found the game you would like to play, press

the *Enter Game button* shown below. After the game loads, press the *Coin Button* like shown below to add credits. Once you have credits in the machine then Push either Player 1 Start or Player 2 Start to begin the game.

To exit out at any time, press and hold the player one start button for 5 seconds and it will bring you back to the game selection screen.






## Game Selection

Game Category is displayed at top left of screen in **YELLOW**

Game Category - ----->

Game List ----->

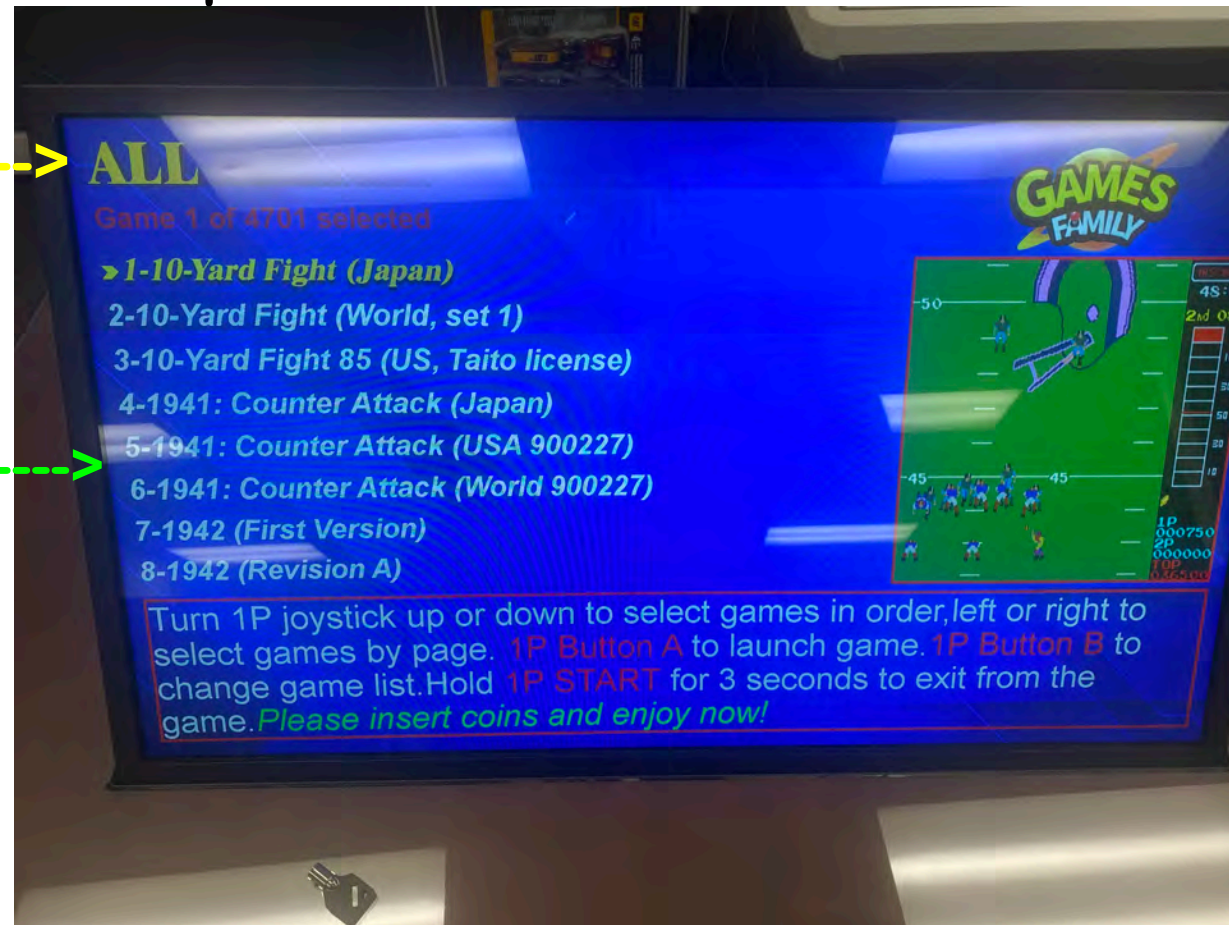

## Player 1 Buttons

(A) (B) (C)  
(D) (E) (F)

While on the game selection screen

you can push Player1\_B button to cycle through the game categories one at a time then you can push down on joystick to cycle down through game list one at a time, or press to the right and cycle through game list TEN at a time. You can also hold the joystick to the right to go through the game list superfast.

Change the orientation of the screen by hitting Player 1\_F button.

Once you find a game that you would like to play, push the Player1\_A button to load that game.

Once the game is loaded, push the *coin* button to add credits after adding credits, push Player 1 or Player 2 start.

## Exiting the Game

While playing the game, to exit you simply hold down the Player 1 start button and after a few seconds it will take you back to the game selection screen.

## Playing Doubles

Some games (donkey kong, pacman, galaga) require players to use the same controls. The original design of these games was based on taking turns using the same controls. As one player would play until his turn ended and then the other player would step up and take his turn on the same controls.

But if you want to play turn based two player games with seperate controls then you would have to start it from the ends where both players are facing each other (cocktail mode). To play two players at the same time (i.e. Street fighter, Mortal Kombat, any sports game) then you would play it in standup mode on the side that has both controls .





Volume Control

*Figure C.*

Some games may be louder than others and the volume can be adjusted to preference. To adjust the volume you have to open up the machine and locate the amplifier that has 4 knobs on it and looks similar to Figure C. Once you locate that amplifier you simply just turn the large knob counter clockwise to lower and clockwise to raise. Please note that your machine may have a different location for the sound amplifier.



## Connecting the Coin Assimulator

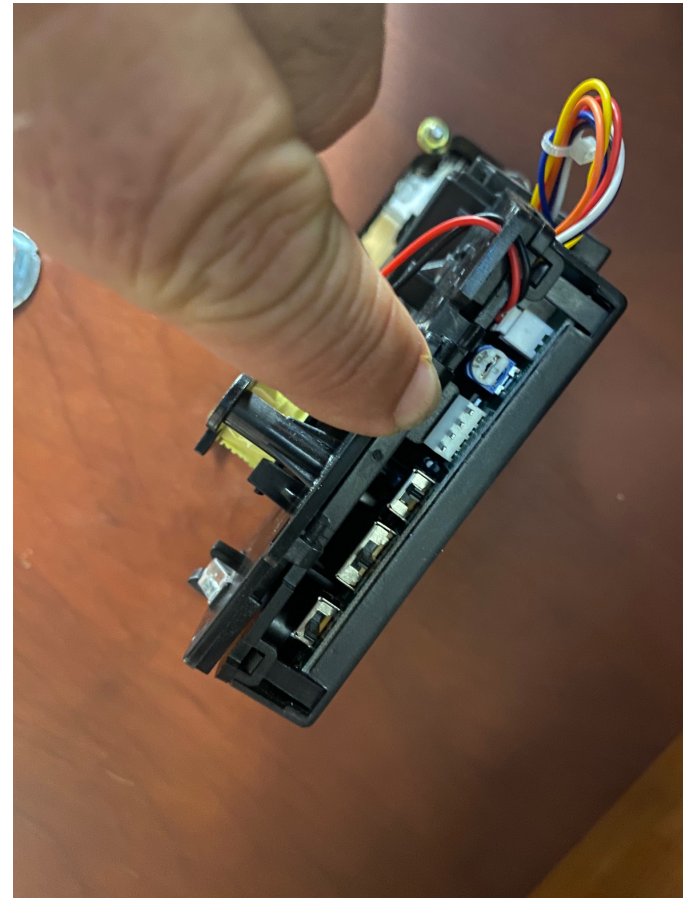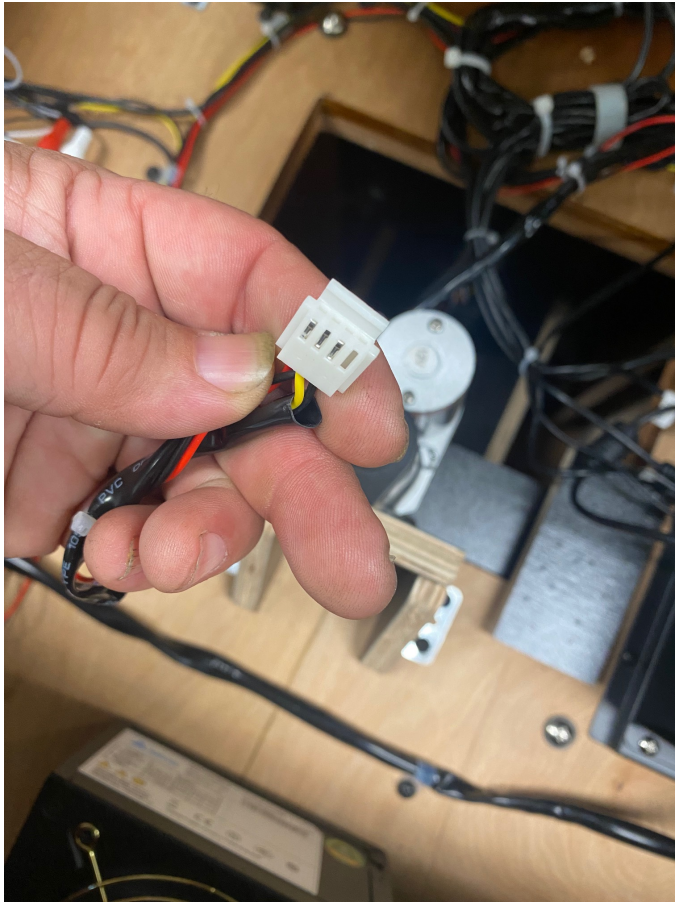

**To have your machine accept quarters you must first connect the coin Assimulator to the motherboard by connecting the cable shown in the first picture.**

**This cable goes through the hole below and connects to the assimulator on the plug shown in the picture on the right.**

**Once that is connected then continue on to the next page to finish setting up the assimulator by inserting a quarter into the caddy.**

## Setting up machine to take quarters



Coin Assimulator



Figure D

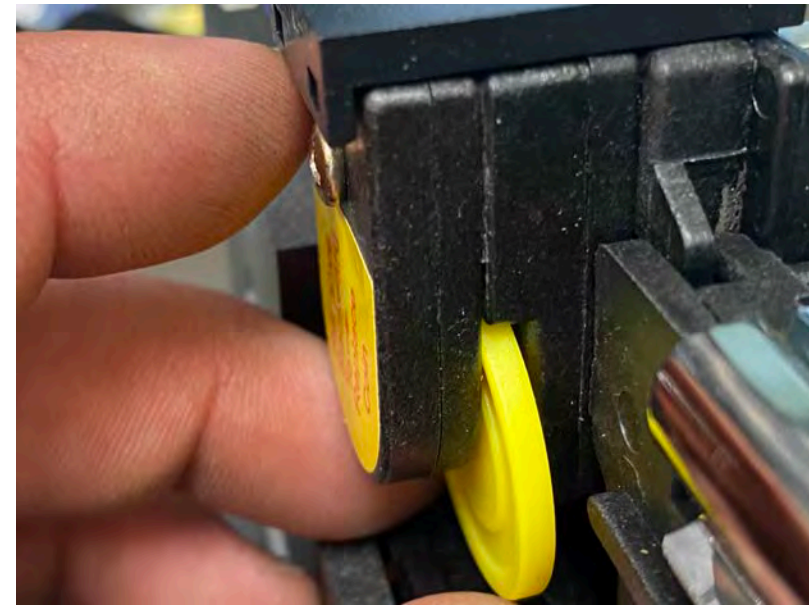


Figure E

- Step 1.** Locate the coin assimulator in front of the machine and open the coin door.
- Step 2.** Put in a sample quarter into the caddy tray as shown in figures D and E above.
- Step 3.** Find the green QC sticker and pull up on it. It may be easier to lift up on it with the spring disconnected.
- Step 4.** Once you have it up, then you want to put your sample quarter in the cut as shown in figure E (the yellow disc is a dummy coin that you need to replace with a real one).
- Step 5.** After you put your quarter in the caddy, then lower it back down.

Fine tuning the coin caddy will take a number of attempts to ensure accurate alignment when it is setups correctly, then the quarter should fall all the way through. If it gets caught then the sample quarter is not in correctly and you must hit the coin return lever to get it out and reinsert the sample quarter again. NOTE: the machine must be on for this to work. It may take a couple of tries but it will work just keep trying!




# Tilting the Screen

To tilt the screen of your machine, push forward on the tilt handle (black one in picture) and your screen will lift up slowly to accomodate you on the standup side.

To put the screen back down, gently push down the screen until it sits flush with the rest of the table.



# Favorites List

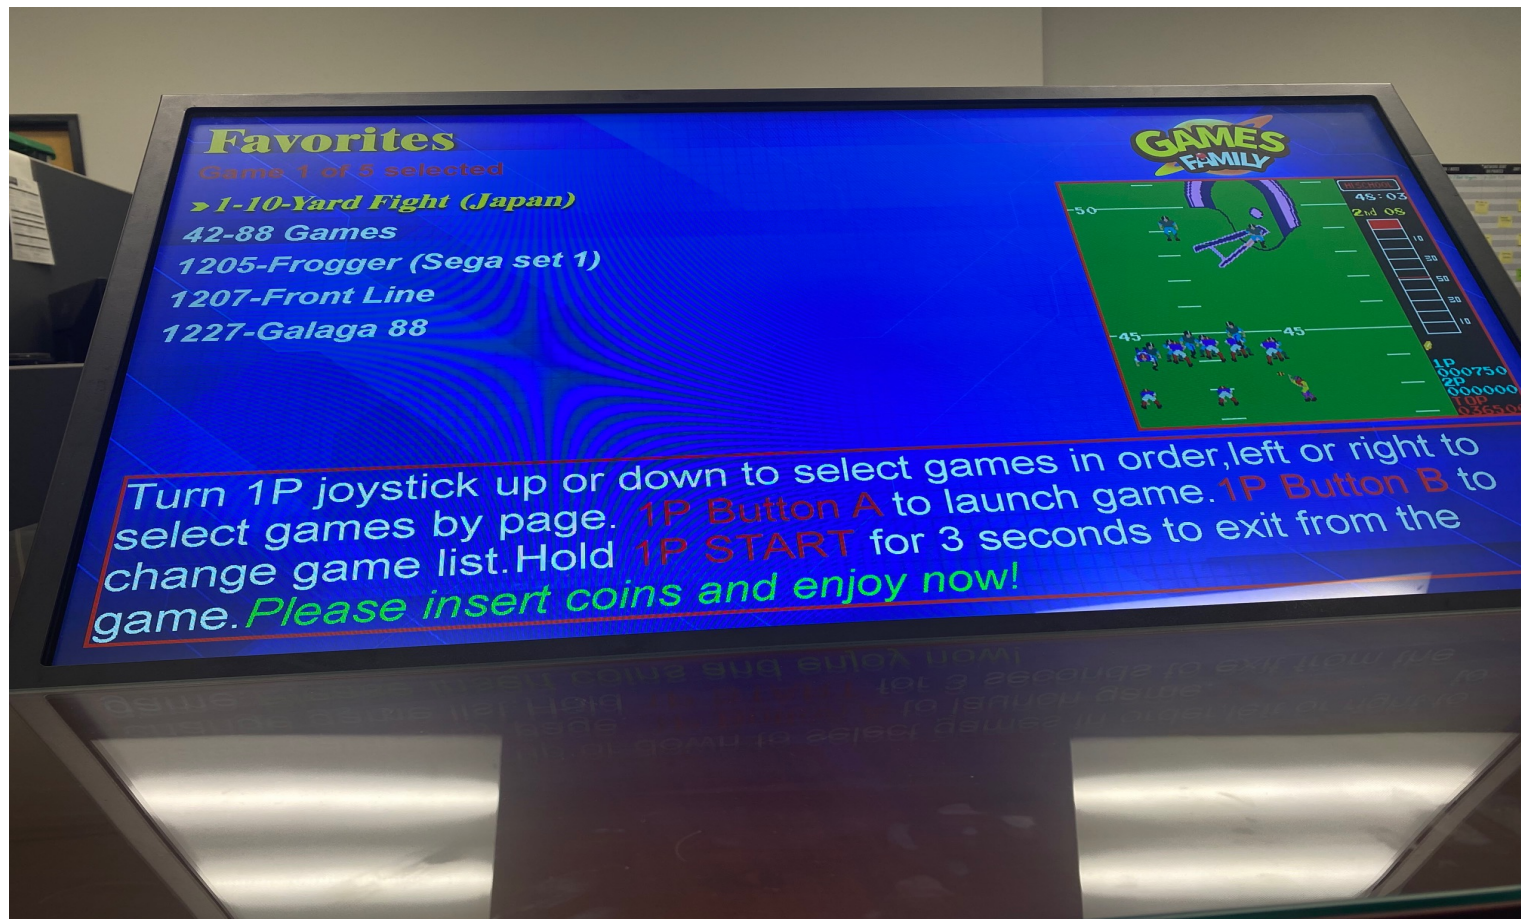

To setup your favorite game list it is very simple. You must be on the "ALL" category and you simply just highlight the game that you want. Then press the Player 1\_C button. Your game is now in your "Favorites" category.

To get to it you simply press the category button (Player1\_B) until the category favorites comes up and the games you chose should be there on the list.

To remove a game from your favorites you simply bring up the favorites category and highlight the game that you want to remove and hit the Player 1\_C button and it is removed.