


How to	Switch sensor
Description	Step by step description of how to perform a specific task in ROWS.
Comments	The <i>italic</i> phrases correspond to the red markings in the screenshots. Please be aware that the screenshots may deviate slightly from the application
version	2015-02


Overview of steps

1. Select workflow *Quality Control*; Go to the *Modifiers* display; Select the *parameter*;
2. Select the *location* in question; changed the preferred sensor; give a *description*; press *Apply*
3. The modifier becomes visible and can be (de)activated, or deleted; Re-run the workflow

- ad 1. Select workflow *Quality Control*; Go to the *Modifiers* display
Select the *parameter* in question from row of buttons in the middle of the Modifiers display;

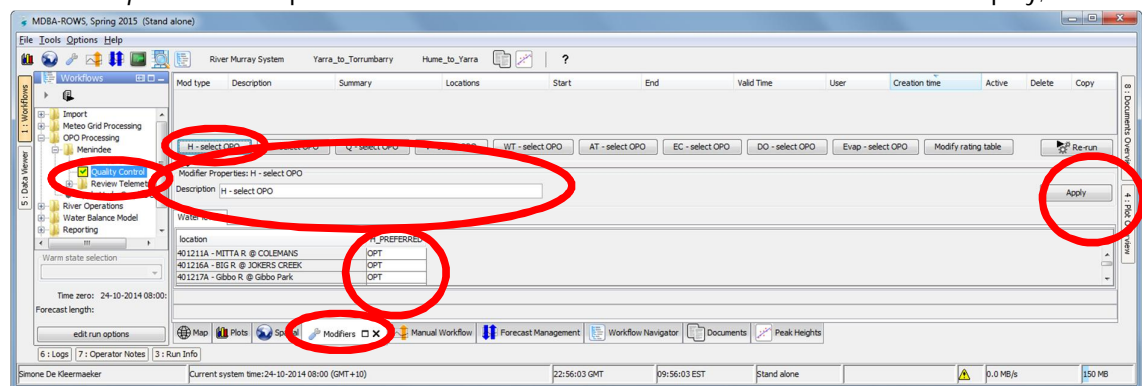

- ad 2. Go to the *location* in question; changed the preferred sensor; fill in a meaningful *description*; press *Apply*.

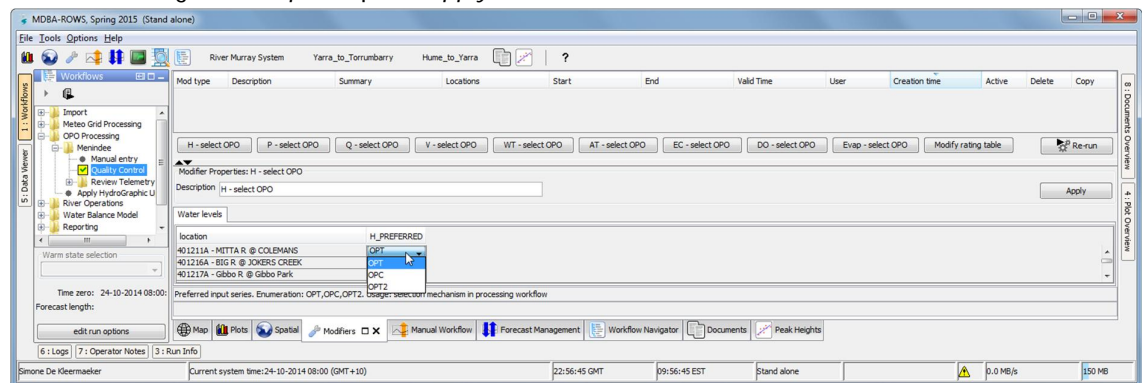

- ad 3. The modifier becomes *visible* and can be (de)activated, or deleted;
The modifier is marked in *blue*; re run the *workflow* to use the mod (effective per tomorrow)

