





Fryer Menu Editor Software Installation and Instruction Procedures:

1. To install the Fryer Menu Editor Software double click on Software for Programmable Computers Folder to display contents of folder.

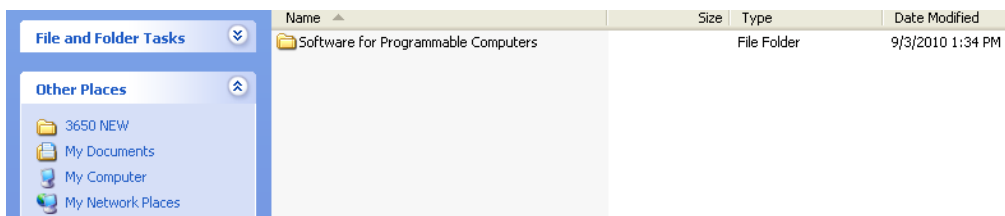


2. Double click setup.exe application file. The Welcome to Fryer Menu Editor Setup displays. Click OK

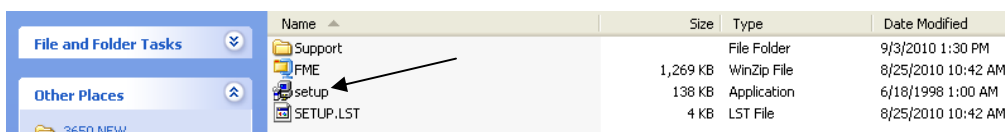


- a. The Welcome to the FME - Fryer Menu Editor Setup will display. Click OK.
- b. Begin the installation by clicking the button to install FME – Fryer Menu Editor. PLEASE NOTE: At this time, you can choose a different directory to save the FME program in. Enter or select a different destination directory and then click the square button to install the FME program.
- c. Choose a Program Group – This is where your menu editor program items will be located. After installation is completed when you press START ► All PROGRAMS, the named program group will appear. We recommend leaving it a FME (Fryer Menu Editor) Click Continue.
- d. Menu Editor Setup was Completed Successfully displays. Click OK
- e. Close Software install Program Folder.

Begin programming the Fryer Menu Editor:


1. To begin using the Fryer Menu Editor press START ► All PROGRAMS ► FME ► FMI and the Menu Editor will display as shown below:

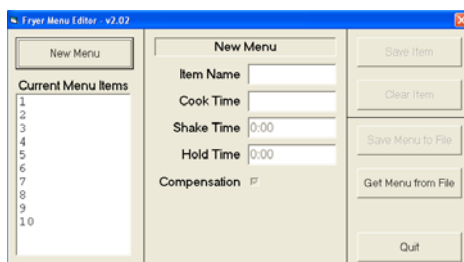


2. To begin highlight the Current Menu Item 1.

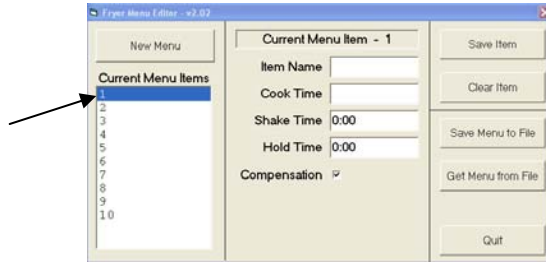


3. Enter the name of the menu item name (maximum of 10 characters). Enter the cook time in 0:00 format. If desired add Shake time and/or Hold time. Compensation Time (load capacity time) is the standard default. To choose Actual Time click to remove the check mark.

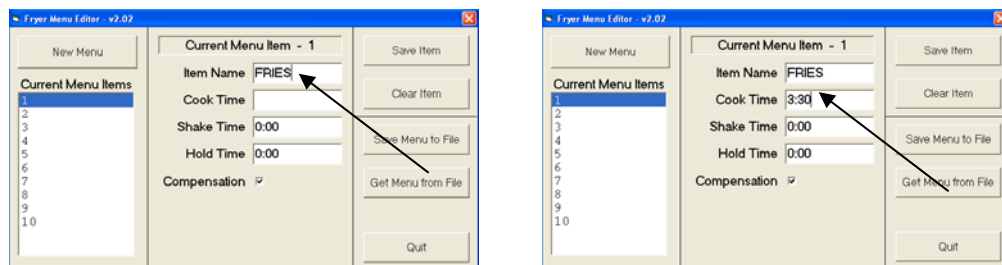


4. Click Save Item and the menu item displays under Current Menu Items.

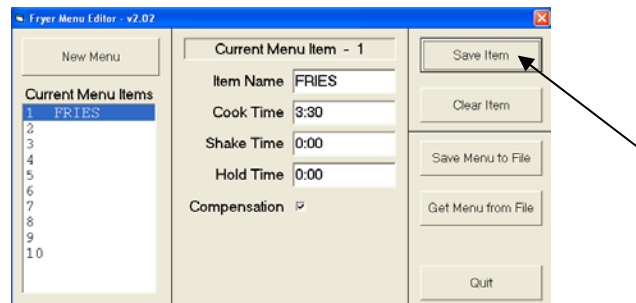


5. Repeat steps 3 and 4 for the remaining menu items until complete.

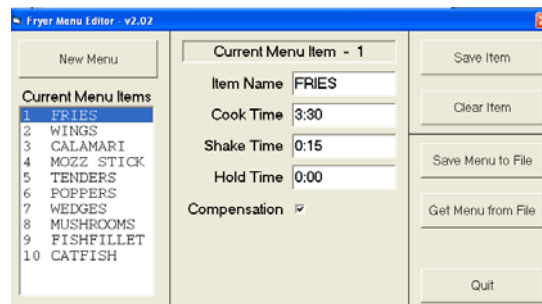

6. To save the current Menu Items press the Save Menu to File button.

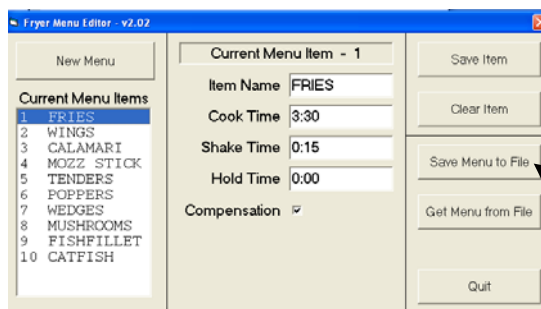


7. Select the default directory to save the Fryer Menu Items. PLEASE NOTE: At this time, you can choose a different directory to save the Fryer Menu Item File in. Then name the Fryer Menu using 8 characters with NO spaces. Click OK.

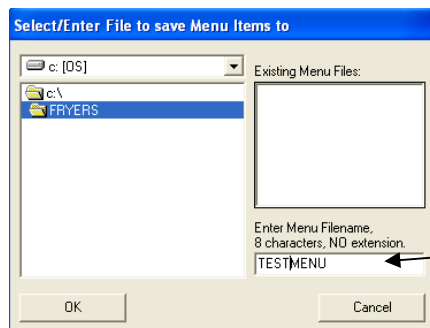


8. Close Fryer Menu Editor.


To retrieve the existing Fryer Menu Item File to make additional revisions press **START ► All ► PROGRAMS ► FME**. Press **Get Menu from File**.

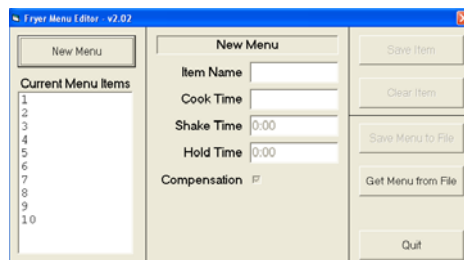


1. The next display mentions that the current item information will be deleted, NOT THE SAVED FILE. It just clears the fields to enter the file you're trying to retrieve. Click YES

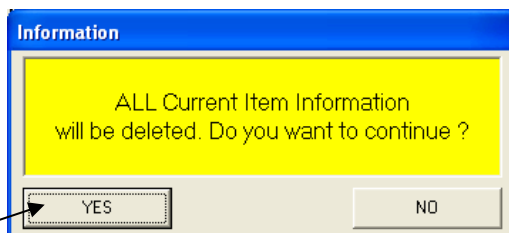

2. Select File to read Menu Items from displays. Highlight the desired file (may be more than one listed). Click OK.

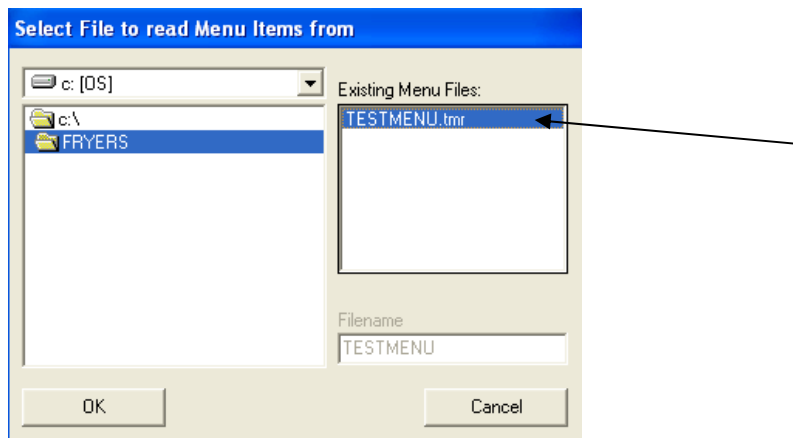

3. The retrieved Fryer Menu file displays. Make revisions to this file or create a new Fryer Menu with a new name.

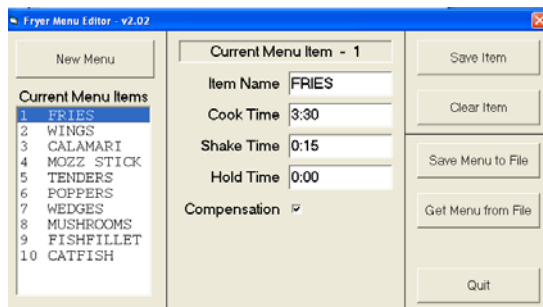





Procedure to upload the new Fryer Menu to your Fryer's Computer Programmable Controls

1. Copy the Saved Fryer Menu file to a USB Memory Drive.
2. To load the new Fryer Menu Items to the Fryer's programmable computer control place the USB memory drive into the USB port behind the door and next to the power button. Follow the steps below.

OFFLINE PROGRAMMING WITH SOFTWARE MENU PROGRAM:

(Desktop or Laptop computer required. Download the Menu Programming Software from www.vulcanequipment.com).

To load a new product menu using the software menu program offline with a desktop or laptop computer:

1. Press  USER SETTING displays.
2. Select 3. MENU ITEMS.
3. Insert USB memory drive with the new product menu files into USB Port.
4. Press  button to display available product menu files by saved name.
5. Press **1** - **0** to select the new product menu name.
6. Press arrows   to confirm selection within 23 seconds while the menu selected is flashing.
7. Remove USB memory drive.